

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [AIDITIYMI](#) /

› [AIDITIYMI NC306 Replacement Remote Control User Manual for Magnavox Soundbar](#)

## AIDITIYMI NC306

# AIDITIYMI NC306 Replacement Remote Control User Manual

For Magnavox 2.1ch Soundbar with Wired Subwoofer (Models MSB3610, MSB3610/F7)

## 1. INTRODUCTION

---

This manual provides instructions for the AIDITIYMI NC306 replacement infrared (IR) remote control. This remote is designed to operate specific Magnavox 2.1ch Soundbar models, including MSB3610 and MSB3610/F7. It functions as a direct replacement and requires no programming.



Image 1.1: Front view of the AIDITIYMI NC306 Replacement Remote Control.

## 2. SETUP

### 2.1 Battery Installation

The remote control requires two (2) AAA alkaline batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

**Important: Do not use rechargeable batteries, as they may damage the remote control.**



Image 2.1: Rear view of the remote control with the battery compartment open, showing proper AAA battery placement.

### 3. OPERATING INSTRUCTIONS

---

This remote control is an infrared (IR) device and operates directly with your Magnavox soundbar without any additional programming.

- **Direct Line of Sight:** Point the remote control directly at the IR sensor on your Magnavox soundbar.
- **Operating Distance:** Ensure there is no obstruction between the remote control and the soundbar's sensor. The effective operating distance is typically up to 6 meters (approximately 20 feet).
- **No Programming Required:** Once batteries are installed, the remote is ready for immediate use with compatible Magnavox soundbar models.

## 4. COMPATIBILITY

---

This AIDITIYMI NC306 replacement remote control is compatible with the following Magnavox 2.1ch Soundbar models with Wired Subwoofer:

- **MSB3610**
- **MSB3610/F7**

The remote control itself carries model designations such as NC306 Sub, NC307UH, NC307, NC306UH, and NC302, indicating its design for these specific soundbar systems.

## 5. SPECIFICATIONS

---

Feature	Description
Model Name	NC306
Connectivity Technology	Infrared (IR)
Power Supply	2 x AAA Alkaline Batteries (not included)
Maximum Range	6 Meters (approx. 20 feet)
Color	Black
Item Weight	1.1 Ounces (approx. 31 grams)
Controller Type	Button Control

## 6. TROUBLESHOOTING

---

- **Remote not responding:**
  - Ensure new AAA alkaline batteries are correctly installed with proper polarity.
  - Check for any obstructions between the remote control and the soundbar's IR sensor.
  - Verify that you are within the effective operating range (up to 6 meters).
  - Confirm the soundbar is powered on.
- **Intermittent response:**
  - Replace old batteries with new AAA alkaline batteries.
  - Ensure a clear line of sight to the soundbar.
- **Remote does not control other devices:**
  - This remote is specifically designed for the listed Magnavox soundbar models and is not a universal remote. It will not control other brands or models.

## 7. MAINTENANCE

---

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

- **Battery Care:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

## 8. SUPPORT

---

If you encounter issues not covered in this manual or require further assistance, please contact AIDITIYMI customer support. When contacting support, please provide your product model (NC306) and a detailed description of the issue.

For general inquiries or to confirm compatibility, you may also refer to the product listing where you purchased the item or contact the seller directly.