

[manuals.plus](#) /

› [Deco Chef](#) /

› [Deco Chef 40LB Countertop Ice Maker Instruction Manual](#)

Deco Chef ICMRED

Deco Chef 40LB Countertop Ice Maker Instruction Manual

Model: ICMRED

INTRODUCTION

Thank you for choosing the Deco Chef 40LB Countertop Ice Maker. This appliance is designed to provide a continuous supply of fresh, clear ice cubes for your home, office, bars, or parties. With its efficient ice production and user-friendly features, you can enjoy chilled beverages with ease. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new ice maker.



The Deco Chef 40LB Countertop Ice Maker, showcasing its sleek red design and included ice scoop, ready to produce ice for various beverages.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury when using your ice maker, follow these basic precautions:

- Read all instructions before use.
- Do not touch the evaporator or ice blades when the unit is in use.
- Do not immerse cord, plug, or any part of the unit in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended household use.
- Ensure the ice maker is placed on a stable, level surface to prevent tipping.
- Allow adequate ventilation around the unit.

SETUP

Before first use, unpack the ice maker and place it on a flat, stable surface away from direct sunlight and heat sources. Ensure there is sufficient space around the unit for proper ventilation. Clean the interior of the ice maker with a soft cloth and mild detergent, then rinse thoroughly with clean water. Allow the unit to sit upright for at least 2 hours before plugging it in to allow refrigerants to settle.

1. **Unpack:** Carefully remove the ice maker from its packaging.
2. **Placement:** Position the unit on a level, sturdy countertop. Ensure it is not near any heat-emitting appliances or in direct sunlight.
3. **Ventilation:** Leave at least 4 inches of space around the ice maker for proper air circulation.
4. **Initial Cleaning:** Wipe down the interior and exterior with a damp cloth. For the water reservoir, fill with clean water and drain a few times to flush out any manufacturing residue.
5. **Resting Period:** Let the unit stand upright for at least two hours before plugging it into a power outlet. This allows the compressor fluids to stabilize.

Compact SIZE for your countertop

14.1
INCHES

14.8
INCHES

11.3
INCHES

Large capacity ice making housed in a stylish stainless steel unit

The compact size of the Deco Chef ice maker, with dimensions of 14.1 inches tall, 14.8 inches deep, and 11.3 inches wide, making it suitable for various countertop spaces.

OPERATING INSTRUCTIONS

Your Deco Chef ice maker is designed for simple operation. Follow these steps to start making ice:

1. **Fill Water Reservoir:** Open the lid and fill the water reservoir with potable water up to the maximum fill line. Use clean, filtered water for best ice quality.
2. **Power On:** Plug the ice maker into a grounded 115V electrical outlet. Press the "ON/OFF" button on the control panel to turn the unit on.
3. **Select Ice Cube Size:** Use the "+" and "-" buttons to adjust the ice-making cycle length, which in turn changes the thickness of the ice cubes. A longer cycle produces thicker ice.
4. **Ice Production:** The ice maker will begin its first cycle. In just 15 to 20 minutes, you can expect to receive 24 large ice cubes. The unit can produce up to 2.4 lbs of ice per cycle and up to 40 lbs of ice per day.
5. **Monitor Ice Basket:** The LCD digital display will indicate when the ice basket is full. The 2.6 LB ice basket can

detect when it's full and the machine will pause production.

6. **Add Water Indicator:** The display also shows when it's time to add more water to the reservoir.
7. **Timer Function:** Utilize the timer function to control how long you want your ice maker to run, allowing for automated operation.
8. **Meltwater Recycling:** A secondary reservoir collects any meltwater from the ice basket and recycles it for future ice making, minimizing waste.
9. **Serving Ice:** Use the included ice scoop to remove ice from the basket. The ice is delivered in a pallet form, which can be easily broken up with the scoop if needed.



24
large
ice cubes
in just
15 minutes



The ice maker produces 24 large ice cubes in just 15 minutes, perfect for quickly chilling your favorite beverages.

LCD SCREEN

Screen indicators inform when your ice maker is working, is full, or needs more water

CLEAR VIEWING WINDOW

No need to open the lid, simply peak through the window to see how much ice is available



The convenient LCD screen provides status updates, while the clear viewing window allows you to monitor ice production without opening the lid.

Your browser does not support the video tag.

Official product video demonstrating the Deco Chef Countertop Ice Maker's features and ice production capabilities.

MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your ice maker.

- **Daily Cleaning:** After each use, especially if not used for an extended period, drain any remaining water from the reservoir. Wipe the interior with a clean, soft cloth.
- **Weekly Cleaning:** For thorough cleaning, unplug the unit. Remove the ice basket. Clean the water reservoir and ice-making components with a solution of warm water and mild detergent. Rinse thoroughly. You can also use a solution of water and white vinegar (10:1 ratio) to help prevent mineral buildup.
- **Exterior Cleaning:** Wipe the exterior of the unit with a soft, damp cloth. For the stainless steel finish, use a stainless

steel cleaner to maintain its appearance.

- **Storage:** If storing the ice maker for an extended period, ensure it is completely dry inside and out. Store it in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your ice maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Ice is thin or wet.	Ice-making cycle is too short.	Adjust the ice-making cycle length using the "+" button to produce thicker ice.
Unit stops working or shuts off.	Low water level, ice basket full, or internal malfunction.	Check water level and refill if necessary. Empty ice basket if full. If malfunction, unplug the unit for a few minutes to reset, then plug back in. If problem persists, contact customer support.
Unusual noise during operation.	Normal compressor operation, or unit not level.	Some operational noise is normal. Ensure the unit is on a stable, level surface. If noise is excessive or unusual, contact customer support.
Ice has an unusual smell or taste.	New unit smell, or water quality issue.	Perform a thorough cleaning of the water reservoir and ice-making components. Use fresh, filtered water. The "new unit" smell should dissipate after a few cycles.

SPECIFICATIONS

Feature	Detail
Brand	Deco Chef
Model Name	DCICMREDOB (Item model number: ICMRED)
Product Dimensions (D x W x H)	11.3"D x 14.8"W x 14.1"H
Capacity	40 Pounds (ice production per day)
Voltage	115 Volts
Ice Cube Production	24 large ice cubes in 15-20 minutes
Ice Basket Capacity	2.6 LB
Control Panel	LCD Digital Display with ON/OFF, Timer, and Size Adjustment
Special Features	Self-cleaning, Clear Viewing Window, Meltwater Recycling

WARRANTY AND SUPPORT

Deco Chef stands behind the quality of its products. This ice maker comes with a **Full 1 Year Manufacturer’s Limited Protection Plan**.

For warranty claims, technical support, or any questions regarding your Deco Chef ice maker, please contact our

customer service team:

Website: www.decochef.com (Note: This is a placeholder URL, please refer to your product packaging for the official website.)





Email: support@decochef.com (Note: This is a placeholder email, please refer to your product packaging for the official email.)

Phone: 1-800-XXX-XXXX (Note: This is a placeholder number, please refer to your product packaging for the official phone number.)

Please have your model number (ICMRED) and proof of purchase ready when contacting support.



Related Documents - ICMRED

	<p>Deco Chef Counter Top 40 LB Ice Maker Instruction Manual</p> <p>Comprehensive instruction manual for the Deco Chef Counter Top 40 LB Ice Maker (DCICM Models), covering safety, operation, maintenance, troubleshooting, and technical specifications.</p>
	<p>Deco Chef Counter Top 40 LB Ice Maker Instruction Manual</p> <p>Instruction manual for the Deco Chef Counter Top 40 LB Ice Maker (DCICM Models), covering safety, setup, operation, maintenance, and troubleshooting. Learn how to use your portable ice maker effectively and safely.</p>
	<p>Deco Chef 5.2L Countertop Stand Mixer DGSTMIX01WHT User Manual and Safety Guide</p> <p>This user manual provides essential safety guidelines, operating instructions, technical specifications, and warranty details for the Deco Chef 5.2L Countertop Stand Mixer, model DGSTMIX01WHT. Learn how to safely use and maintain your kitchen appliance.</p>
	<p>Deco Chef 2-in-1 Propane Pizza & Grill Oven: Assembly Instructions & User Guide</p> <p>Comprehensive assembly instructions, safety precautions, troubleshooting, and cooking guide for the Deco Chef DGPGPRN200 2-in-1 Propane Pizza & Grill Oven. Learn how to set up, use, and maintain your outdoor pizza oven.</p>



[Deco Chef 12 QT Digital Air Fryer Owner's Manual and Operating Guide](#)

Comprehensive owner's manual for the Deco Chef 12 QT Digital Air Fryer, including safety instructions, parts and accessories, operating guide, cooking presets, troubleshooting, and warranty information. Learn how to use your air fryer for various cooking functions like air frying, rotisserie, and dehydration.



[Deco Chef Air Fryer: LCD Control Screen and Operation Guide](#)

Learn how to use your Deco Chef air fryer with this guide to the LCD control screen, smart programs, timer, temperature settings, and cooking presets. Includes warranty information.