

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [SAMSUNG](#) /

> [SAMSUNG Galaxy P610 Tab S6 Lite User Manual](#)

SAMSUNG SM-P610

SAMSUNG Galaxy Tab S6 Lite (SM-P610) User Manual

Model: SM-P610 | Brand: SAMSUNG

INTRODUCTION

Welcome to the user manual for your new SAMSUNG Galaxy Tab S6 Lite (SM-P610). This tablet is designed for versatility and entertainment, featuring a 10.4-inch display, S Pen support, and a lightweight design. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device.

The Galaxy Tab S6 Lite is ideal for various uses, from educational tasks and note-taking with the included S Pen to enjoying multimedia content with its vivid display and AKG-tuned dual speakers with Dolby Atmos sound. Its slim metal design makes it highly portable, and the long-lasting battery ensures extended usage.

WHAT'S IN THE BOX

Upon unboxing your SAMSUNG Galaxy Tab S6 Lite, please verify that all the following items are included:

- SAMSUNG Galaxy Tab S6 Lite (SM-P610) Tablet (Oxford Gray)
- S Pen
- Power Adapter
- Data Cable (Type C)
- Ejection Pin
- Quick Start Guide
- Hard Case for P610 tablet
- Screen Protector
- 32GB microSD Card



Image: The complete bundle including the tablet, S Pen, protective case, and 32GB microSD card, as packaged.

ALL-ROUND ENHANCED

Protects back, edges and corners of tablet from scratches and bumps



Image: Close-up view of the SAMSUNG Galaxy Tab S6 Lite tablet, alongside the S Pen, a screen protector, and a 32GB microSD card.

INITIAL SETUP

1. Charging the Tablet

Before first use, it is recommended to fully charge your tablet. Connect the provided USB-C data cable to the tablet's USB-C port and the power adapter. Plug the power adapter into a wall outlet. The charging indicator will appear on the screen.

2. Powering On and Initial Configuration

Press and hold the Power button (located on the side of the tablet) until the SAMSUNG logo appears. Follow the on-screen prompts to select your language, connect to a Wi-Fi network, sign in with your Google account, and set up security features.

3. Installing the MicroSD Card

To expand your tablet's storage, insert the included 32GB microSD card. Locate the SIM/microSD card tray on the side of the tablet. Use the provided ejection pin to open the tray. Place the microSD card into the tray with the gold contacts facing down, then gently push the tray back into the slot until it clicks into place.

4. Attaching the S Pen

The S Pen attaches magnetically to the side of the tablet for convenient storage and quick access. Simply align the S Pen with the designated magnetic area on the tablet's side until it snaps into place.

5. Applying the Screen Protector and Case

For enhanced protection, carefully apply the screen protector to the tablet's display, ensuring no dust or air bubbles are trapped underneath. Then, fit the tablet into the provided hard case. The case is designed to protect the back, edges, and corners from scratches and bumps, offering 360-degree full protection.

360° FULL PROTECTION

**Excellent workmanship with premium materials,
provides total front-and-back protection.**

Synthetic PU Exterior

Highly Durable

Highly Shockproof

Hard Back Cover



Image: The tablet enclosed in its protective case, illustrating its resistance to drops, dust, and scratches.



Image: A close-up of the tablet case, highlighting the precision cutouts that allow full access to all ports and buttons without removing the case.

OPERATING YOUR TABLET

1. Basic Navigation

The Galaxy Tab S6 Lite operates on Android 10, offering intuitive touch-based navigation. Swipe up, down, left, or right to navigate through menus, home screens, and applications. Tap to select items, and pinch to zoom in or out on content like photos and web pages.

2. Using the S Pen

The S Pen enhances your tablet experience, allowing for precise input without needing to be charged. Use it for:

- **Note-taking:** Quickly jot down ideas or create detailed notes in Samsung Notes or other compatible apps.
- **Drawing and Sketching:** Express your creativity with various drawing applications.
- **Annotation:** Mark up documents, PDFs, and images with ease.
- **Smart Select:** Capture specific areas of the screen and extract text or images.

PRECISION CUTOUTS

Align well with your tablet's features and allow smooth operation without removing the case

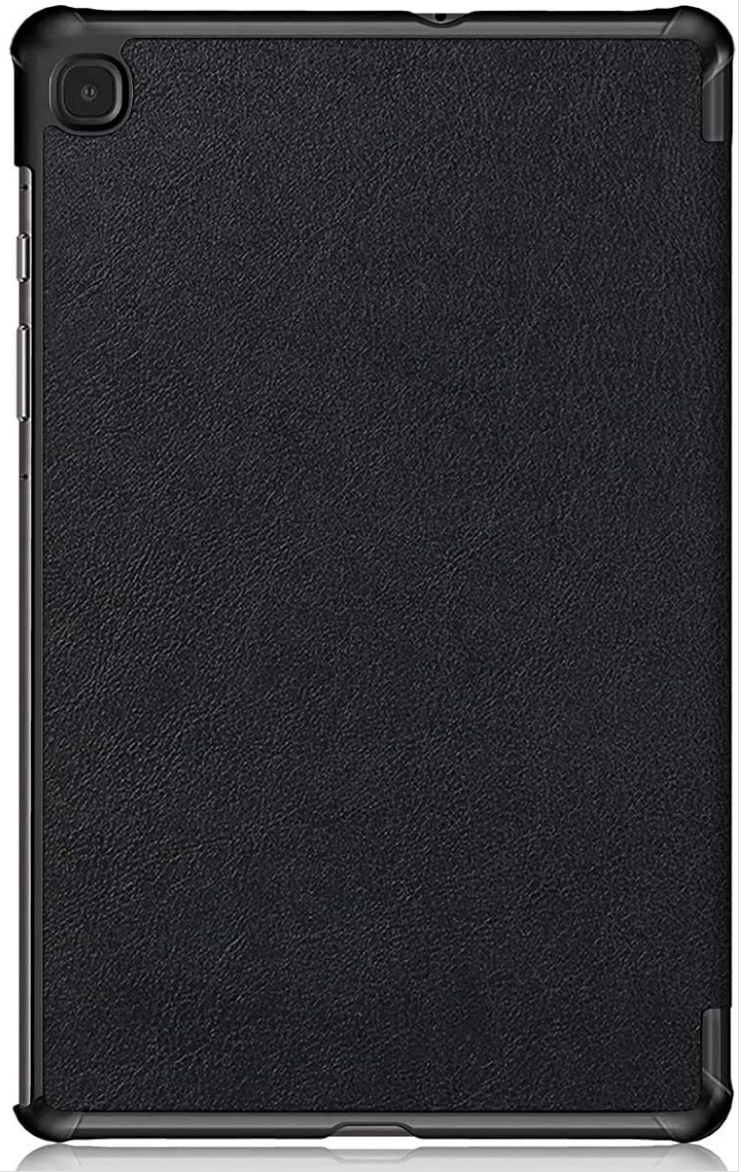


Image: A hand demonstrating the use of the S Pen to draw on the screen of the Galaxy Tab S6 Lite.

3. Camera Functions

The tablet features an 8MP rear camera with autofocus for capturing photos and videos, and a 5MP front-facing camera ideal for video calls and selfies.

- **Rear Camera:** Suitable for general photography and scanning documents.
- **Front Camera:** Optimized for video conferencing and self-portraits.

Connect and capture

Interact with the world through the 8MP rear camera, equipped with autofocus for recording, capturing and sharing. Video chat with friends and family on the 5MP front-facing camera.



Image: The tablet display showing an active video call with several participants, demonstrating the front-facing camera's utility.

4. Audio and Entertainment

Experience immersive audio with dual speakers tuned by AKG and enhanced with Dolby Atmos surround sound. This setup provides a rich audio experience for movies, music, and games.

5. Connectivity

The tablet supports Wi-Fi for internet access and Bluetooth for connecting to wireless accessories like headphones or keyboards. It is not compatible with cellular service.

6. Face Recognition

For convenient and secure unlocking, the tablet features face recognition. The front camera recognizes your face to unlock the device quickly.

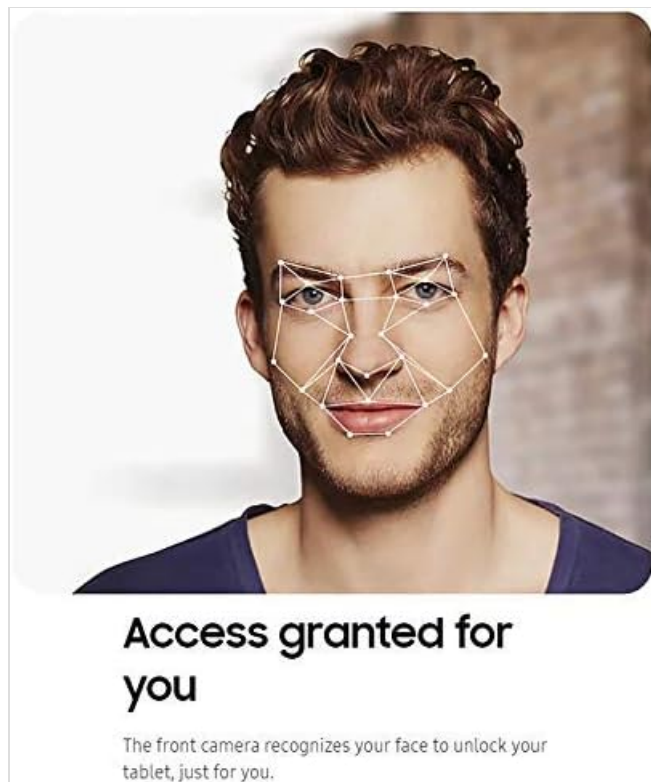


Image: A visual representation of the tablet's face recognition feature, showing how it maps facial features for secure access.

CARE AND MAINTENANCE

1. Cleaning Your Tablet

To clean the screen, use a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water or a screen-specific cleaning solution. Avoid using harsh chemicals or abrasive materials. For the body of the tablet, a dry, soft cloth is sufficient.

2. Battery Care

To maximize battery life, avoid exposing the tablet to extreme temperatures. It is generally recommended to keep the battery charge between 20% and 80% for optimal long-term health, though occasional full charges/discharges are acceptable.

3. Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features, security patches, and performance improvements. You can usually find this option in the tablet's Settings menu under "Software update."

4. Protecting Your Device

Always use the provided hard case and screen protector to guard against physical damage. Avoid placing heavy objects on the tablet or exposing it to liquids.

TROUBLESHOOTING

This section addresses common issues you might encounter with your SAMSUNG Galaxy Tab S6 Lite. For more detailed troubleshooting or issues not listed here, please refer to the official SAMSUNG support website.

Tablet Not Turning On

- Ensure the battery is charged. Connect the tablet to the power adapter and let it charge for at least 30 minutes before attempting to power on again.
- Press and hold the Power button for at least 10 seconds to perform a forced restart.

Wi-Fi Connectivity Issues

- Restart your Wi-Fi router and the tablet.
- Forget the network in your tablet's Wi-Fi settings and reconnect.
- Ensure you are within range of the Wi-Fi signal.

S Pen Not Responding

- Ensure the S Pen is properly attached to the magnetic area on the tablet's side, as this can sometimes reset its connection.
- Restart the tablet.
- Check S Pen settings in the tablet's system settings.

Slow Performance

- Close unused applications running in the background.
- Clear cache data from apps and the system.
- Ensure sufficient free storage space.
- Perform a software update if available.

TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	SM-P610
Display Size	10.4 Inches
Max Screen Resolution	2000 x 1200 (WUXGA+)
Processor	2.3GHz Samsung Exynos (Exynos 9611) Octa Core
RAM	4GB
Internal Storage	64GB
Expandable Memory	Up to 1TB via microSD (32GB card included)
Operating System	Android 10
Front Camera	5MP
Rear Camera	8MP
Wireless Connectivity	Wi-Fi (802.11abg, 802.11bgn), Bluetooth
Audio	Dual speakers with AKG sound, Dolby Atmos
Battery Life (Average)	Up to 13-14 hours (usage dependent)
Charging Port	USB-C

Dimensions (LxWxH)	9.63 x 6.07 x 0.28 inches
Item Weight	2.33 pounds

WARRANTY AND SUPPORT

Please note that this product bundle explicitly states "No Warranty Included!" in its feature description. For any technical assistance, product information, or further support, please visit the official SAMSUNG support website or contact their customer service directly.

For the most up-to-date support resources, please visit: [Samsung Official Support](#)

