## Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- tectake /
- > tectake 401720 Bed Frame with Slatted Base 200 x 180 cm User Manual

#### tectake 401720

# tectake 401720 Bed Frame with Slatted Base - 200 x 180 cm User Manual

Model: 401720

# 1. Introduction

This manual provides essential information for the assembly, operation, and maintenance of your tectake 401720 Bed Frame with Slatted Base. Please read these instructions carefully before assembly and use to ensure safe and correct handling of the product.



Image 1: tectake 401720 Bed Frame with Slatted Base, showing the complete frame with integrated slatted base.

# 2. SAFETY WARNINGS

• Exercise caution when handling components, as some edges may be sharp.

- Do not exceed the maximum weight recommendation of 200 kg on the bed frame.
- Ensure all screws and fasteners are securely tightened during assembly and periodically check for tightness during use.
- Keep small parts away from children during assembly to prevent choking hazards.
- Assemble the bed frame on a soft, clean surface to prevent damage to the product or your flooring.

# 3. PACKAGE CONTENTS

Verify that all components listed below are present before beginning assembly:

- 1 x Metal bed frame with integrated slatted base
- Mounting tools (e.g., Allen key, wrench)
- Illustrated assembly instructions (separate document)

# 4. SETUP AND ASSEMBLY

Assembly of the tectake 401720 Bed Frame requires careful attention to the included illustrated assembly instructions. The general steps are outlined below:

- 1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface.
- 2. Identify Parts: Refer to the parts list in your separate assembly manual to identify each component.
- 3. **Assemble Frame Sections:** Connect the headboard, footboard, and side rails using the provided hardware. Do not fully tighten screws until the entire frame is assembled.
- 4. **Install Slatted Base:** The slatted base is integrated into the design. Ensure all slats are correctly seated in their holders.
- 5. **Final Tightening:** Once all parts are correctly aligned, securely tighten all screws and fasteners.
- 6. Placement: Position the assembled bed frame in your desired location.



Image 2: Top-down view of the bed frame's slatted base, illustrating the support structure for a mattress.



Image 3: Close-up detail of the slatted base connections, showing how the poplar wood slats are secured within the frame. For detailed, step-by-step instructions, please refer to the separate illustrated assembly manual included in your package.

# 5. OPERATING INSTRUCTIONS

The tectake 401720 Bed Frame is designed to provide a stable and comfortable foundation for your mattress. Once assembled, place your mattress directly onto the slatted base. The integrated poplar wood slatted base offers resilient support for various mattress types.

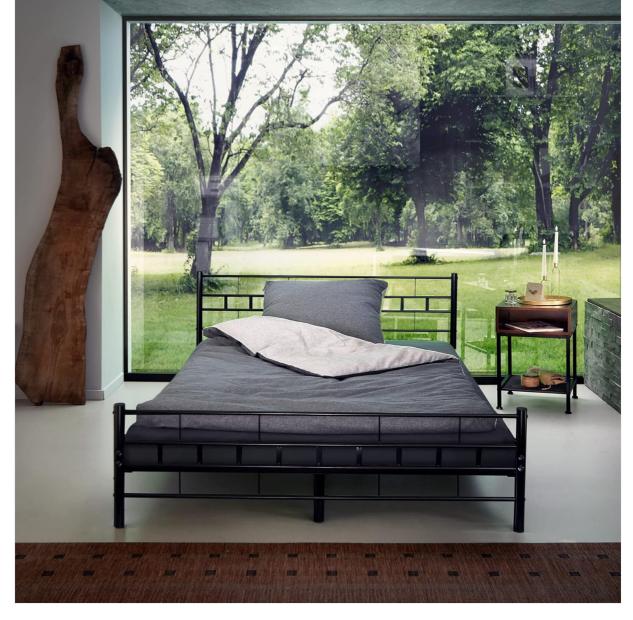


Image 4: The tectake bed frame shown in a room setting, demonstrating its functional use with a mattress and bedding.

# 6. MAINTENANCE

To maintain the condition and longevity of your bed frame, follow these simple maintenance guidelines:

- **Cleaning:** The powder-coated steel frame is easy to clean. Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Inspection:** Periodically inspect all connections and fasteners to ensure they remain tight. Re-tighten if necessary.
- Weight Limit: Always adhere to the maximum weight recommendation of 200 kg to prevent structural damage.

# 7. TROUBLESHOOTING

If you encounter any issues with your bed frame, consider the following common solutions:

• **Squeaking Noises:** Check all bolts and screws for tightness. Loose connections are a common cause of squeaking. Ensure the mattress is properly seated on the slatted base.

- **Instability:** Verify that the bed frame is assembled correctly according to the instructions and that all components are securely fastened. Ensure the bed is placed on a level surface.
- **Damaged Parts:** If any part is damaged or missing upon arrival, do not proceed with assembly. Contact customer support for assistance.

# 8. Specifications

Feature	Detail
Model Number	401720-SE
Overall Dimensions (L x W x H)	203 x 187 x 76 cm
Lying Surface (L x W)	200 x 180 cm
Footboard Height	47 cm
Headboard Height	76 cm
Height from Floor to Slatted Base	25 cm
Weight	Approx. 25 kg
Material	Powder-coated Alloy Steel frame, Plastic feet, Poplar wood slats
Color	blackone
Maximum Weight Recommendation	200 kg



Image 5: Diagram illustrating the key dimensions of the tectake bed frame, including length, width, and height.

# 9. WARRANTY INFORMATION

This product is covered by the standard manufacturer's warranty. Please refer to your purchase documentation or contact the retailer for specific warranty terms and conditions. Keep your proof of purchase for any warranty claims.

## 10. Customer Support

For further assistance, missing parts, or technical inquiries, please contact tectake customer support through the retailer where the product was purchased. Have your model number (401720) and proof of purchase ready when contacting support.

#### Related Documents - 401720



## TecTake Travel Bed and Changing Unit: Assembly, Usage, and Safety Instructions

Comprehensive instruction manual for the TecTake travel bed and changing unit, covering assembly, folding, usage, care, and safety guidelines. Includes model numbers 400466, 400467, 400533, 400534.



#### TecTake 402756 Home Gym Assembly and Exercise Guide

Instruction manual for the TecTake 402756 home gym, covering assembly, safety precautions, and exercise guidance. Includes preparation tips and warm-up/cool-down routines.



#### TecTake 400777 Semi-Automatic Washing Machine User Manual and Instructions

This user manual provides comprehensive instructions for the TecTake 400777 semi-automatic washing machine, covering installation, operation, safety guidelines, and maintenance. Learn how to effectively wash and spin your clothes with this efficient appliance.



## tectake Height-Adjustable Desk Frame Installation Guide

Installation guide for the tectake height-adjustable desk frame (Item No. 402999/403000). Includes technical specifications, parts list, assembly steps, operation, and troubleshooting.



## Roller Blind Installation Manual

Comprehensive instruction manual for the installation of a roller blind, including parts list, assembly steps, and contact information for tectake.



# Assembly Instructions for TecTake Wardrobe (Models 402485, 402940)

Comprehensive assembly instructions for TecTake wardrobe models 402485 and 402940, detailing parts list and step-by-step assembly guidance in multiple languages.