Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- tectake /
- > tectake Artificial Christmas Tree User Manual

tectake 402822-SE

tectake Artificial Christmas Tree User Manual

Model: 402822-SE

PRODUCT OVERVIEW

The tectake Artificial Christmas Tree provides a festive centerpiece for your home. It features realistic needles and branches, offering a full and natural appearance. This durable and easy-to-clean tree comes with a stable stand for quick and secure setup.



Image: The tectake Artificial Christmas Tree, showing its full form, a separate view of the metal stand, and a festive image of Santa Claus.

KEY FEATURES

- Realistic Appearance: Features lifelike needles and branches, including pine cones, for an authentic look.
- High Volume: Designed to offer a full and dense appearance.
- Durable and Easy Care: Constructed from high-quality PVC and steel for long-lasting use and simple cleaning.
- Quick Assembly: Comes with a sturdy metal stand for fast and stable setup.
- Bendable Branches: Allows for easy shaping and decoration.
- Space-Saving Storage: Can be easily disassembled and stored compactly after use.
- No Shedding: Unlike natural trees, it does not shed needles, contributing to a cleaner home environment.



Image: An infographic highlighting the key features of the tectake artificial Christmas tree, such as easy assembly, bendable branches, stable stand, durability, easy care, and smart storage.

SETUP INSTRUCTIONS

- 1. **Unpack Contents:** Carefully remove all components from the packaging. Ensure all parts are present: tree sections and the metal stand.
- 2. **Assemble the Stand:** Open the metal stand and ensure it is stable. Insert the bottom section of the tree into the stand, securing it firmly.
- 3. **Assemble Tree Sections:** Depending on the model, the tree may come in multiple sections. Insert each section one by one, starting from the bottom, until the tree is fully assembled. Ensure each section is securely connected.
- 4. **Shape the Branches:** Gently spread and shape the individual branches to achieve a full and natural appearance. The branches are bendable, allowing for customization. Start from the bottom and work your way up.



Packa upp innehållet i paketet

1. och gör klart alla delar för att sätta upp granen



Sätt upp metallstativet

2. och sätt ihop spetsarna efter varandra från botten till toppen



Vik ut grenarna

3. och böj dem efter önskemål tills granen ser ut som du vill



Dekorera julgranen

4. med julgranskulor, belysning eller annat julpynt - efter din smak

Image: A visual guide illustrating the assembly process: unpacking the tree, setting up the metal stand, and bending out the branches for a full shape.

OPERATING AND DECORATION

Once assembled, your tectake Artificial Christmas Tree is ready for decoration. Its sturdy branches can hold various ornaments, lights, and garlands.

- Branch Flexibility: Utilize the bendable branches to position your decorations exactly as desired.
- Stability: The robust metal stand ensures the tree remains stable even when fully decorated.
- Safety: The tree is designed to be fire-safe and allergy-friendly, providing a secure environment.



Image: The stable metal stand of the artificial Christmas tree, with pets and a baby nearby, illustrating its secure design for households.



Image: A beautifully decorated artificial Christmas tree standing in a festive living room, surrounded by gifts and a fireplace, demonstrating its aesthetic appeal.

MAINTENANCE

The tectake Artificial Christmas Tree requires minimal maintenance.

- Cleaning: To clean, simply wipe the branches with a damp cloth to remove dust or debris. Avoid harsh chemicals.
- Storage: After the festive season, disassemble the tree by reversing the assembly steps. Fold the branches close to the main stem. Store the tree and stand in its original packaging or a suitable storage bag in a cool, dry place to ensure its longevity.

TROUBLESHOOTING

Most issues with your artificial Christmas tree can be resolved with simple adjustments.

Problem	Solution
Problem	Solution

Problem	Solution
Tree appears sparse or not full.	Ensure all branches are fully fanned out and shaped. Take time to adjust each individual branch for maximum fullness.
Tree is wobbly or unstable.	Check that the tree stand is fully opened and locked into position. Ensure the bottom tree section is securely inserted into the stand. Place the tree on a flat, even surface.
Branches are difficult to bend.	Apply gentle, consistent pressure. The branches are designed to be flexible but may require some effort initially. Avoid excessive force to prevent damage.

SPECIFICATIONS

Attribute	Value
Height	180 cm
Diameter	100 cm
Number of Tips	705
Material	PVC / Steel
Weight	5.5 kg
Model Number	402822-SE



Image: A diagram illustrating the dimensions of the artificial Christmas tree, showing its height of 180 cm and diameter of 100 cm, alongside a depiction of Santa Claus carrying the tree.

WARRANTY AND SUPPORT

For warranty information or support inquiries regarding your tectake Artificial Christmas Tree, please refer to the purchase documentation or contact tectake customer service directly.


The seller for this product is **TecTake Sweden AB**. For direct contact, please refer to their information provided at the point of purchase or on the Amazon platform.

 


Image: A family decorating the artificial Christmas tree, demonstrating the product's use in a home environment.

© 2024 tectake. All rights reserved.

Related Documents - 402822-SE

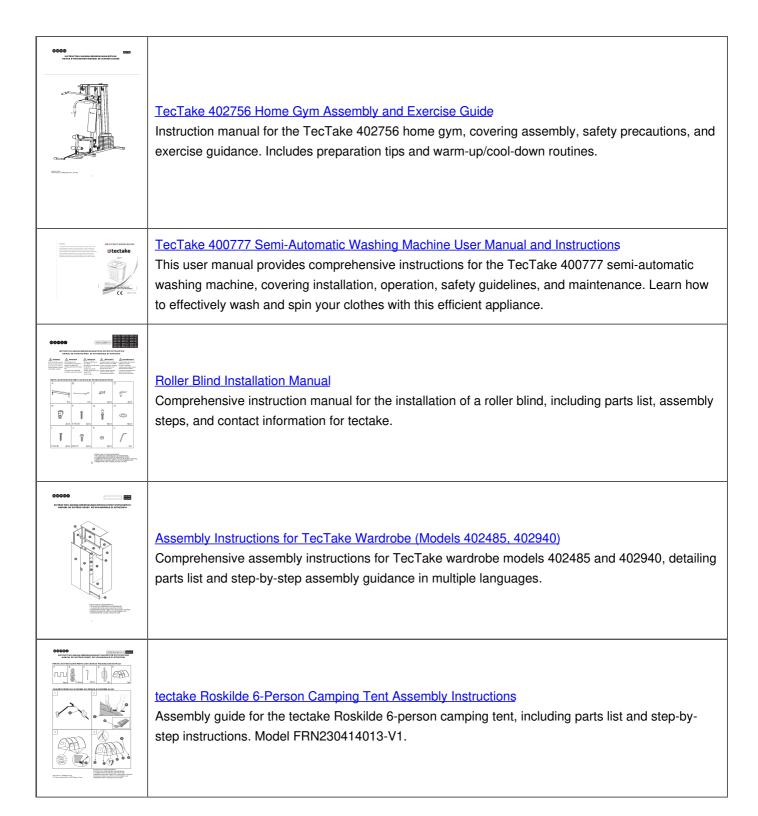



Assembly Instructions for TecTake Tent (Models 404816-404820)

Step-by-step assembly guide for TecTake tents, including parts list and assembly diagrams. Covers models 404816, 404817, 404818, 404819, and 404820.