

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Mayer](#) /
- › [Mayer MMAF501 Air Fryer Instruction Manual](#)

Mayer MMAF501

Mayer MMAF501 Air Fryer Instruction Manual

Model: MMAF501

INTRODUCTION

Thank you for purchasing the Mayer MMAF501 Air Fryer. This manual provides important information regarding the safe operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before use and keep it for future reference.



Image: The Mayer MMAF501 Air Fryer, black in color, with its detachable frying basket shown separately in the foreground. The main unit features two analog control dials on a silver panel.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the frying basket is properly inserted before operation.
- This appliance has overheating protection. If it overheats, it will automatically shut off.

PRODUCT OVERVIEW

The Mayer MMAF501 Air Fryer is designed for healthy cooking with minimal oil. Key features include:

- **Capacity:** 4.2 Liters detachable frying basket.
- **Temperature Control:** Adjustable temperature up to 200°C.
- **Timer:** 30-minute analog timer with automatic shut-off.
- **Safety Features:** Overheating protection, automatic cut-off switch, cool-touch handle.
- **Indicators:** Power light indicator.
- **Design:** Black exterior with stainless steel interior components and non-slip feet.



Image: A close-up view of the Mayer MMAF501 Air Fryer's control panel, showing the two analog dials for temperature and timer settings.

SETUP

1. **Unpacking:** Carefully remove the air fryer and all packaging materials. Ensure all components are present and undamaged.
2. **Cleaning:** Before first use, clean the frying basket and pan with warm soapy water. Wipe the exterior of the appliance with a damp cloth. Dry all parts thoroughly.
3. **Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls and other appliances to allow for proper air circulation. Ensure there is at least 10 cm of free space on the back and sides, and 10 cm above the appliance.
4. **Power Connection:** Plug the power cord into a grounded wall outlet.

OPERATING INSTRUCTIONS

- 1. Prepare Food:** Place the food you wish to air fry into the detachable frying basket. Do not overfill the basket.
- 2. Insert Basket:** Slide the frying basket firmly back into the air fryer until it clicks into place.
- 3. Set Temperature:** Turn the temperature control dial to your desired cooking temperature (up to 200°C).
- 4. Set Timer:** Turn the timer control dial to the required cooking time (up to 30 minutes). The power indicator light will illuminate, indicating the air fryer is heating.
- 5. Cooking Process:** The air fryer will begin cooking. For even cooking, some foods may require shaking or turning halfway through the cooking time. To do this, carefully pull out the basket using the cool-touch handle, shake or turn the food, and then reinsert the basket.
- 6. Completion:** When the timer reaches zero, a bell will sound, and the air fryer will automatically shut off. The power indicator light will turn off.
- 7. Remove Food:** Carefully pull out the frying basket. Use tongs to remove the cooked food. Be cautious of hot steam.
- 8. Cool Down:** Allow the appliance to cool completely before cleaning or storing.

CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and optimal performance of your air fryer.

- 1. Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool down completely before cleaning.
- 2. Frying Basket and Pan:** The detachable frying basket and pan can be washed with warm soapy water. Use a non-abrasive sponge. For stubborn food residue, soak the basket and pan in warm water for about 10 minutes before cleaning.
- 3. Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use harsh abrasive cleaners or immerse the main unit in water.
- 4. Interior:** Clean the interior of the appliance with a damp cloth. If necessary, a small amount of mild detergent can be used.
- 5. Heating Element:** Use a cleaning brush to remove any food residue from the heating element.
- 6. Drying:** Ensure all parts are thoroughly dry before reassembling or storing the air fryer.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in. Timer is not set. Frying basket is not inserted correctly.	Ensure the power cord is securely plugged into a grounded outlet. Turn the timer dial to the desired cooking time. Push the frying basket firmly into the appliance until it clicks into place.
Food is not cooked evenly.	Basket is overfilled. Food was not shaken/turned.	Reduce the amount of food in the basket. Shake or turn food halfway through cooking time.

Problem	Possible Cause	Solution
White smoke comes from the appliance.	Fat residue from previous use. Too much oil used.	Clean the frying basket and pan thoroughly after each use. Use less oil or pat food dry before air frying.
Air fryer automatically shuts off during operation.	Overheating protection activated.	Unplug the appliance and let it cool down for at least 30 minutes. Check for any obstructions in the air vents. Plug it back in and restart.

SPECIFICATIONS

Model Number	MMAF501
Brand	Mayer
Capacity	4.2 Liters (Frying Basket)
Power Output	1350 Watts
Voltage	220 Volts
Max Temperature	200°C
Timer	Up to 30 minutes
Dimensions (D x W x H)	28.5 x 33.7 x 33.2 cm
Weight	4.5 Kilograms
Material	Stainless Steel (Inner), Plastic (Exterior)
Control Type	Analog Dials

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your purchase or contact Mayer customer service directly. Keep your proof of purchase for warranty claims.

Manufacturer: Mayer

Model: MMAF501

