

tectake Thorsten

tectake Thorsten Double Hammock with Stand

Instruction Manual

1. INTRODUCTION

Thank you for choosing the tectake Thorsten Double Hammock with Stand. This manual provides essential information for the safe and correct assembly, operation, and maintenance of your new hammock. Please read these instructions carefully before use and retain them for future reference.

This extra-large hammock is designed for optimal relaxation, accommodating up to two people with a maximum load capacity of 200 kg. Its robust wooden frame and adjustable suspension system ensure stability and comfort.

2. SAFETY WARNINGS

- **WARNING:** Maximum weight capacity is **200 kg**. Do not exceed this limit.
- Securely attach the hammock to stable supports. Ensure all connections are tight before use.
- Do not use the hammock without the spreader bars properly installed.
- Keep children away from the hammock unless supervised by an adult.
- Regularly inspect all components for wear, damage, or loose connections. Discontinue use if any damage is found.
- Place the hammock on a flat, stable surface to prevent tipping.
- Avoid sharp objects near the hammock fabric to prevent tears.

3. PACKAGE CONTENTS

Please check that all parts are present and undamaged before beginning assembly:

- 1 x XXL Wooden Hammock Stand
- 1 x XXL Hammock Fabric
- Galvanized Hooks and Steel Chains for suspension
- Illustrated Assembly Instructions (D / EN / FR)

tectake[®]
GARDEN

FUNKTIONER

XXL

XXL-hängmatta

med plats för upp till två personer



Stabil upphängning

med kedjor och krokar av förzinkat stål



Justerbar höjd

med hjälp av länkarna på de två kedjorna



Robust liggområde

tack vare en blandning av bomull och polyester



Rostfritt stativ

av oljad tall och rostfria skruvar



Hög lastkapacitet

med en imponerande viktgräns på 200 kg



Snabb montering

monteras upp på några minuter

HOS ANDRA

HOS OSS:
100% ROSTFRITT

Figure 3.1: Overview of the tectake Thorsten Double Hammock with Stand and its features.

4. SETUP AND ASSEMBLY

Assembly of your tectake Thorsten Hammock is designed to be quick and straightforward. Follow these general steps, referring to the included illustrated assembly instructions for detailed diagrams:

- Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface.
- Assemble the Wooden Stand:** Connect the various wooden beams of the stand according to the diagrams in your separate assembly guide. Ensure all screws and fasteners are securely tightened. The stand is made of high-quality, oiled softwood for durability.
- Attach Hammock Fabric:** Unfold the hammock fabric. Attach the ends of the hammock to the stand using the provided galvanized hooks and steel chains.
- Adjust Height:** The steel chains allow for height adjustment. Select the desired height by hooking the chains into different links on the stand. Ensure both sides are adjusted evenly for balance.
- Final Check:** Before first use, double-check all connections for tightness and stability. Ensure the hammock is properly balanced and secure.



- 1. Upplev sommaren tillsammans**
i vår härliga XXL-hängmatta som erbjuder gott om plats för upp till två personer



- 2. Justerbar höjd**
genom att fästa i länkarna på de två upphängningskedjorna



- 3. Helt rostfri ram**
tack vare användningen av oljat trä och robusta rostfria skruvar



- 4. Mycket bekväm liggyta**
med en blandning av bomull och polyester, vilket är tåligt och mycket hudvänligt

Figure 4.1: Key assembly points including adjustable suspension and robust frame.

5. OPERATING INSTRUCTIONS

Using your tectake Thorsten Double Hammock is simple and designed for maximum comfort:

- **Entering the Hammock:** Carefully sit in the center of the hammock, distributing your weight evenly. Avoid jumping into the hammock.
- **Optimal Comfort:** The extra-large design provides ample space for one or two people. Adjust your position to find the most comfortable lying or sitting posture.
- **Height Adjustment:** If you wish to change the hammock's height, carefully exit the hammock first. Then, adjust the steel chains on both sides to your preferred level, ensuring they are symmetrical.
- **Relaxation:** Enjoy the gentle sway and comfort. The hammock is perfect for relaxing in your garden, on your balcony, or indoors.

Video 5.1: Demonstrating the tectake Thorsten Double Hammock in use, showing couples relaxing comfortably.

REN AVKOPPLING



Extra stor hängmatta
för upp till 2 personer

Figure 5.1: Two people enjoying the extra-large hammock.

6. MAINTENANCE

Proper maintenance will extend the life of your hammock and stand:

- **Cleaning the Fabric:** The hammock fabric (65% cotton, 35% polyester) can be hand-washed or machine-washed on a gentle cycle with mild detergent. Allow to air dry completely.
- **Cleaning the Wooden Stand:** Wipe the oiled softwood stand with a damp cloth. For deeper cleaning, use a mild wood cleaner. Periodically re-oil the wood to maintain its finish and protect it from weather elements.
- **Metal Components:** The galvanized hooks and stainless steel chains are designed for durability. Clean them with a damp cloth if necessary. Ensure they are dry to prevent rust, especially if stored.
- **Storage:** During prolonged periods of non-use or harsh weather conditions, it is recommended to store the hammock fabric indoors in a dry place. The wooden stand can remain outdoors but will benefit from protection from extreme weather.

7. TROUBLESHOOTING

If you encounter any issues with your hammock, consider the following:

- **Hammock feels unstable:** Ensure all stand connections are securely tightened. Verify that the hammock chains are evenly adjusted on both sides and properly hooked. The stand should be on a flat, level surface.
- **Hammock sags too much:** Adjust the chains to a higher link on the stand to reduce sag. Remember to exit the hammock before making adjustments.
- **Squeaking noises:** Check all metal-to-metal connections. A small amount of lubricant on the hooks or chain links may resolve the issue.
- **Wood fading or cracking:** This is normal for outdoor wood over time. Re-oiling the stand regularly will help protect it and restore its appearance.

If problems persist, please contact tectake customer support.

8. SPECIFICATIONS

Feature	Detail
Total Dimensions (L x W x H)	415 x 150 x 124 cm (approx.)
Lying Surface (L x W x H)	205 x 150 x 80–110 cm (approx.)
Foot Width	120 cm
Beam Thickness	6 x 6 cm (approx.)
Weight	30 kg
Maximum Load Capacity	200 kg
Hammock Material	65% Cotton, 35% Polyester
Stand Material	Oiled Softwood
Suspension Components	Galvanized Hooks, Stainless Steel Chains

MÅTT



Totalmått

ca. 415 x 150 x 124 cm

Liggyta

ca. 205 x 150 x 80 - 110 cm

Bredd på fötterna

ca. 120 cm

Tjocklek på balkarna

ca. 6 x 6 cm



Belastning

ca. 200 kg

Vikt

ca. 30 kg

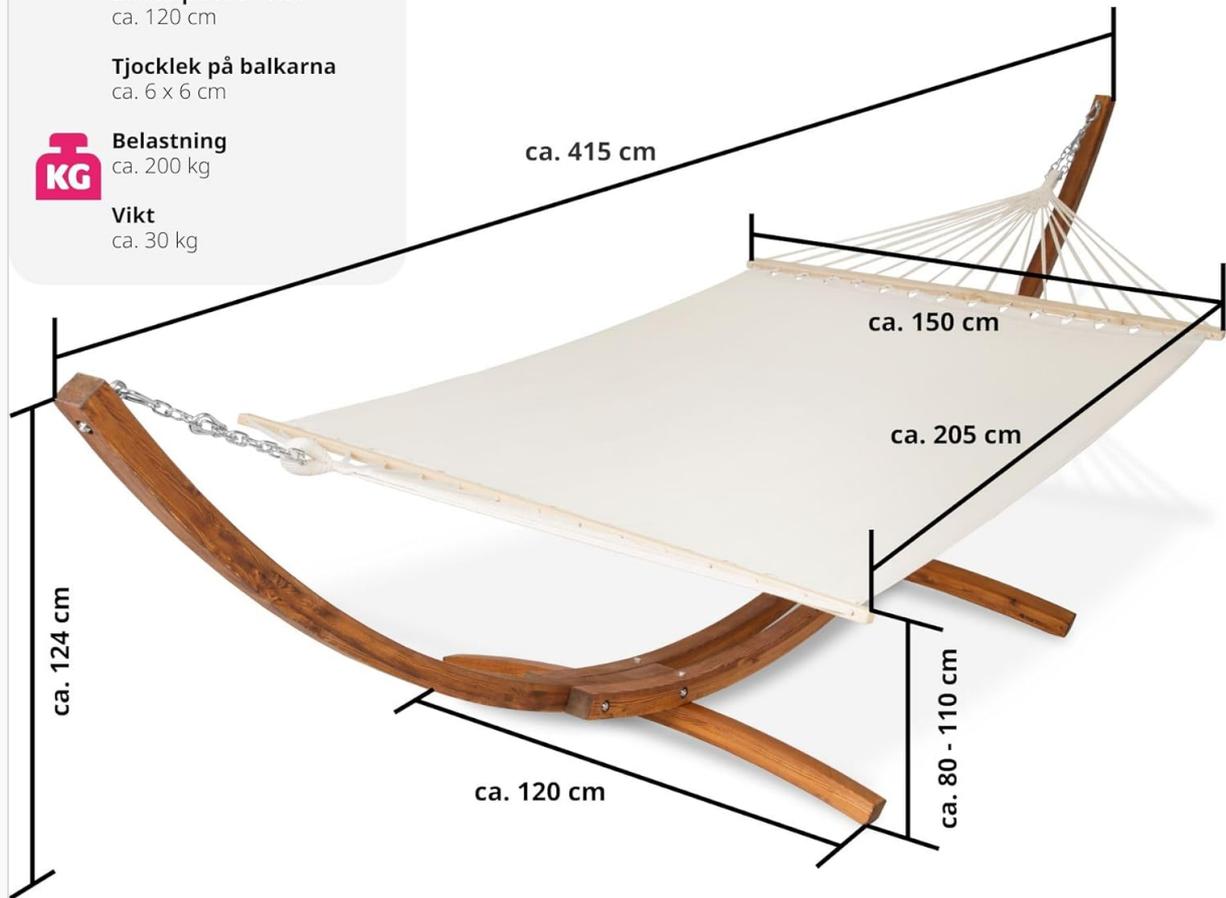


Figure 8.1: Detailed dimensions of the hammock and stand.

9. WARRANTY AND SUPPORT

For warranty information or if you require further assistance, please refer to the warranty card included with your product or visit the official tectake website. Our customer support team is available to help with any questions or concerns you may have.