

tectake 401660

tectake 401660 Room Divider Folding Screen - White User Manual

Model: 401660

[Instructions](#) [Safety Information](#) [Components](#) [Setup](#) [Operating](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

INTRODUCTION

This manual provides instructions for the assembly, operation, and maintenance of your tectake 401660 Room Divider. Please read these instructions carefully before use and retain them for future reference.

SAFETY INFORMATION

Warning: Use with caution to prevent the screen from tipping over. Always place the room divider on a stable, level surface. Avoid placing heavy objects on the divider or hanging items that could destabilize it. Ensure children do not climb on the room divider.

- Do not expose to extreme weather conditions.
- Keep away from open flames or heat sources.
- Regularly check all connections for tightness.

PACKAGE CONTENTS

Before assembly, ensure all components are present and undamaged. If any parts are missing or damaged, contact tectake customer support.

- 1 x Room Divider (consisting of 4 side panels)
- Assembly Instructions



Image: The tectake 401660 Room Divider, showing its four white fabric panels and black metal frame. This image illustrates the complete product as it appears after assembly.

SETUP AND ASSEMBLY

The tectake 401660 Room Divider is designed for easy setup. Follow these steps to assemble your room divider:

1. Unpack all components from the packaging.
2. Identify the four side panels. These panels are pre-assembled with their fabric screens.
3. Connect the panels using the integrated hinges. The hinges allow for 180-degree folding, enabling flexible configurations.

4. Ensure all connections are secure.
5. Place the assembled room divider on a flat, stable surface.



Image: A close-up view of how the white fabric panel attaches to the black metal frame, showing the Velcro fastening mechanism. This detail is important for understanding how the panels are secured and for potential future maintenance.

OPERATING INSTRUCTIONS

The room divider can be used in various configurations to suit your needs:

- **Room Partition:** Extend the panels to create a temporary wall or divide a larger space into smaller sections.
- **Privacy Screen:** Position the divider to create a private area, such as a changing space or a secluded corner.
- **Decorative Element:** Arrange the panels to enhance the aesthetic of a room.
- **Flexible Arrangement:** The 180-degree foldable panels allow for straight, L-shaped, or zigzag configurations.



Image: The room divider positioned in a bedroom, demonstrating its use as a privacy screen. A piece of clothing is shown hanging on the frame, illustrating a potential functional application.



Image: A person interacting with the room divider, adjusting a garment. This image further illustrates the divider's utility as a temporary changing area or a place to organize clothing.

CARE AND MAINTENANCE

To ensure the longevity and appearance of your room divider, follow these care instructions:

- **Cleaning:** Wipe the frame and fabric panels with a damp or dry cloth. For stubborn stains on the fabric, use a mild soap solution and a soft cloth, then wipe dry.
- **Frame:** The black lacquered steel frame can be cleaned with a soft, damp cloth. Avoid abrasive cleaners.
- **Storage:** When not in use, the room divider can be folded compactly for storage.
- **Inspection:** Periodically check all hinges and connections to ensure they are secure.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Room divider is unstable.	Uneven surface; panels not properly angled; heavy items placed on top.	Ensure placement on a flat, stable surface. Adjust panel angles for better balance (e.g., slight zigzag). Remove heavy items.
Panels do not fold smoothly.	Hinges are stiff or dirty.	Clean hinges. Apply a small amount of silicone spray if necessary (avoid contact with fabric).
Fabric panels appear loose.	Velcro attachments are not fully secured.	Press firmly on the Velcro strips to ensure full attachment.

SPECIFICATIONS

Model:	401660
Total Dimensions (H x W x D):	Approx. 180 x 160 x 2.5 cm (70.9 x 63 x 1 inches)
Single Panel Dimensions (H x W x D):	Approx. 180 x 39 x 2.5 cm (70.9 x 15.4 x 1 inches)
Weight:	Approx. 6 kg (13.2 lbs)
Number of Panels:	4
Frame Material:	Steel, black lacquered
Fabric Material:	Polyester, white (matte finish)
Folding Capability:	180 degrees per hinge
Usage:	Indoor use only
Care Instructions:	Wipe with a damp or dry cloth



Image: A detailed view of the top section of the room divider's black metal frame, showcasing the decorative elements and the sturdy construction.

WARRANTY AND SUPPORT

For warranty information or technical support, please contact tectake customer service. Details can typically be found on the original packaging or on the official tectake website.

- Keep your purchase receipt as proof of purchase.
- Provide the model number (401660) when contacting support.

