

Dyson 268893-01

Dyson V10 Absolute Cordless Handheld Vacuum User Manual

Model: 268893-01

Brand: Dyson

1. INTRODUCTION

The Dyson V10 Absolute is a powerful and versatile cordless vacuum cleaner designed for deep cleaning across various surfaces. It offers up to 60 minutes of fade-free suction, providing convenience and efficiency for diverse cleaning tasks without the restriction of a cord. This manual provides essential information for the proper setup, operation, and maintenance of your Dyson V10 Absolute vacuum.

2. SETUP AND INITIAL CHARGE

Upon unboxing your Dyson V10 Absolute, ensure all components are present. The vacuum comes with several attachments designed for specific cleaning needs. Before first use, fully charge the vacuum.

2.1. Unboxing and Assembly

Carefully remove all parts from the packaging. The main body of the vacuum, the wand, and various cleaning heads and tools will be included. Assemble the main cleaning head to the wand, and then attach the wand to the main vacuum body by aligning the connectors and clicking them into place. To detach, press the red release button located at the connection points.



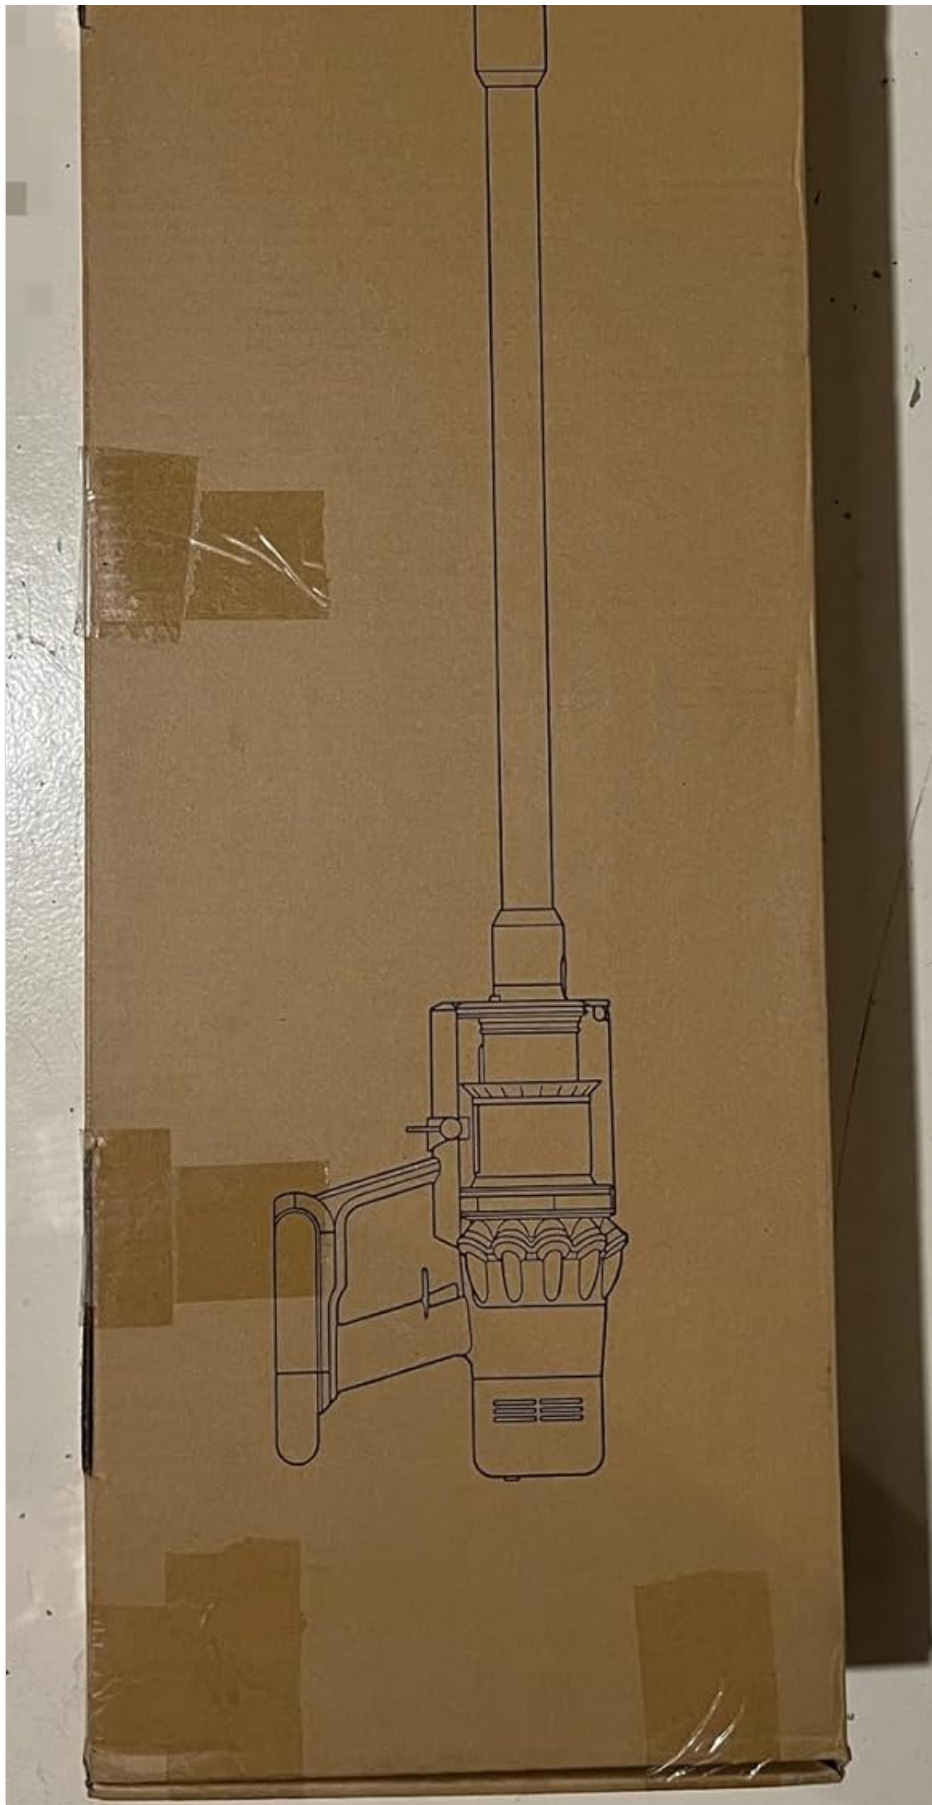


Figure 1: The Dyson V10 Absolute Cordless Handheld Vacuum as packaged, illustrating its sleek design and compact form factor.

2.2. Charging the Battery

The Dyson V10 Absolute comes with a wall-mounted docking station that also serves as a charging point. Install the docking station in a convenient location near a power outlet. Connect the charger to the docking

station, and then place the vacuum onto the station. Blue indicator lights on the vacuum will illuminate to show that it is charging. A full charge typically takes approximately 3.5 hours.

Video Description: A user demonstrates how to mount the Dyson V10 Absolute onto its wall-mounted charging dock. The video shows the vacuum sliding into place and the blue charging indicator lights illuminating, confirming the charging process. It also highlights the convenient storage of additional attachments on the dock.

3. OPERATING INSTRUCTIONS

Your Dyson V10 Absolute is designed for intuitive operation. Familiarize yourself with its controls and attachments for optimal cleaning performance.

3.1. Power Modes

The vacuum features three power modes to suit different cleaning tasks:

- **Max Mode:** Provides the strongest suction for stubborn dirt and deep cleaning. Ideal for heavily soiled areas or thick carpets. Note that this mode will reduce battery runtime.
- **Medium Mode:** A balanced mode offering strong suction for everyday cleaning on various surfaces.
- **Light Mode:** Designed for lighter cleaning tasks and extended battery runtime, suitable for hard floors and quick clean-ups.

To switch between modes, locate the power mode button on the top of the main vacuum body and press it to cycle through the settings.

3.2. Using Attachments

The Dyson V10 Absolute comes with a variety of specialized tools:

- **Soft Roller Cleaner Head:** Best for hard floors, picking up both fine dust and large debris.
- **Torque Drive Cleaner Head:** Ideal for carpets and rugs, with stiff nylon bristles to remove ground-in dirt.
- **Mini Motorized Tool:** Designed for removing pet hair and ground-in dirt from upholstery and tight spaces.
- **Combination Tool:** A two-in-one tool with a wide nozzle and brush for switching between cleaning and dusting tasks.
- **Crevice Tool:** For cleaning around edges and narrow gaps.
- **Mini Soft Dusting Brush:** For gentle vacuuming of delicate surfaces.
- **Fabric and Mattress Tool:** Specifically designed for cleaning mattresses and upholstery.
- **Stubborn Dirt Brush:** Features stiff bristles for dislodging dried-on and stubborn dirt.
- **Hair Screw Tool:** Anti-tangle conical brush bar for picking up long hair and pet hair.

To attach a tool, align it with the end of the wand or the main vacuum body and push until it clicks securely into place. To remove, press the red release button and pull the tool away.

4. MAINTENANCE

Regular maintenance ensures your Dyson V10 Absolute performs optimally and extends its lifespan.

4.1. Emptying the Clear Bin

Empty the clear bin as soon as the dirt reaches the MAX level. To empty, hold the vacuum over a trash bin, push the red lever down firmly, and the bin will slide open, releasing the dirt. Push the lever back up to

close the bin.

Video Description: A user demonstrates the process of emptying the clear dust bin of the Dyson V10 Absolute. The red lever is pushed down, causing the bin to open and release collected debris into a trash can. The lever is then pulled back up to close the bin.

4.2. Washing the Filter

For consistent suction, wash the filter at least once a month. To access the filter, twist the purple filter unit counter-clockwise from the top of the main vacuum body and pull it out. Wash the filter under cold running water until the water runs clear. Squeeze and twist the filter to remove excess water. Allow the filter to dry completely for at least 24 hours in a warm, dry place before reinserting it into the vacuum. Do not use a tumble dryer, microwave, or open flame to dry the filter.

4.3. Clearing Blockages

If the vacuum loses suction or makes an unusual noise, check for blockages in the cleaner head, wand, and main body. Disconnect the vacuum from the charger before checking for blockages. Remove any visible obstructions. If a blockage is found, clear it carefully. Do not operate the vacuum without all parts correctly assembled.

5. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|----------------------------------|--|---|
| No power / Not turning on | Battery not charged; Trigger not pulled. | Ensure the vacuum is fully charged. Press and hold the power trigger. |
| Loss of suction | Blocked airway; Full dust bin; Dirty filter. | Check for blockages in the cleaner head, wand, and main body. Empty the dust bin. Wash and thoroughly dry the filter. |
| Vacuum stops during use | Blockage detected; Overheating; Battery low. | Clear any blockages. Allow the vacuum to cool down. Recharge the battery. |
| Attachments not fitting securely | Incorrect alignment; Release button not fully depressed. | Ensure correct alignment and push firmly until a click is heard. Press the red release button fully when detaching. |

6. SPECIFICATIONS

- **Brand:** Dyson
- **Model:** 268893-01
- **Special Feature:** Cordless, Long Runtime
- **Filter Type:** Cartridge
- **Runtime:** Up to 60 minutes (depending on power mode and attachment)
- **Color:** Black
- **Noise Level:** 80 dB
- **Item Weight:** 13.32 pounds
- **Package Dimensions:** 34.5 x 10.5 x 6.5 inches
- **Included Components:** Docking station, Charger, Crevice tool, Combination tool, Mini soft dusting brush, Fabric and mattress tool, Stubborn dirt brush, Hair screw tool, Fluffy cleaner head, Soft roller cleaner head
- **UPC:** 885609016207

7. WARRANTY AND SUPPORT

Your Dyson V10 Absolute is covered by a manufacturer's warranty. For specific warranty details and duration, please refer to the documentation provided with your purchase or visit the official Dyson website. In case of any issues or for technical assistance, please contact Dyson customer support.

Return Policy: This product typically has a 30-day refund/replacement return policy from the date of purchase. Please check with your retailer for their specific return terms.

For additional support and product registration, visit the official Dyson website: www.dyson.com

© 2024 Dyson. All rights reserved.

Documents - Dyson – 268893-01

[\[pdf\]](#) User Manual

268893 01 dyson content dam maintenance user guides en US vacuumcleaners stick vacuums sv12 cyclone v10 absolute Dyson 3 25 Prevent unintentional starting Ensure the switch is in off position before connecting to battery pack picking up or carrying machine 244393 ie Operating Manual Do not carry out any other than that shown this manual advised by Helpline 4 Suitable for dry locations ONLY use outdoors on wet surfaces 5 handle part of plug with hands 6 a damaged cord If supply it must be |||

...

lang: **score:22** filesize: 1 M page_count: 0 document date: 0000-00-00