



Manuals.plus /

› Funko /

› Funko Pop! Disney: Alice in Wonderland 70th - Cheshire Cat Instruction Manual

Funko 55735

Funko Pop! Disney: Alice in Wonderland 70th - Cheshire Cat Instruction Manual

Model: 55735 | Brand: Funko

INTRODUCTION

This manual provides essential information for the Funko Pop! Disney: Alice in Wonderland 70th - Cheshire Cat vinyl figure. This stylized collectible celebrates the 70th anniversary of Disney's Alice in Wonderland, featuring the iconic Cheshire Cat with a unique semi-translucent design. The figure stands approximately 3 3/4 inches tall and comes in a window display box, making it an ideal addition for collectors and fans.

SETUP AND DISPLAY

The Funko Pop! Cheshire Cat figure is designed for display. Follow these steps for optimal setup:

- Unboxing:** Carefully remove the figure from its window display box. The packaging is designed to protect the figure and can be kept for storage or display.
- Base Attachment:** The Cheshire Cat figure comes with a clear, semi-translucent base. Gently align the peg on the base with the hole on the bottom of the figure's foot and press firmly until it is securely attached. This base provides stability for display.
- Placement:** Place the figure on a flat, stable surface. Avoid placing it near edges where it could fall or in areas with high foot traffic.



Figure shown within its original window display box, highlighting the packaging design.



The Cheshire Cat figure removed from its packaging, showcasing its detailed design and semi-translucent appearance.

MAINTENANCE AND CARE

To ensure the longevity and appearance of your Funko Pop! figure, follow these maintenance guidelines:

- **Cleaning:** Dust the figure regularly with a soft, dry cloth. For more stubborn dirt, a slightly damp cloth can be used, but avoid harsh chemicals or abrasive materials.
- **Storage:** Store the figure in a cool, dry place away from direct sunlight and extreme temperatures. Prolonged exposure to sunlight can cause colors to fade or material to degrade.
- **Handling:** Handle the figure by its body, avoiding excessive pressure on smaller parts like ears or tail to prevent damage.

TROUBLESHOOTING

While Funko Pop! figures are generally robust, here are some common issues and their resolutions:

| Issue | Resolution |
|--------------------------------|--|
| Figure does not stand upright. | Ensure the clear display base is firmly attached to the figure's foot. Apply gentle, even pressure to secure it. |
| Minor paint imperfections. | Small variations in paint application are common in mass-produced collectibles and are generally not considered defects. |

PRODUCT SPECIFICATIONS

| Specification | Detail |
|-----------------------|---|
| Product Dimensions | 2.5 x 2.5 x 3.75 inches (Figure height approx. 3.75 inches) |
| Item Weight | 4.64 ounces |
| Manufacturer | Funko |
| Item Model Number | 55735 |
| Recommended Age | 6 years and up |
| Original Release Date | 2021 |



PRODUCT SIZING

(ALL HEIGHTS ARE APPROXIMATE)



General Funko Pop! product sizing chart for reference. The Cheshire Cat figure is a standard Pop! size.

SAFETY INFORMATION

WARNING: This product contains small parts and is not suitable for children under 3 years of age due to choking hazards. Adult supervision is recommended for younger children.

OFFICIAL PRODUCT OVERVIEW VIDEO

Your browser does not support the video tag.

This video provides a brief overview of the Funko Pop! Cheshire Cat figure, demonstrating its unboxing, assembly of the base, and overall appearance. It highlights the semi-translucent design and the figure's iconic grin.

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or additional support, please refer to the documentation included with your purchase or visit the official Funko website. Contact details for Funko can typically be found on their corporate website or on the product packaging.

Manufacturer: Funko

Website: www.funko.com

