

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [chicco](#) /

› **Chicco Take-A-Seat Booster Seat - Instruction Manual**

**chicco 00079727840070**

# Chicco Take-A-Seat Booster Seat - Instruction Manual

Model: 00079727840070

## INTRODUCTION

The Chicco Take-A-Seat 3-in-1 Travel Seat is a versatile seating solution designed to grow with your child. It functions as a chair booster, a floor seat, and a toddler chair, making it suitable for various situations at home or while traveling. This manual provides essential information for the safe and proper use, assembly, maintenance, and troubleshooting of your Chicco Take-A-Seat.



Image: The Chicco Take-A-Seat Booster Seat, showcasing its compact and functional design in Grey Star.

## SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Keep this manual for future reference. Failure to follow these instructions could result in serious injury.

- Always use the safety harness to secure your child in the seat.
- Never leave your child unattended in the seat.
- Ensure the seat is securely attached to an adult chair when used as a booster.
- Do not use on unstable surfaces.
- Maximum weight capacity: 50 lbs (approximately 22.7 kg).
- Regularly inspect the seat for any signs of wear or damage. Discontinue use if damaged.
- Keep away from heat sources.

## SETUP AND ASSEMBLY

### Unpacking and Initial Inspection

Carefully remove all components from the packaging. Verify that all parts are present and undamaged. Refer to the parts list (not provided in this manual, but typically found in a physical manual).

### Converting Between Modes (Booster, Floor, Toddler Chair)

The Chicco Take-A-Seat is designed for easy conversion between its three primary modes:

- 1. Booster Seat Mode:** For use on an adult dining chair. Ensure the seat's legs are extended and locked. Use the integrated straps to secure the booster to the adult chair.
- 2. Floor Seat Mode:** For use directly on the floor. Ensure the seat's legs are extended and locked, providing a stable base for your child to sit upright during playtime.
- 3. Toddler Chair Mode:** As your child grows, the tray and harness can be removed to convert the unit into a standalone toddler chair. This mode supports children up to 50 lbs.



Image: The Chicco Take-A-Seat configured as a toddler chair, suitable for older children.

## Adjusting Height

The seat features 3 height positions to accommodate different table heights or child sizes. Locate the height adjustment mechanisms on the side legs and adjust simultaneously until the desired height clicks into place.



Image: A side view illustrating the adjustable height positions of the Chicco Take-A-Seat.

## OPERATING INSTRUCTIONS

### Using as a Chair Booster

To use the Take-A-Seat as a booster on an adult chair:

1. Place the booster seat on a sturdy, stable adult chair.
2. Locate the attachment straps on the booster seat.

3. Securely fasten the straps around the backrest and underneath the seat of the adult chair. Ensure all straps are taut and the booster seat does not move.
4. Place your child in the booster seat and fasten the adjustable three-point harness. Ensure the harness is snug but comfortable.
5. Attach the tray if needed (see "Tray Attachment and Removal").





Image: The Chicco Take-A-Seat securely fastened to an adult chair, ready for use as a booster.



Image: A child comfortably seated in the Chicco Take-A-Seat booster, positioned at a dining table.

## Using as a Floor Seat

For use as a standalone floor seat:

- Place the seat on a flat, level, and stable floor surface.
- Ensure the legs are fully extended and locked for stability.
- Place your child in the seat and secure the three-point harness.
- Attach the tray for feeding or play, if desired.



Image: A child enjoying playtime while seated in the Chicco Take-A-Seat on the floor.

## Tray Attachment and Removal

The removable tray provides a convenient surface for meals or activities. To attach, align the tray with the slots on the armrests and slide it into place until it clicks. To remove, press the release buttons (typically located underneath or on the sides of the tray) and slide the tray off.

## Folding for Storage and Travel

The Chicco Take-A-Seat features a compact fold for easy storage and portability. Follow the instructions in your product's specific manual for folding mechanisms, which usually involve releasing leg locks and collapsing the frame. Once folded, use the integrated carry strap for convenient transport.





Image: The Chicco Take-A-Seat in its folded position, highlighting its portability.

## MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and hygiene of your Chicco Take-A-Seat.

- Seat Pad:** The seat pad is wipeable and machine washable. For machine washing, use cold water on a delicate cycle. Do not use bleach, spray, or wipes on the pad or plastic parts. Air dry or tumble dry on low heat.
- Plastic Parts:** Wipe clean with a damp cloth and mild soap. Rinse thoroughly and air dry.
- Harness Straps:** Wipe clean with a damp cloth.
- Tray:** The tray can be wiped clean with a damp cloth or washed with mild dish soap and water.
- Storage:** Store the seat in a clean, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Tray is difficult to attach or remove.	Incorrect alignment or release buttons not fully pressed.	Ensure the tray is aligned correctly with the armrest slots. Press both release buttons firmly and simultaneously when removing.
Booster seat feels unstable on adult chair.	Straps are not tight enough or adult chair is unsuitable.	Ensure all attachment straps are pulled taut and securely fastened around the adult chair. Use only on sturdy, stable adult chairs with appropriate dimensions.
Harness is too tight or too loose.	Harness not adjusted properly.	Adjust the harness straps to fit snugly around your child, ensuring two fingers can fit between the strap and your child's body.
Seat does not fold compactly.	Folding mechanisms not fully disengaged.	Refer to the specific folding instructions in your product manual to ensure all locks are released before attempting to fold.

## SPECIFICATIONS

**Model Number:** 00079727840070

**Brand:** Chicco

**Color:** Grey Star

**Material Composition:** Plastic, metal, fabric

**Maximum Weight Capacity:** 50 Pounds (approx. 22.7 kg)

**Product Dimensions:** 44.45 x 40.01 x 40.01 cm (17.5 x 15.75 x 15.75 inches)

**Item Weight:** 2.72 kg (6 Pounds)

**Portable:** Yes

**Assembly Required:** Yes

**Care Instructions:** Machine washable (seat pad)

**Additional Features:** Converts to Booster Seat, Converts to Youth Seat, Folds for Easy Transport and Storage, Machine Washable Seat Pad, Safety Harness

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your purchase or visit the official Chicco website. Keep your proof of purchase for any warranty claims.

**Manufacturer:** Artsana USA, Inc.

© 2024 Chicco. All rights reserved.