

**Tefal 9100029276**

# Tefal Grill Gourmet Minute 2000 Watt Grill and Toaster Instruction Manual

Model: 9100029276

## INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Tefal Grill Gourmet Minute. Please read these instructions carefully before first use and keep them for future reference.

The Tefal Grill Gourmet Minute is a 2000 Watt grill and toaster with a stainless steel exterior. It features 5-level temperature control and an integrated timer, allowing for precise cooking of various foods, including up to 6 slices simultaneously.

## SAFETY INSTRUCTIONS

- Always ensure the appliance is placed on a stable, heat-resistant surface.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children.
- Unplug the appliance from the power outlet when not in use and before cleaning.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid touching hot surfaces. Use handles or knobs.
- Ensure proper ventilation around the appliance during use.
- This appliance is intended for household use only.

## PRODUCT OVERVIEW

Familiarize yourself with the components of your Tefal Grill Gourmet Minute.



**Figure 1:** The Tefal Grill Gourmet Minute in its closed position, showcasing the stainless steel lid and control panel.



**Figure 2:** The grill opened, revealing the non-stick grill plates ready for use.



**Figure 3:** Detailed view of the control panel, including the timer dial (0-30 minutes), temperature control knob (5 levels), and 'Ready' and 'Power' indicator lights.



**Figure 4:** Close-up of the integrated drip tray, designed to collect excess fats and liquids during cooking.

## SETUP

---

1. **Unpacking:** Carefully remove the appliance and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wipe the grill plates with a damp cloth. Ensure they are completely dry. The drip tray should also be washed with warm, soapy water and dried thoroughly.
3. **Placement:** Place the grill on a flat, stable, and heat-resistant surface, away from walls and other heat-sensitive objects. Ensure there is adequate space for ventilation.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. The 'Power' indicator light will illuminate.

## OPERATING INSTRUCTIONS

---

### Preheating the Grill

1. Close the grill plates.
2. Turn the temperature control knob to your desired heat setting (1-5).
3. Allow the grill to preheat. The 'Ready' indicator light will turn on when the desired temperature is reached. This typically takes 5-10 minutes depending on the selected temperature.

### Grilling Food

1. Once preheated, carefully open the grill.
2. Place your food (e.g., sandwiches, meat, vegetables) onto the bottom grill plate. Avoid overcrowding.
3. Close the top grill plate. The floating hinge system allows for even pressure on various food thicknesses.
4. Set the timer knob to the desired cooking duration (up to 30 minutes). The grill will automatically turn off when the timer expires. If no timer is set, monitor cooking manually.
5. Monitor the cooking process. Adjust the temperature or cooking time as needed.
6. When cooking is complete, carefully open the grill and remove the food using heat-resistant utensils. Do not use metal utensils that could scratch the non-stick coating.
7. Unplug the appliance after use.



**Figure 5:** The grill in operation, demonstrating its capacity to cook multiple sandwiches simultaneously.

## MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your appliance.

1. **Cool Down:** Always allow the grill to cool completely before cleaning.
2. **Unplug:** Ensure the appliance is unplugged from the power outlet.
3. **Drip Tray:** Remove and empty the drip tray. Wash it with warm, soapy water and dry thoroughly.
4. **Grill Plates:** Wipe the non-stick grill plates with a soft, damp cloth or sponge. For stubborn residue, use a plastic scraper or a small amount of warm, soapy water. Do not use abrasive cleaners, scouring pads, or metal utensils, as these can damage the non-stick coating.
5. **Exterior:** Wipe the exterior stainless steel and plastic surfaces with a damp cloth. Dry thoroughly.
6. **Storage:** Once clean and dry, the grill can be stored in a cool, dry place. The power cord can be wrapped around the base for compact storage.

**Note:** The grill plates are fixed and not removable for washing. Always clean them in place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into a working electrical outlet. Check the circuit breaker.
Grill not heating up.	Temperature knob set too low; appliance not preheated.	Increase the temperature setting. Allow sufficient time for preheating until the 'Ready' light illuminates.
Food sticks to grill plates.	Plates not properly cleaned; insufficient oil/butter; damaged non-stick coating.	Ensure plates are clean before use. Lightly brush food or plates with cooking oil. Avoid using metal utensils.
Smoke or unusual odor during first use.	Protective coating burning off.	This is normal for the first use. Ensure good ventilation. If smoke persists, unplug and contact customer support.

If you encounter issues not listed here, or if the problem persists, please contact Tefal customer support.

SPECIFICATIONS

- Brand:** Tefal
- Model Number:** 9100029276
- Power:** 2000 Watts
- Voltage:** 220 Volts
- Material:** Stainless Steel (Exterior)
- Color:** Black
- Product Dimensions (L x W x H):**35.3 cm x 18.3 cm x 18 cm
- Weight:** Approximately 4.92 kg (Package Weight)
- Features:** 5-level temperature control, Integrated timer, Non-stick grill plates, Drip tray, Floating hinge system.





**Figure 6:** Dimensional overview of the Tefal Grill Gourmet Minute, indicating length, width, and height.







## WARRANTY AND SUPPORT

Your Tefal Grill Gourmet Minute is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical assistance, spare parts, or warranty claims, please contact Tefal customer service. Contact information can typically be found on the official Tefal website or on your product packaging.

**Online Support:** Visit the official [Tefal Store](#) for product information and support resources.



	<p><a href="#">Tefal Easy Fry Grill &amp; Steam: Versatile 3-in-1 Air Fryer, Grill, and Steamer Guide</a></p> <p>Discover the Tefal Easy Fry Grill &amp; Steam, a 3-in-1 kitchen appliance that combines air frying, grilling, and steaming. This guide covers product features, accessories, digital touchscreen functions, cooking programs, and usage tips for healthy and delicious meals.</p>
	<p><a href="#">Tefal OptiGrill User Manual: Your Guide to Effortless Grilling</a></p> <p>Discover the Tefal OptiGrill with this comprehensive user manual. Find detailed instructions on setup, operation, safety, cleaning, and troubleshooting for your smart electric grill. Master effortless home grilling with the OptiGrill.</p>
	<p><a href="#">Tefal Easy Fry Oven &amp; Grill FW501827 User Manual and Guide</a></p> <p>Comprehensive user manual for the Tefal Easy Fry Oven &amp; Grill (Model FW501827). Find instructions on safe operation, cooking modes, cleaning, and troubleshooting.</p>
	<p><a href="#">Tefal OptiGrill Elite User Manual</a></p> <p>Comprehensive user manual for the Tefal OptiGrill Elite, covering setup, operation, safety precautions, and maintenance for optimal grilling results.</p>
	<p><a href="#">Tefal OptiGrill XL Instructions for Use</a></p> <p>Comprehensive instructions for using the Tefal OptiGrill XL intelligent grill, covering preparation, pre-heating, cooking, cleaning, and troubleshooting.</p>
	<p><a href="#">Tefal Avanti Classic Toaster: User Manual and Safety Guide</a></p> <p>Comprehensive user manual for the Tefal Avanti Classic toaster, covering safety instructions, operating procedures, cleaning, and storage. Learn how to toast, reheat, and defrost bread safely and effectively.</p>