

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [VMAI](#) /

> [VMAI S4 2.1 Sound Bar with Built-in Subwoofer User Manual](#)

## VMAI VMAI S4

# VMAI S4 2.1 Sound Bar User Manual

Model: VMAI S4 | Brand: VMAI

## INTRODUCTION

Thank you for choosing the VMAI S4 2.1 Sound Bar. This sound bar is designed to enhance your audio experience with powerful sound and deep bass from its built-in subwoofer. This manual provides essential information for setting up, operating, and maintaining your device to ensure optimal performance.



Image: The VMAI S4 2.1 Sound Bar and its accompanying subwoofer, showcasing its sleek design.

## PRODUCT FEATURES

- **2.1 Channel Audio:** Delivers clear highs, rich mids, and powerful bass.
- **Built-in Dual Subwoofer:** Provides enhanced bass performance without the need for an external unit.
- **Bluetooth 5.0 Connectivity:** Seamless wireless streaming from compatible devices.

- **Touch Panel Controls:** Convenient controls directly on the sound bar.
- **Remote Control:** Full control over functions from a distance.
- **Multiple Sound Modes:** Optimized audio presets for various content types (e.g., Movie, Music, News).
- **Versatile Connectivity:** Supports HDMI ARC, Optical, AUX, and USB inputs.
- **Wall-Mountable Design:** Flexible placement options for any room.

## PACKAGE CONTENTS

---

Please check to ensure all items are present in the package:

- VMAI S4 Sound Bar
- Remote Control
- Power Adapter
- Optical Cable
- AUX Cable
- Wall Mount Kit (screws, anchors, mounting template)
- User Manual (this document)

## SETUP

---

### 1. Placement

Place the sound bar on a stable, flat surface in front of your TV, ensuring it does not block the TV's remote sensor. Alternatively, you can wall-mount the sound bar using the provided wall mount kit. Refer to the wall mounting instructions included with the kit for detailed steps.

### 2. Power Connection

1. Connect the power adapter to the DC IN port on the back of the sound bar.
2. Plug the other end of the power adapter into a wall outlet.
3. The sound bar will enter standby mode, indicated by a red LED light.

## CONNECTING TO AUDIO SOURCES

---

### 1. Optical Connection (Recommended for best audio quality)

1. Remove the protective caps from both ends of the optical cable.
2. Connect one end of the optical cable to the OPTICAL OUT port on your TV.
3. Connect the other end to the OPTICAL IN port on the sound bar.
4. On your TV's audio settings, select "Optical" or "External Speaker" as the audio output.
5. Press the **OPT** button on the remote control or the sound bar's touch panel to select Optical input.

### 2. HDMI ARC Connection (If your TV supports HDMI ARC)

1. Connect an HDMI cable (not included) from the HDMI ARC port on your TV to the HDMI ARC port on the sound bar.
2. On your TV's audio settings, enable "HDMI ARC" and select "External Speaker" as the audio output.
3. Press the **HDMI** button on the remote control or the sound bar's touch panel to select HDMI ARC input.

### 3. Bluetooth Connection

1. Power on the sound bar.
2. Press the **BT** button on the remote control or the sound bar's touch panel to select Bluetooth mode. The LED indicator will

flash blue.

3. On your mobile device, enable Bluetooth and search for available devices.
4. Select "VMAI S4" from the list. Once paired, the LED indicator will turn solid blue.
5. You can now stream audio wirelessly from your device to the sound bar.

#### 4. AUX Connection

1. Connect one end of the 3.5mm AUX cable to the AUX OUT port on your device (e.g., smartphone, MP3 player).
2. Connect the other end to the AUX IN port on the sound bar.
3. Press the **AUX** button on the remote control or the sound bar's touch panel to select AUX input.

## OPERATING INSTRUCTIONS

---

### Power On/Off

Press the **POWER** button on the remote control or the sound bar's touch panel to turn the unit on or off.

### Volume Control

Use the **VOL+** and **VOL-** buttons on the remote control or the sound bar to adjust the volume. Press **MUTE** to temporarily silence the audio.

### Input Selection

Press the **INPUT** button on the remote control or the sound bar's touch panel repeatedly to cycle through available input sources (Optical, HDMI ARC, Bluetooth, AUX).

### Sound Modes

Press the dedicated sound mode buttons on the remote control (e.g., **MOVIE**, **MUSIC**, **NEWS**) to select an optimized audio profile for your content.

## MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to clean the surface of the sound bar. Do not use liquid cleaners or abrasive materials.
- **Storage:** If storing the sound bar for an extended period, disconnect it from power and store it in a cool, dry place.
- **Avoid Obstructions:** Ensure the sound bar's speakers are not obstructed to maintain optimal sound quality.

## TROUBLESHOOTING

---

| Problem                          | Possible Solution  |
|----------------------------------|--|
| No sound from the sound bar.     | Ensure the sound bar is powered on and not muted.<br>Verify the correct input source is selected on the sound bar.<br>Check all cable connections (Optical, HDMI, AUX) are secure.<br>Adjust the volume on both the sound bar and your TV/device.<br>On your TV's audio settings, ensure "External Speaker" or the correct digital output is selected. |
| Distorted or poor sound quality. | Check cable connections for damage or looseness.<br>Try a different audio source or cable.<br>Adjust the volume to prevent clipping.<br>Ensure no objects are blocking the sound bar's speakers.   |

| Problem                     | Possible Solution   |
|-----------------------------|---|
| Remote control not working. | Replace the batteries in the remote control.<br>Ensure there are no obstructions between the remote and the sound bar.<br>Point the remote directly at the sound bar's remote sensor.   |
| Bluetooth pairing issues.   | Ensure the sound bar is in Bluetooth pairing mode (flashing blue LED).<br>Disable and re-enable Bluetooth on your device.<br>Forget "VMAI S4" from your device's Bluetooth list and try pairing again.<br>Move your device closer to the sound bar. |

## SPECIFICATIONS

---

- **Model Number:** VMAI S4
- **Brand:** VMAI
- **Audio Channels:** 2.1
- **Special Feature:** Built-in Subwoofer
- **Connectivity:** Bluetooth 5.0, Optical, HDMI ARC, AUX
- **Compatible Devices:** Television, Smartphones, Tablets, Computers
- **Max Number of Supported Devices:** 1 (direct connection)
- **Color:** Black
- **Item Weight:** 1.41 ounces (Sound Bar only, approximate)
- **Package Dimensions:** 5.43 x 1.73 x 0.59 inches (approximate)
- **Date First Available:** January 10, 2021

## WARRANTY AND SUPPORT

---

For warranty information and technical support, please refer to the warranty card included in your package or visit the official VMAI website. Do not attempt to repair the device yourself, as this may void your warranty.