

[Manuals.plus](#) /

› [Aigostar](#) /

› Aigostar Olaf Air Cooler (Model 330100TRA) Instruction Manual

Aigostar Olaf (330100TRA)

Aigostar Olaf Air Cooler Instruction Manual

Model: Olaf (330100TRA)

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance. Keep this manual for future reference.

- Always ensure the appliance is placed on a stable, level surface.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Unplug from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Keep the appliance out of reach of children.
- Do not block air inlets or outlets.
- Use only clean water in the water tank. Do not add any chemicals or additives.
- Ensure the water tank is properly seated before operating.
- Do not use the appliance without water in the tank when the cooling function is active.

PRODUCT OVERVIEW

The Aigostar Olaf Air Cooler is designed to provide a comfortable environment through evaporative cooling. It features multiple modes, speeds, and a convenient timer function.

Key Components

- Control Panel
- Air Outlet Grille
- Water Tank (3.5L capacity)
- Cooling Curtain (Honeycomb filter)
- Wheels for mobility
- Remote Control
- Ice Packs (2 included)



Figure 1: Main unit of the Aigostar Olaf Air Cooler.

SETUP

1. **Unpacking:** Carefully remove the air cooler from its packaging. Ensure all components, including the remote control and ice packs, are present.
2. **Positioning:** Place the air cooler on a firm, level surface. The integrated wheels allow for easy movement.
3. **Filling the Water Tank:**
 - Pull out the water tank from the bottom rear of the unit.
 - Fill the tank with clean water up to the "MAX" line. Do not overfill.
 - For enhanced cooling, place the included ice packs in the freezer until frozen. Once frozen, add them directly into the water tank.
 - Slide the water tank back into the unit until it clicks into place.
4. **Power Connection:** Plug the power cord into a suitable electrical outlet (240V).
5. **Adjusting Air Outlet:** Manually adjust the horizontal louvers on the front grille to direct airflow.

Steps for Usage



Figure 2: Illustrated steps for water tank filling and ice pack insertion.

OPERATING INSTRUCTIONS

The Aigostar Olaf Air Cooler can be operated using the control panel on the top of the unit or the included remote control.

Control Panel



Figure 3: Multi-function touch control panel.

- **ON/OFF:** Press to turn the unit on or off.
- **SPEED:** Press to cycle through fan speeds: Low, Mid, High.
- **TIMER:** Press to set the automatic shut-off timer. Each press adds 1 hour, up to a maximum of 6 hours.
- **MODE:** Press to select operating mode:
 - **Normal Mode:** Constant airflow at selected speed.
 - **Natural Mode:** Airflow varies to simulate a natural breeze.
 - **Sleep Mode:** Starts at selected speed, then automatically reduces to low speed after 30 minutes for quiet operation.
- **COOL:** Activates the evaporative cooling function. Ensure the water tank is filled before using this function.
- **SWING:** Activates the internal oscillation, moving the vertical louvers left and right by 65° for wider air distribution.

Remote Control

The remote control provides convenient operation from a distance of up to 6 meters. It replicates all functions available on

the control panel.



Figure 4: Remote control for the air cooler.

Modes and Speeds



Figure 5: Visual representation of wind speeds and modes.

Timer Function

The timer allows you to set the unit to automatically shut off after a specified period, up to 6 hours. This is useful for energy saving or for use during sleep.



Figure 6: Timer shutdown function in use.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your air cooler.

- **Cleaning the Water Tank:** The 3.5L water tank should be cleaned regularly to prevent mold and mildew growth. Remove the tank, empty any remaining water, and wash with mild soap and water. Rinse thoroughly.
- **Cleaning the Cooling Curtain/Filter:** The honeycomb cooling curtain and air filter should be cleaned periodically. Refer to the diagram in Figure 2 for location. Remove them and rinse under running water. Allow to air dry completely before reinserting.
- **Exterior Cleaning:** Wipe the exterior of the unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** If storing the unit for an extended period, ensure the water tank and cooling curtain are clean and dry. Store in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not turn on.	No power supply; Power cord not plugged in; Unit is off.	Check power outlet; Ensure power cord is securely plugged in; Press the ON/OFF button.
No cooling effect.	Water tank is empty; COOL function not activated; Cooling curtain is dry.	Fill water tank; Press the COOL button; Ensure cooling curtain is wet (may take a few minutes after filling).
Weak airflow.	Fan speed is too low; Air inlets/outlets are blocked; Filter is dirty.	Increase fan speed; Clear any obstructions; Clean the air filter and cooling curtain.
Unpleasant odor.	Stagnant water in tank; Dirty cooling curtain.	Empty and clean the water tank thoroughly; Clean or replace the cooling curtain.

SPECIFICATIONS

Model Name:	Olaf
Model Number:	330100TRA
Brand:	Aigostar
Dimensions (L x W x H):	26.5 x 23 x 57 cm
Weight:	5.37 kg
Material:	Plastic
Water Tank Capacity:	3.5 Liters
Power:	60 Watts
Voltage:	240 Volts
Number of Speeds:	3
Special Features:	Timer, Remote Control, Oscillation



Figure 7: Product dimensions.

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Aigostar customer service. Details can typically be found on the product packaging or the official Aigostar website.

Please have your model number (330100TRA) and purchase date ready when contacting support.

