

tectake Aurelia 403630

tectake Aurelia Folding Sun Lounger Instruction Manual

Model: Aurelia 403630

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use, setup, operation, and maintenance of your tectake Aurelia Folding Sun Lounger. Please read this manual thoroughly before using the product and retain it for future reference.

2. SAFETY INFORMATION

- **Maximum Load Capacity:** Do not exceed the maximum weight of 120 kg (264 lbs). Overloading can cause damage to the lounger and lead to injury.
- **Safe Use:** Always ensure the lounger is fully unfolded and stable on a flat, even surface before use.
- **Edges and Caps:** Be aware of rounded edges and plastic caps on the feet. Ensure all caps are securely in place to prevent damage to surfaces and for user safety.
- **Children:** Keep children away from moving parts during adjustment and folding to prevent pinching or injury.
- **Weather Conditions:** While weather-resistant, it is recommended to fold and store the lounger during extreme weather conditions (strong winds, heavy rain) to prolong its lifespan.

3. PRODUCT COMPONENTS

Your tectake Aurelia Folding Sun Lounger consists of the following main components:

- Aluminum Frame
- Synthetic Fiber Upholstery (Seat and Backrest)
- Adjustable Backrest Mechanism
- Adjustable Parasol

- Plastic Feet Stoppers
- Integrated Headrest Cushion

4. SETUP AND UNFOLDING

The tectake Aurelia Sun Lounger comes pre-assembled and requires no complex setup. To unfold the lounger:

1. Place the folded lounger on a flat, stable surface.
2. Gently pull the two main sections apart until the legs extend and lock into place.
3. Ensure all three sets of legs are fully extended and stable before sitting on the lounger.

To fold the lounger for storage or transport, reverse these steps, ensuring all locking mechanisms are disengaged before collapsing the frame.



The image above illustrates the sun lounger in its ready-to-use state and also shows its compact folded form for easy transport.

5. OPERATING INSTRUCTIONS

5.1. Adjusting the Backrest

The backrest can be adjusted to 6 different positions for personalized comfort.

1. To adjust, slightly lift the backrest.
2. Move the backrest to the desired angle, allowing the support bar to engage with one of the 6 notches on the frame.
3. Ensure the backrest is securely locked into position before leaning back.




This diagram demonstrates how to adjust the sun lounger. The backrest can be moved through 6 different positions to achieve optimal comfort. The parasol is also movable, allowing you to position it for desired shade.

5.2. Adjusting the Parasol

The integrated parasol provides adjustable shade.

1. Loosen the adjustment knobs on either side of the parasol.
2. Position the parasol to your preferred angle for sun protection.
3. Tighten the adjustment knobs to secure the parasol in place.

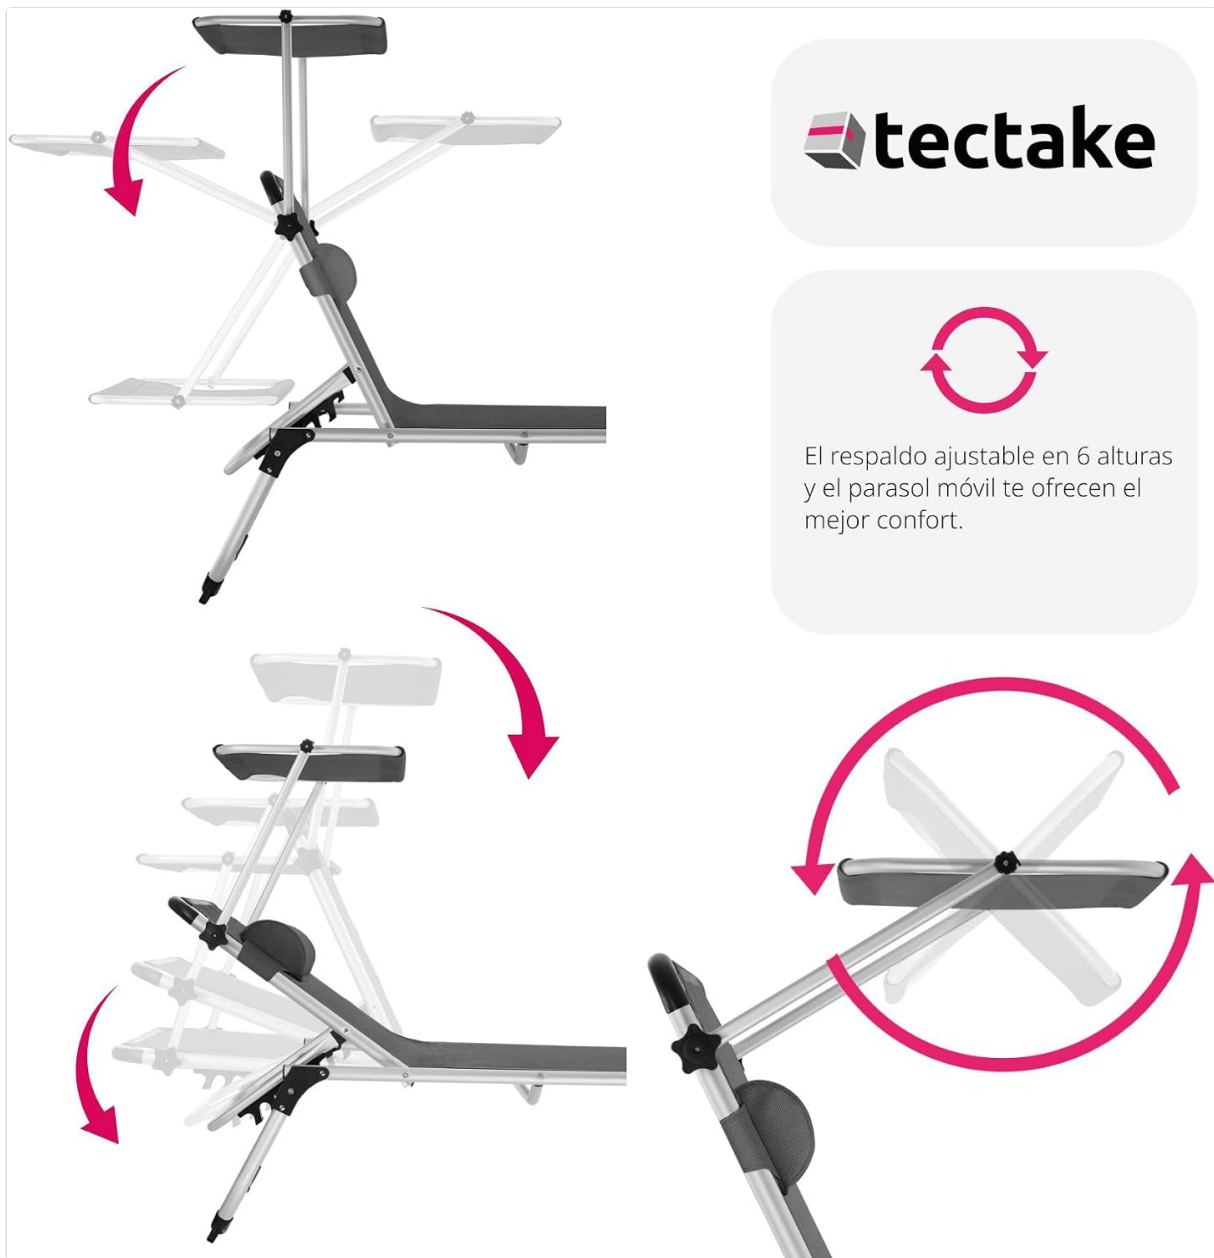

This image provides detailed views of the sun lounger's construction, including the adjustable backrest mechanism and the adjustable parasol attachment.


6. MAINTENANCE AND CARE

To ensure the longevity and appearance of your sun lounger, follow these care instructions:

- **Cleaning the Fabric:** The synthetic fiber upholstery is easy to clean. Use a damp cloth with mild soap and water to wipe down the surface. Avoid harsh chemicals or abrasive cleaners.
- **Frame Care:** The aluminum frame is resistant to rust. Wipe with a damp cloth as needed.
- **Storage:** When not in use for extended periods, especially during off-season or adverse weather, fold the lounger and store it in a dry, protected area to prevent unnecessary wear and tear.
- **Inspection:** Periodically check all screws, bolts, and plastic caps to ensure they are secure. Tighten if necessary.



1. Asiento ajustable en 6 alturas

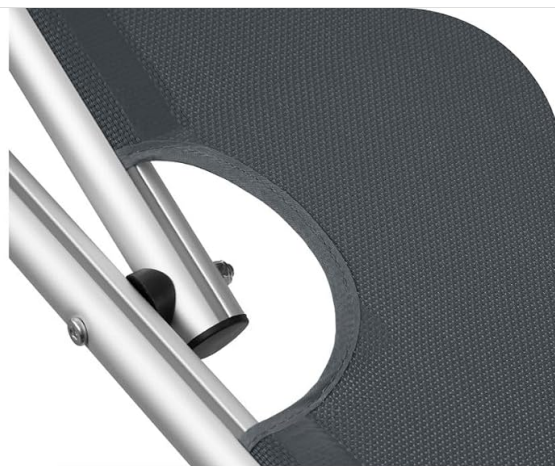

2. Estructura de aluminio inoxidable



3. Parasol ajustable



4. Topes de plástico en las patas

The image shows a close-up of the sun lounger's resistant, anti-tear upholstery. The fabric is highly breathable and easy to clean, as demonstrated by water droplets beading on its surface, indicating its water-resistant properties.

7. TROUBLESHOOTING

Most issues with the tectake Aurelia Sun Lounger can be resolved with simple checks:

- **Lounger feels unstable:** Ensure all legs are fully extended and locked into position. Check that the lounger is on a flat, even surface.
- **Backrest not holding position:** Verify that the support bar is correctly engaged in one of the 6 notches. If the mechanism feels loose, inspect for any obstructions or damage.
- **Difficulty folding/unfolding:** Ensure no parts are obstructed. Apply gentle, even pressure. Do not force the mechanism.

If you encounter persistent issues not covered here, please contact customer support.

8. SPECIFICATIONS

Brand	tectake
-------	---------

Model Name	Aurelia
Model Number	403630
Color	Grey
Overall Dimensions (L x W x H)	Approx. 200 cm x 60.5 cm x 111 cm (max height)
Lying Surface (W x L)	Approx. 56 cm x 209 cm
Product Weight	Approx. 6 kg
Maximum Load Capacity	120 kg
Frame Material	Aluminum
Upholstery Material	Synthetic Fiber (Polyester)
Backrest Positions	6
Assembly Required	No (Pre-assembled, only unfolding)
Foldable	Yes
Recommended Use	Outdoor, Sunbathing

MEDIDAS




Superficie
aprox. 56 x 209 cm



Peso
aprox. 6 kg

Capacidad de carga
120 kg

 **tectake**

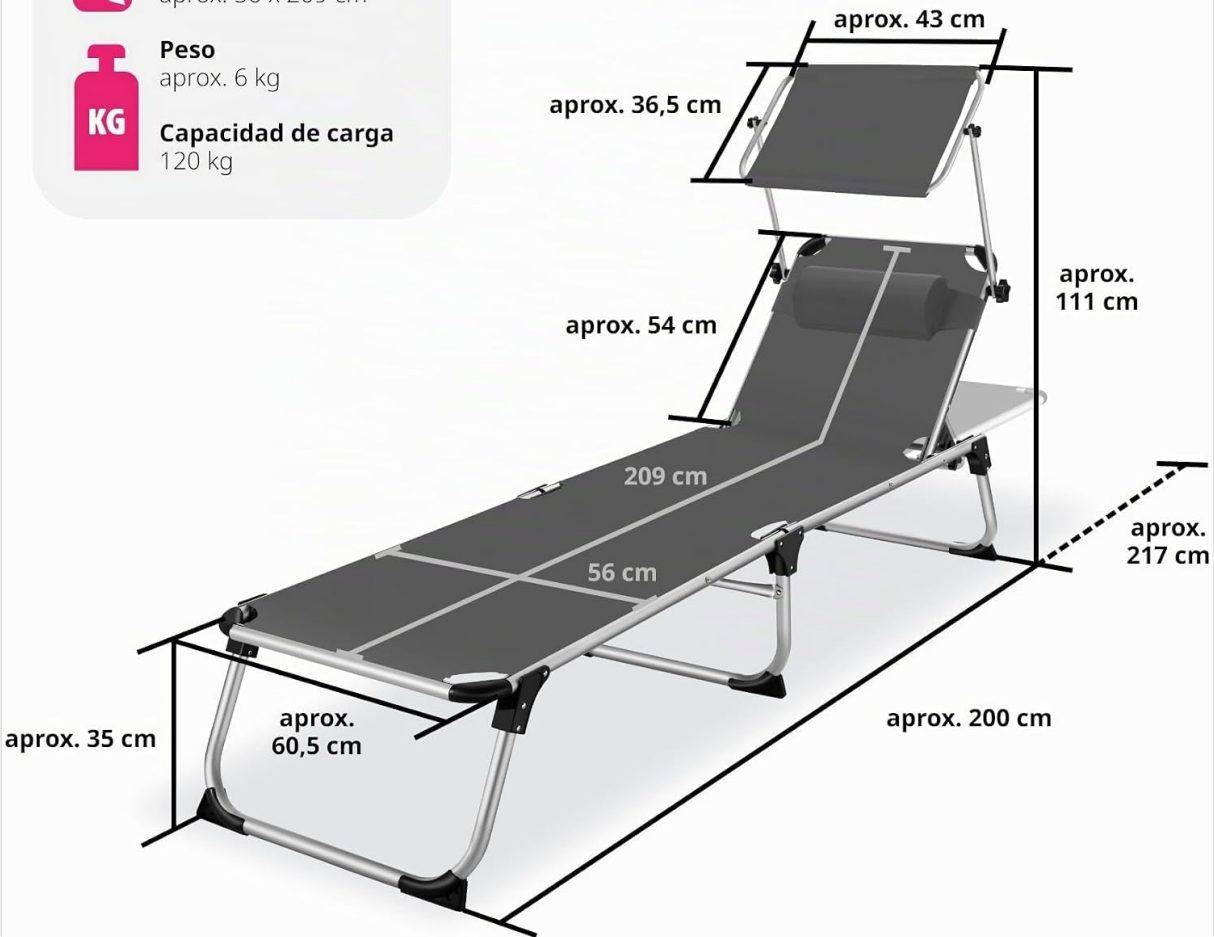 

This diagram illustrates the key measurements of the sun lounger: overall length approximately 200 cm, width approximately 60.5 cm, and height approximately 111 cm (at highest backrest position). The lying surface is approximately 56 x 209 cm. The product weighs approximately 6 kg and has a maximum load capacity of 120 kg.

9. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please refer to the original purchase documentation or contact tectake customer service directly. Contact details can typically be found on the manufacturer's website or your purchase receipt.

© 2024 tectake. All rights reserved.