

HCDZ RM-SUXH300R, UX-H330, UX-H300, UX-H330UX, CA-UXH330, SP-UXH330, CA-UXH300, SP-UXH300

HCDZ Replacement Remote Control User Manual

For JVC Micro Compact Component Speaker System Models: RM-SUXH300R, UX-H330, UX-H300, UX-H330UX, CA-UXH330, SP-UXH330, CA-UXH300, SP-UXH300

INTRODUCTION

This manual provides instructions for the HCDZ Replacement Remote Control, designed for use with various JVC Micro Compact Component Speaker Systems. This remote is an infrared (IR) replacement and requires no programming. Simply insert batteries to begin operation.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two (2) AA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.

Note: This remote control requires 2 AA batteries, which are not included. No programming is needed; the remote will function immediately after battery installation.



Image: Back of the remote control with the battery cover removed, illustrating the correct orientation for inserting two AA batteries.

OPERATING INSTRUCTIONS

Basic Operation

1. Ensure the remote has fresh batteries installed.
2. Point the remote control directly at the infrared sensor of your JVC Micro Compact Component Speaker System.
3. Press the desired function button (e.g., Power, Volume Up/Down, Play, Stop, Source) to control your device.

The maximum effective range for this remote control is approximately 10 meters (33 feet).



Image: Front view of the HCDZ replacement remote control, displaying its layout and buttons for various functions.

MAINTENANCE

- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent potential damage from leakage and corrosion.
- **Environment:** Do not expose the remote control to extremely hot or humid conditions. Avoid direct sunlight or strong lighting apparatuses on the remote sensor, as this may cause malfunction.
- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

TROUBLESHOOTING

Common Issues and Solutions

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AA alkaline batteries. Do not mix new and old batteries.

- Ensure there are no obstructions between the remote control and the device's IR sensor.
- Verify the remote is pointed directly at the device.
- **Intermittent operation or malfunction:**
 - Avoid exposing the remote sensor to direct sunlight or strong artificial light sources, as this can interfere with its operation.
 - Ensure the remote is within the 10-meter operating range.

SPECIFICATIONS

Feature	Detail
Brand	HCDZ
Compatible Devices	JVC Micro Compact Component Speaker Systems (RM-SUXH300R, UX-H330, UX-H300, UX-H330UX, CA-UXH330, SP-UXH330, CA-UXH300, SP-UXH300)
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Maximum Range	10 Meters (approx. 33 feet)
Number of Supported Devices	1
Batteries Required	2 x AA Alkaline (not included)
Special Feature	No programming needed; works out of the package

WARRANTY INFORMATION

This HCDZ replacement remote control comes with a **90-day warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects but does not cover damage caused by misuse, accidents, or unauthorized modifications.

CUSTOMER SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please contact the manufacturer, HCDZ, through your original point of purchase or their official support channels. Provide your product model number and a detailed description of the issue for efficient support.