

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Beko](#) /
- › [Beko DIS35023 Built-in Dishwasher User Manual](#)

Beko DIS35023

Beko DIS35023 Built-in Dishwasher User Manual

Model: DIS35023

1. INTRODUCTION

Thank you for choosing the Beko DIS35023 Built-in Dishwasher. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read these instructions carefully before using your dishwasher to ensure optimal performance and to prevent any damage or injury.

2. SAFETY INFORMATION

Always adhere to the following safety guidelines to prevent risks of fire, electric shock, injury, or damage to the appliance.

- **Electrical Safety:** Ensure the dishwasher is connected to a properly grounded outlet. Do not use extension cords. Disconnect power before any maintenance or cleaning.
- **Water Safety:** Ensure water connections are secure to prevent leaks. The appliance uses an Aquastop hose; if this hose is damaged, replace it with an original Beko part.
- **Child Safety:** Keep children away from the dishwasher, especially when it is operating or when the door is open. Detergents are corrosive.
- **Loading Safety:** Load sharp items (knives, forks) with the sharp ends down to prevent injury. Do not overload the dishwasher.
- **Installation:** Installation must be performed by a qualified technician in accordance with local regulations.

3. SETUP AND INSTALLATION

The Beko DIS35023 is a fully integrated built-in dishwasher designed to fit seamlessly into your kitchen cabinetry. Professional installation is recommended.

3.1. Dimensions and Placement

- **Product Dimensions (D x W x H):** 56 cm x 45 cm x 81.8 cm. Ensure your cabinet opening matches these dimensions.

- **Weight:** Approximately 29 kg.
- **Cable Length:** 45 cm. Ensure the power outlet is within reach.

3.2. Water and Electrical Connections

Connect the dishwasher to both a cold water supply and a suitable drain. The appliance requires a 240 Volt electrical connection. The included Aquastop hose provides an additional layer of protection against leaks. Ensure all connections are tight and free from kinks.

3.3. Cabinet Panel Installation

A custom cabinet panel (not included) must be attached to the dishwasher door to match your kitchen decor. Follow the detailed instructions provided in the separate installation guide for proper panel mounting and alignment.

4. OPERATING INSTRUCTIONS

This section guides you through the daily use of your Beko DIS35023 dishwasher.

4.1. Loading the Dishwasher

The dishwasher is designed for 10 place settings. For optimal cleaning, ensure items are loaded correctly, allowing water to reach all surfaces.

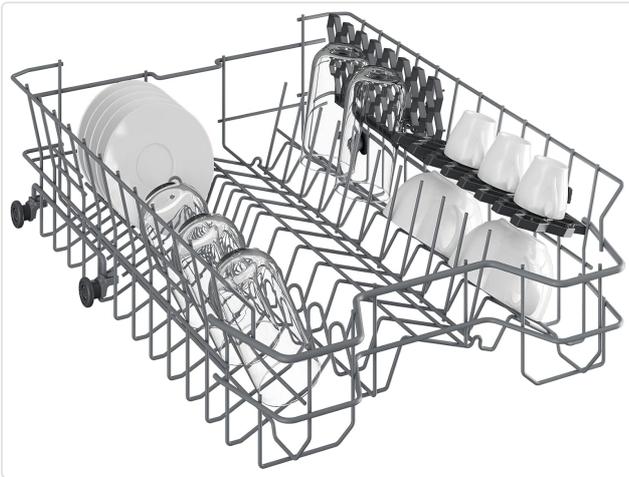


Image: Upper rack loaded with glasses and cups. Place smaller items, glasses, and cups in the upper rack.

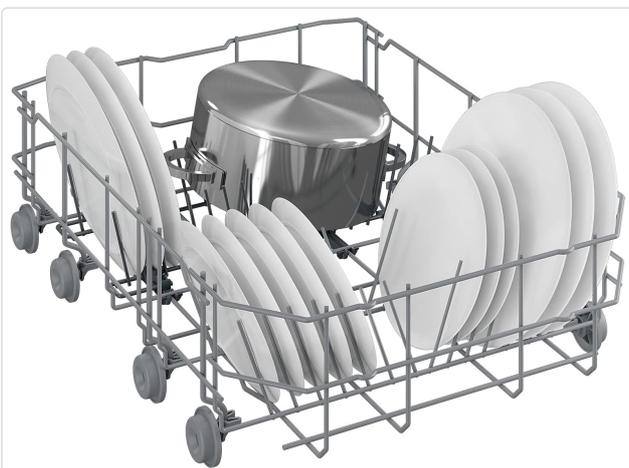


Image: Lower rack loaded with plates and pots. Larger items like plates,

bowls, and pots should be placed in the lower rack.

4.2. Adding Detergent and Rinse Aid

Open the detergent dispenser located on the inner side of the door. Add the appropriate amount of dishwasher detergent. If using rinse aid, ensure the rinse aid dispenser is filled to the indicated level.



Image: Detergent dispenser. Fill with dishwasher detergent before each wash cycle.

4.3. Selecting a Wash Program

The dishwasher features an LED display and offers 5 main wash programs and 4 optional cycles. Select the program best suited for your load:

- **Normal:** For daily soiled dishes.
- **Rapid:** For lightly soiled dishes that need a quick wash.
- **Intensive:** For heavily soiled pots, pans, and dishes.
- **Delicate:** For fragile items like glassware.
- **Rinse:** A pre-wash cycle to remove loose food particles.

Refer to the control panel for specific program selection and optional cycle activation.

5. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and efficiency of your dishwasher.

5.1. Cleaning the Filters

The filter system should be cleaned regularly to prevent food particles from recirculating and affecting wash performance. Twist and remove the cylindrical filter, then remove the fine filter underneath. Rinse both under running water. Reassemble and secure firmly.

5.2. Cleaning the Spray Arms

Check the spray arm nozzles for blockages. If any holes are clogged, use a thin object like a toothpick to clear them. Remove the spray arms by unscrewing them if necessary.

5.3. Refilling Salt and Rinse Aid

Monitor the salt and rinse aid indicators on your dishwasher. Refill with dishwasher salt and rinse aid as needed to ensure optimal cleaning and drying results, especially in hard water areas.

6. TROUBLESHOOTING

Before contacting service, try these common solutions for minor issues:

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue, door not closed properly	Check power connection, ensure door is latched securely.
Dishes not clean	Improper loading, clogged spray arms, insufficient detergent, dirty filters	Reload dishes, clean spray arms and filters, add more detergent.
Water not draining	Clogged drain hose or filter	Check and clear the drain hose and filters.
Excessive noise	Improper loading, foreign object in pump	Rearrange dishes, check for and remove any foreign objects.

7. SPECIFICATIONS

Feature	Specification
Model Name	DIS35023
Brand	Beko
Form Factor	Built-in
Installation Type	Integrated
Product Dimensions (D x W x H)	56P x 45l x 81.8H cm
Item Weight	29000 Grams (29 kg)
Voltage	240 Volt
Capacity	10 Place Settings
Number of Programs	5

Feature	Specification
Optional Cycles	4
Display Type	LED
Noise Level	49 Decibel
Material	Stainless steel
Included Components	Dish rack
Recommended Use	Dishware and daily cutlery

8. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your appliance or visit the official Beko website. If you require technical assistance or have questions not covered in this manual, please contact Beko customer support.

Beko Customer Service: Please refer to your regional Beko website for contact details.