

Southern Enterprises FR9316

Southern Enterprises FR9316 Electric Corner Fireplace User Manual

Model: FR9316

INTRODUCTION

This manual provides essential instructions for the safe operation, assembly, and maintenance of your Southern Enterprises FR9316 Electric Corner Fireplace. Please read all instructions carefully before use and retain this manual for future reference.

Important Safety Information

- Read all instructions before installing or using this fireplace.
- Do not operate any fireplace with a damaged cord or plug, or if the heater has malfunctioned or been dropped.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the fireplace is left operating and unattended.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- This fireplace is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.

PACKAGE CONTENTS

Verify that all components are present and undamaged before proceeding with assembly. If any parts are missing or damaged, contact Southern Enterprises customer support.

- Electric Fireplace Unit (FR9316)
- Remote Control
- Assembly Hardware Kit
- Instruction Manual

SETUP AND ASSEMBLY

Placement

This electric fireplace is designed for corner placement or against a flat wall. Ensure the chosen location is on a stable, level surface and near a standard 120V electrical outlet. Maintain adequate clearance from combustible materials as specified in the safety information.



Image: The FR9316 fireplace unit positioned in a room corner, showcasing its triangular design and integrated storage for media components and decorative items.

Assembly Steps

Assembly typically involves attaching the side storage cabinets and top panel to the main firebox unit. Follow the detailed diagrams and instructions provided in the separate assembly guide included with your hardware kit.

1. Unpack all components and lay them out on a soft, clean surface to prevent scratches.
2. Identify all hardware pieces and match them to the assembly guide.
3. Attach the side panels and shelves to the main firebox structure using the provided hardware.
4. Secure the top panel to the assembled unit.
5. Install any glass doors or decorative elements as instructed.
6. Carefully move the assembled fireplace to its desired location.



Image: A direct front view of the FR9316 fireplace, illustrating the layout of the central electric firebox and the two adjacent storage cabinets, useful for assembly reference.

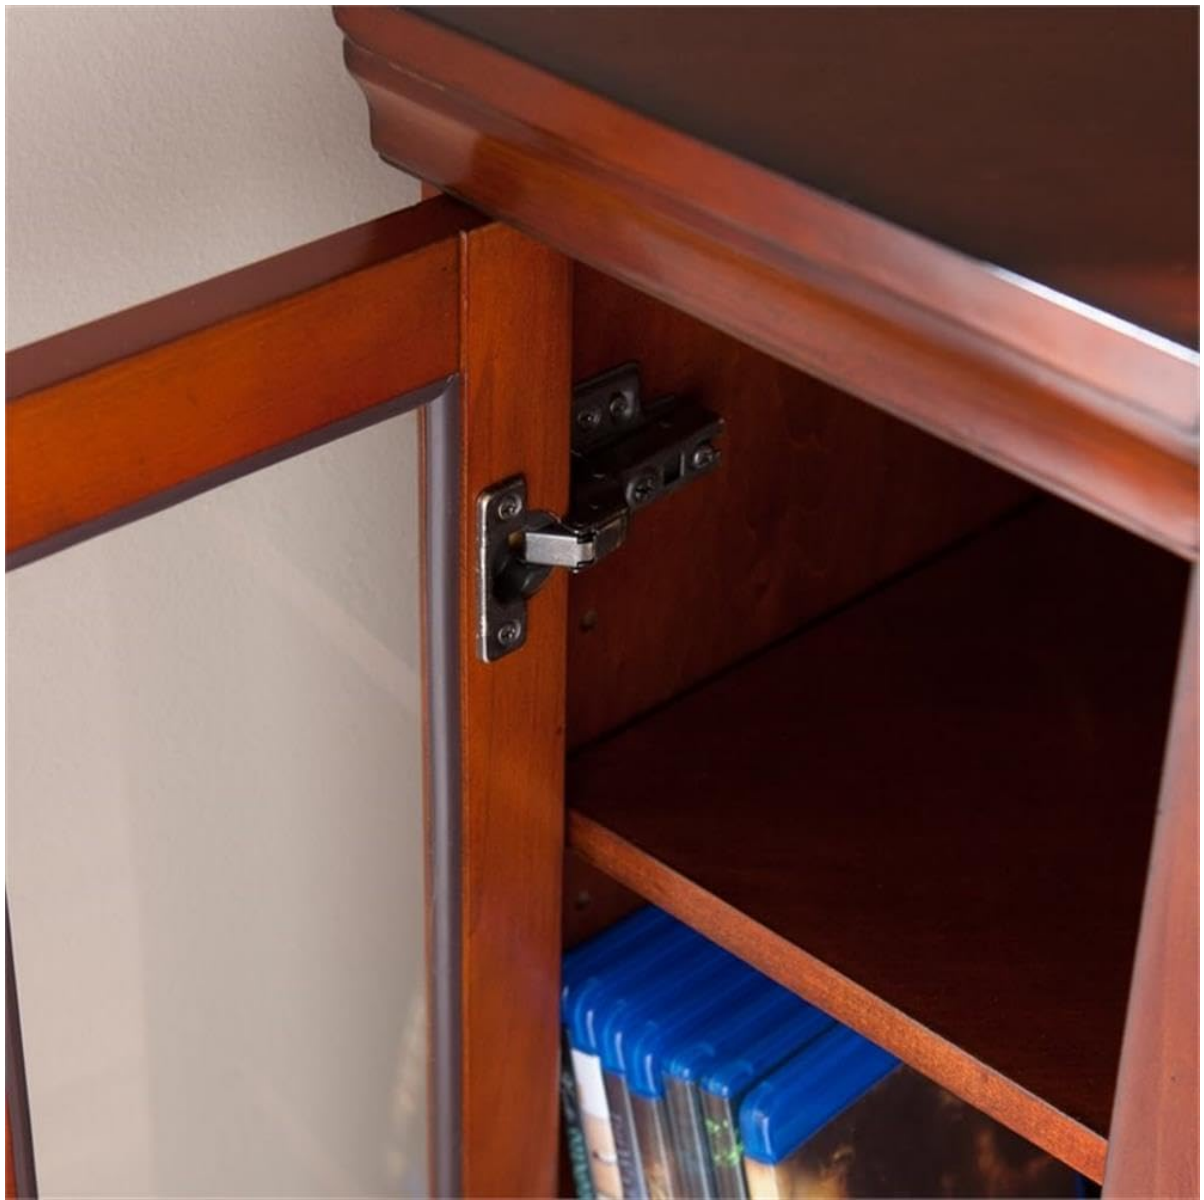


Image: A detailed view of the inside of one of the side storage cabinets, showing the adjustable shelf and the hinge mechanism of the glass door, demonstrating the storage capacity.

OPERATING INSTRUCTIONS

Your electric fireplace can be operated using the touch screen panel on the unit or the included remote control.



Image: The FR9316 fireplace in operation, showing the realistic flame effect and glowing logs within the firebox. The digital control panel is visible above the firebox, indicating operational status.

Powering On/Off

- **Touch Screen:** Press the power button on the touch screen panel to turn the unit on or off.
- **Remote Control:** Press the power button on the remote control.

Heat Function

The fireplace provides supplemental heat for a room up to 400 square feet.

- **Touch Screen:** Use the temperature control buttons on the touch screen to adjust the heat output.
- **Remote Control:** Use the temperature buttons on the remote to increase or decrease the heat setting.
- The heater can be used independently of the flame effect.

Flame Effects

Enjoy realistic flames and embers with or without heat.

- **Touch Screen:** Press the flame button to cycle through different flame brightness settings or turn the flame effect off.
- **Remote Control:** Use the flame button on the remote to adjust flame brightness.

Remote Control Operation

The remote control allows convenient operation from a distance. Ensure the remote has working batteries and is pointed towards the fireplace unit.

- **Power Button:** Turns the fireplace on or off.
- **Heat Buttons:** Adjusts the heat level.
- **Flame Button:** Cycles through flame brightness settings.
- Refer to the remote control's specific instructions for battery replacement.

MAINTENANCE

Cleaning

- Always disconnect power before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Clean the air intake and exhaust vents regularly to ensure proper airflow and prevent overheating. Use a vacuum cleaner with a brush attachment.
- Clean the glass panel with a soft cloth and a non-abrasive glass cleaner.

Storage

When not in use for extended periods, store the fireplace in a dry, dust-free location. If possible, cover the unit to protect it from dust and debris.

TROUBLESHOOTING

- **No Power:** Ensure the power cord is securely plugged into a working 120V outlet. Check the circuit breaker.
- **No Heat:** Verify the heat function is activated via the control panel or remote. Ensure air vents are not blocked. The unit may have an overheat protection feature that temporarily shuts off the heater. Allow it to cool down.
- **No Flame Effect:** Check if the flame effect is turned on. If the bulbs are LED, they are long-lasting, but if issues persist, contact support.
- **Remote Control Not Working:** Replace batteries in the remote control. Ensure there are no obstructions between the remote and the fireplace sensor.
- **Unusual Noises:** Minor fan noise is normal during heating operation. If loud or unusual noises occur, discontinue use and contact customer support.

SPECIFICATIONS

Model Number	FR9316
Brand	Southern Enterprises
Dimensions (H x W x D)	32.25" x 48" x 15.75"
Weight	126 lbs
Material	Poplar, engineered wood, birch veneer, tempered glass, metal, resin
Finish	Mahogany Brown

Heating Coverage	Up to 400 sq ft
Power Source	Corded Electric (Standard 120V outlet)
Special Features	Touch screen panel, remote control, LED bulbs, collapsible panel for versatile placement
Weight Capacity (Top)	85 lbs

WARRANTY AND CUSTOMER SUPPORT

For warranty information, product support, or to order replacement parts, please contact Southern Enterprises customer service directly. Refer to the contact information provided with your purchase documentation or visit the official Southern Enterprises website.