

Vornado Pivot6

Vornado Pivot6 Whole Room Air Circulator Fan Instruction Manual

Model: Pivot6 (CR1-0410-06)

1. INTRODUCTION

The Vornado Pivot6 is a compact and powerful air circulator designed to provide whole-room air movement. Utilizing Vornado's signature Vortex Action, this fan efficiently circulates air throughout your space, ensuring consistent comfort. Its modern design, intuitive controls, and multi-directional airflow capabilities make it suitable for various indoor environments.



Figure 1: Vornado Pivot6 Whole Room Air Circulator Fan

2. SAFETY INSTRUCTIONS

Please read all instructions before using this air circulator. Keep this manual for future reference.

- This product is intended for indoor use only.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- Always unplug the fan before cleaning or servicing.
- Do not immerse the fan in water or other liquids.
- Keep fingers or other objects out of the fan grille when in operation.
- This product is designed to meet U.S. voltage requirements and is certified, safety-tested, and warrantied for use only in the U.S.

3. SETUP

The Vornado Pivot6 requires minimal setup. It comes pre-assembled and ready for use.

1. **Placement:** Place the air circulator on a firm, level surface in a location where the airflow will not be obstructed. For optimal whole-room circulation, position the fan to direct air across the room, allowing it to bounce off walls and ceilings.
2. **Power Connection:** Plug the power cord into a standard 120V AC wall outlet.



Figure 2: Rear view showing power cord connection

4. OPERATING INSTRUCTIONS

The Pivot6 features intuitive touchpad controls on the unit and a convenient remote control for ease of use.

4.1 Power On/Off and Speed Control

Use the touchpad controls located on the top of the unit or the included remote control to operate the fan.

- **Power Button:** Press the power button () to turn the unit ON or OFF.
- **Speed Settings:** The fan has four speed settings. Press the speed button (on remote or fan icon on unit) repeatedly to cycle through the speeds (1, 2, 3, 4).

4.2 Multi-Directional Airflow (Adjustable Tilt)

The Pivot6 features a 360-degree adjustable axis, allowing you to direct airflow precisely where needed.

- Grasp the fan head firmly and gently pivot it to the desired angle. The sturdy base will hold the fan in position.



Figure 3: Adjusting the fan head tilt

4.3 Remote Control

The included remote control allows for convenient operation from a distance. Ensure a clear line of sight between the remote and the fan for optimal performance.

- **Power:** Press the power button to turn the fan ON/OFF.
- **Speed:** Use the speed buttons to adjust between the four airflow settings.

Video 1: Product Overview of the Vornado Pivot6 Air Circulator. This video demonstrates the fan's features and operation.

5. MAINTENANCE

Regular cleaning of your Vornado Pivot6 air circulator is recommended to maintain optimal performance.

5.1 Cleaning Instructions

- Always unplug the unit before cleaning.
- Use a soft, damp cloth to wipe the exterior of the fan.
- The front grille is removable for easy cleaning of the blades. To remove the grille, locate the small clips around the edge of the grille and gently pry them open.
- Use a soft brush or a vacuum cleaner with a brush attachment to remove any accumulated dust from the blades and inside the grille.
- Reattach the front grille by aligning the clips and pressing firmly until they snap into place.



**PIVOTING
HEAD**



**EASY-CLEAN
REMOVABLE GRILL**



**REMOTE
CONTROL**



Figure 4: Removable grille for easy cleaning

6. TROUBLESHOOTING

If your Vornado Pivot6 is not operating as expected, consult the following common issues and solutions:

Problem	Possible Cause	Solution
Unit fails to power on.	Power cord unplugged.	Plug power cord into electrical outlet.
	Household circuit breaker tripped.	Reset circuit breaker.
No airflow or weak airflow.	Air intake or outlet obstructed.	Remove obstruction.
	Fan blades are dirty.	Clean fan blades (refer to Maintenance section).
Remote control not working.	Batteries are dead or incorrectly installed.	Replace batteries or ensure correct polarity.

Problem	Possible Cause	Solution
	No clear line of sight to the fan's receiver.	Ensure remote is pointed directly at the fan.

7. SPECIFICATIONS


Brand	Vornado
Model Name	Pivot6
Item Model Number	CR1-0410-06
Color	Black
Product Dimensions	10.2"D x 11.9"W x 10.1"H
Item Weight	7 Pounds
Power Source	Corded Electric
Wattage	45 watts
Voltage	120.0 V
Noise Level	50 Decibels
Number of Power Levels	4
Control Method	Remote
Included Components	Fan, Owner's Guide
Motor Type	Brushless






8. WARRANTY AND SUPPORT

Vornado stands behind the quality of its products. The Vornado Pivot6 Air Circulator Fan comes with a **5-year manufacturer's warranty**.

If you encounter any issues with your product or require support, please refer to the contact information provided in your Owner's Guide or visit the official Vornado website for assistance.

Related Documents - Pivot6

	Vornado 184 Tower Air Circulator Owner's Guide - Features, Instructions, and Warranty Comprehensive owner's guide for the Vornado 184 Tower Air Circulator. Includes setup, operation, safety instructions, cleaning, maintenance, and warranty information.
---	---

	<p><u>Vornado Model 80 Whole Room Circulator Use & Care Guide</u></p> <p>Comprehensive use and care guide for the Vornado Model 80 Whole Room Circulator, detailing features, controls, cleaning procedures, troubleshooting tips, and warranty information.</p>
	<p><u>Vornado Model 753 OSC Whole Room Circulator Owner's Guide</u></p> <p>Owner's guide for the Vornado Model 753 OSC Whole Room Circulator, detailing safety instructions, features, operation, remote control, cleaning, troubleshooting, and warranty information.</p>
	<p><u>Vornado 293HD Whole Room Circulator Owner's Guide and Safety Instructions</u></p> <p>Comprehensive owner's guide for the Vornado 293HD Whole Room Circulator, covering essential safety instructions, product features, setup, cleaning procedures, troubleshooting tips, and warranty information.</p>
	<p><u>Vornado Refresh 8 Whole Room Circulator Owner's Guide and Safety Instructions</u></p> <p>Comprehensive owner's guide for the Vornado Refresh 8 Whole Room Circulator, including important safety instructions, features, getting started, cleaning, troubleshooting, and warranty information.</p>
	<p><u>Vornado Whole Room Circulator Owner's Guide - Models 160, 360, 460, 560, 660</u></p> <p>Owner's guide for Vornado Whole Room Circulators, including models 160, 360, 460, 560, and 660. Provides instructions on operation, safety, cleaning, and troubleshooting for optimal whole room air circulation.</p>