

INSE N5T

INSE N5 Cordless Stick Vacuum Cleaner User Manual

INTRODUCTION

Thank you for purchasing the INSE N5 Cordless Stick Vacuum Cleaner. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read this manual thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Store the appliance indoors. Put away after use to prevent accidents.
- Disconnect the battery pack from the appliance before making any adjustments, changing accessories,

or storing appliance.

- Use only the charger specified by the manufacturer to recharge. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

PACKAGE CONTENTS

Please check the package contents to ensure all items are present and in good condition:

- Main Motor (Handheld Vacuum)
- Extension Wand (Green)
- Motorized Brush Head
- 2-in-1 Brush Tool
- Long Crevice Tool
- Wall Mount Bracket
- Power Adapter/Charger
- Cleaning Tool (with blade and brush)
- HEPA Filter (pre-installed)
- Battery Pack (pre-installed or separate)

PRODUCT OVERVIEW

Familiarize yourself with the components of your INSE N5 Cordless Stick Vacuum Cleaner.



Figure 1: Overview of the INSE N5 Cordless Stick Vacuum Cleaner and its included accessories. The image displays the main vacuum body with a green extension wand and motorized floor head, along with a crevice tool, 2-in-1 brush tool, wall mount, filter, and a small cleaning tool.

- **Main Motor Unit:** Contains the motor, dustbin, and battery. This is the handheld component.
- **Extension Wand:** Connects the main unit to the floor head or other attachments for extended reach.
- **Motorized Brush Head:** Designed for floor cleaning, featuring a rotating brush roll and LED lights.
- **2-in-1 Brush Tool:** A versatile attachment for cleaning upholstery, keyboards, and other delicate surfaces.
- **Long Crevice Tool:** Ideal for reaching narrow gaps, corners, and tight spaces.
- **Wall Mount Bracket:** For convenient storage and charging of the vacuum.
- **HEPA Filter:** Part of the 5-stage filtration system, located inside the dustbin.

SETUP

1. Assembly

1. **Attach the Extension Wand:** Insert the top end of the extension wand into the main motor unit until it

clicks securely.

2. **Attach the Floor Head:** Insert the bottom end of the extension wand into the motorized brush head until it clicks securely.
3. **Attach Accessories:** For handheld use, attach the 2-in-1 brush tool or long crevice tool directly to the main motor unit. For extended reach, attach them to the extension wand.

2. Charging the Battery

The INSE N5 features a detachable 2200mAh Lithium-Ion battery. It takes approximately 5 hours for a full charge.

- **Charging the Whole Vacuum:** Connect the power adapter to the charging port on the main motor unit and plug it into a wall outlet.
- **Charging the Separate Battery:** If the battery is detached, you can connect the power adapter directly to the battery pack and plug it into a wall outlet.
- The battery indicator lights will show the charging status. Ensure the battery is fully charged before first use for optimal performance.

3. Wall Mount Installation (Optional)

The wall mount bracket allows for convenient storage. Choose a suitable location near a power outlet. Secure the bracket to the wall using appropriate screws and anchors (not included, or refer to specific hardware provided).

OPERATING INSTRUCTIONS

1. Power On/Off and Suction Modes

- **Power On:** Press the power button on the main motor unit to start the vacuum. It will typically start in standard suction mode.
- **Change Suction Mode:** Press the mode button (usually near the power button) to switch between standard mode (up to 45 minutes runtime) and max mode (up to 20 minutes runtime for stronger suction).
- **Power Off:** Press the power button again to turn off the vacuum.

2. Using Attachments

- **Motorized Brush Head:** Best for cleaning various floor types, including hardwood and carpets. The 270° swivel and 90° up/down flexibility allow for easy maneuvering around furniture.
- **2-in-1 Brush Tool:** Use the brush bristles for dusting surfaces like shelves, blinds, or upholstery. Retract the bristles for a wider nozzle to clean larger fabric areas.
- **Long Crevice Tool:** Ideal for tight spaces such as between sofa cushions, car seats, or along baseboards.

3. Cleaning Different Surfaces

- **Hard Floors and Low-Pile Carpets:** Use the motorized brush head in standard or max mode as needed.
- **High-Pile Carpets:** Max mode is recommended for deeper cleaning.
- **Above-Floor Cleaning:** Detach the extension wand and use the main motor unit with the 2-in-1 brush tool or crevice tool for furniture, curtains, or ceilings.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

1. Emptying the Dustbin

- It is recommended to empty the dustbin after each use or when the MAX fill line is reached.
- Press the dustbin release button to detach it from the main motor unit.
- Open the dustbin lid and empty the contents into a trash can.
- Reattach the dustbin securely.

2. Cleaning the Filters

The INSE N5 features a 5-stage filtration system including a HEPA filter. Regular cleaning of the filters is crucial to prevent weak suction and motor blockage.

- **Remove Filters:** Twist and pull to remove the filter assembly from the dustbin. Separate the HEPA filter and the metal filter.
- **Wash Filters:** Rinse the HEPA filter and metal filter under cold running water. Do not use detergent.
- **Dry Filters:** Allow all filter components to air dry completely for at least 24 hours before reassembling and placing them back into the vacuum. Ensure they are completely dry to prevent mold or damage to the motor.
- **Frequency:** Clean filters monthly with regular use. Replace the HEPA filter every 3-6 months, depending on usage.

3. Cleaning the Brush Roll

- Periodically check the brush roll for tangled hair or debris.
- To access the brush roll, unlock the side latch on the motorized brush head and remove the brush roll.
- Use the provided cleaning tool (with a blade) to cut and remove any tangled hair or fibers.
- Reinsert the brush roll and secure the latch.

TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly installed.	Ensure the battery is fully charged and securely clicked into place.
Weak suction.	Dustbin is full. Filters are clogged. Airway is blocked.	Empty the dustbin. Clean or replace the filters. Check for blockages in the extension wand, floor head, or attachments.
Brush roll not spinning.	Brush roll is jammed with debris. Floor head is not properly attached.	Remove any tangled hair or debris from the brush roll. Ensure the floor head is securely connected to the extension wand.
Battery not charging.	Charger not connected properly. Faulty power outlet.	Ensure the charger is securely plugged into both the vacuum/battery and the wall outlet. Try a different power outlet.

SPECIFICATIONS

Feature	Specification
Brand	INSE
Model Number	N5T
Power Source	Battery Powered
Voltage	110 Volts
Wattage	150 watts
Suction Power	Up to 12Kpa (2 modes)
Battery Capacity	2200mAh Lithium-Ion
Runtime	Up to 45 mins (standard mode), 20 mins (max mode)
Charging Time	Approx. 5 hours
Dustbin Capacity	1.2 Liters
Filtration System	5-stage fully sealed cyclone filtration with HEPA
Noise Level	65 Decibels
Item Weight	3.2 Pounds
Surface Recommendation	Carpet, Hard Floor
Form Factor	Stick

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or contact INSE customer service directly. You can typically find contact details on the manufacturer's official website or on the product packaging.