

CANDY CS34 1262DE/2-S

Candy Smart CS34 1262DE/2-S Washing Machine User Manual

Model: CS34 1262DE/2-S | Brand: CANDY

1. INTRODUCTION

Thank you for choosing the Candy Smart CS34 1262DE/2-S Washing Machine. This manual provides essential information for the correct installation, safe use, and proper maintenance of your appliance. Please read these instructions carefully before using the washing machine to ensure optimal performance and longevity.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Read all instructions before using the appliance.
- Ensure the appliance is properly grounded.
- Do not operate the washing machine if it is damaged or malfunctioning.
- Keep children and pets away from the appliance during operation.
- Do not allow children to play on or in the appliance.
- Unplug the appliance from the power supply before cleaning or performing any maintenance.
- Do not use flammable liquids near the washing machine.
- Ensure water connections are secure to prevent leaks.

3. PRODUCT OVERVIEW

The Candy Smart CS34 1262DE/2-S is a front-loading washing machine designed for efficient and convenient laundry care. It features a compact design, a 6 kg capacity, and a spin speed of 1200 rpm.



Figure 1: Front view of the Candy Smart CS34 1262DE/2-S Washing Machine, showing the control panel, detergent drawer, and drum door.



Figure 2: Angled view of the washing machine, highlighting its compact design.

4. INSTALLATION

4.1 Unpacking

- Remove all packaging materials, including the polystyrene base and any protective film.
- Remove the transport bolts located at the rear of the machine. Keep these bolts for future transport.

4.2 Positioning

- Place the washing machine on a firm, level floor.
- Adjust the feet to ensure the machine is perfectly level. This prevents excessive vibration and noise during operation.
- Ensure there is adequate space around the machine for ventilation and access.



Figure 3: Washing machine dimensions: 85cm (height), 60cm (width), 34cm (depth).

4.3 Water Connection

- Connect the water inlet hose to a cold water tap with a 3/4" thread. Ensure the connection is tight to prevent leaks.
- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed and not kinked. The end of the drain hose should be between 60 cm and 100 cm from the floor.

4.4 Electrical Connection

- Connect the power plug to a properly grounded electrical outlet.
- Ensure the voltage and frequency match the specifications on the appliance's rating plate.
- Do not use extension cords or multiple adapters.

5. OPERATING INSTRUCTIONS

5.1 Control Panel

The control panel consists of a program selector knob, a digital display, and various function buttons. Refer to the diagram in your quick start guide for a detailed layout.

5.2 Loading Laundry

- Open the door and load the laundry into the drum. Do not overload the machine; respect the maximum load capacity of 6 kg.
- Sort laundry by fabric type, color, and degree of soiling.

5.3 Detergent Dispenser

Pull out the detergent drawer. Add the appropriate amount of detergent to the main wash compartment and fabric softener to the designated compartment. Follow detergent manufacturer's instructions.

5.4 Program Selection

Turn the program selector knob to choose the desired wash program. The digital display will show the program duration and default settings. This model includes 5 quick programs and an 'easy ironing' function.

5.5 Starting a Wash Cycle

- After selecting the program, you can adjust options such as temperature and spin speed using the corresponding buttons.
- Press the 'Start/Pause' button to begin the wash cycle. The door will lock, and the machine will start filling with water.

5.6 Special Functions

The Candy Smart CS34 1262DE/2-S offers various special functions, including quick wash programs for lightly soiled items and an 'easy ironing' option to reduce creasing.

6. MAINTENANCE AND CLEANING

Regular maintenance ensures the efficient operation and extends the lifespan of your washing machine.

6.1 Cleaning the Detergent Dispenser

Periodically remove the detergent drawer and rinse it under running water to remove any detergent residue. Use a brush if necessary.

6.2 Cleaning the Drain Filter

The drain filter should be cleaned regularly to prevent blockages. Follow these steps:

1. Open the small cover at the bottom front of the machine.
2. Place a shallow container underneath to collect any residual water.

3. Slowly unscrew the filter counter-clockwise and remove it.
4. Clean the filter under running water, removing any lint or foreign objects.
5. Screw the filter back in clockwise and close the cover.



Figure 4: Location of the drain filter access panel and the removable filter.

6.3 Cleaning the Drum

Run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent) periodically to clean the drum and remove any detergent buildup or odors.

6.4 Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

7. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; door not closed properly; 'Start/Pause' button not pressed.	Check power connection; ensure door is securely latched; press 'Start/Pause' button.
No water filling	Water tap closed; water inlet hose kinked or blocked.	Open water tap; straighten hose; check for blockages.
Water not draining	Drain hose kinked or blocked; drain filter clogged.	Straighten hose; clean drain filter (refer to Section 6.2).

Problem	Possible Cause	Solution
Excessive vibration/noise	Machine not level; transport bolts not removed; uneven load.	Adjust leveling feet; ensure transport bolts are removed; redistribute laundry in the drum.
Detergent residue in drawer	Insufficient water pressure; clogged dispenser.	Check water pressure; clean detergent dispenser (refer to Section 6.1).

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	CANDY
Model Number	CS34 1262DE/2-S
Capacity	6 Kilograms
Maximum Spin Speed	1200 RPM
Product Dimensions (DxWxH)	37.8D x 60W x 85H cm
Item Weight	60.5 Kilograms
Access Location	Front Loader
Color	White
Finish Type	Stainless Steel
Special Features	Portable
Batteries Required	No
First Available Date	November 7, 2020

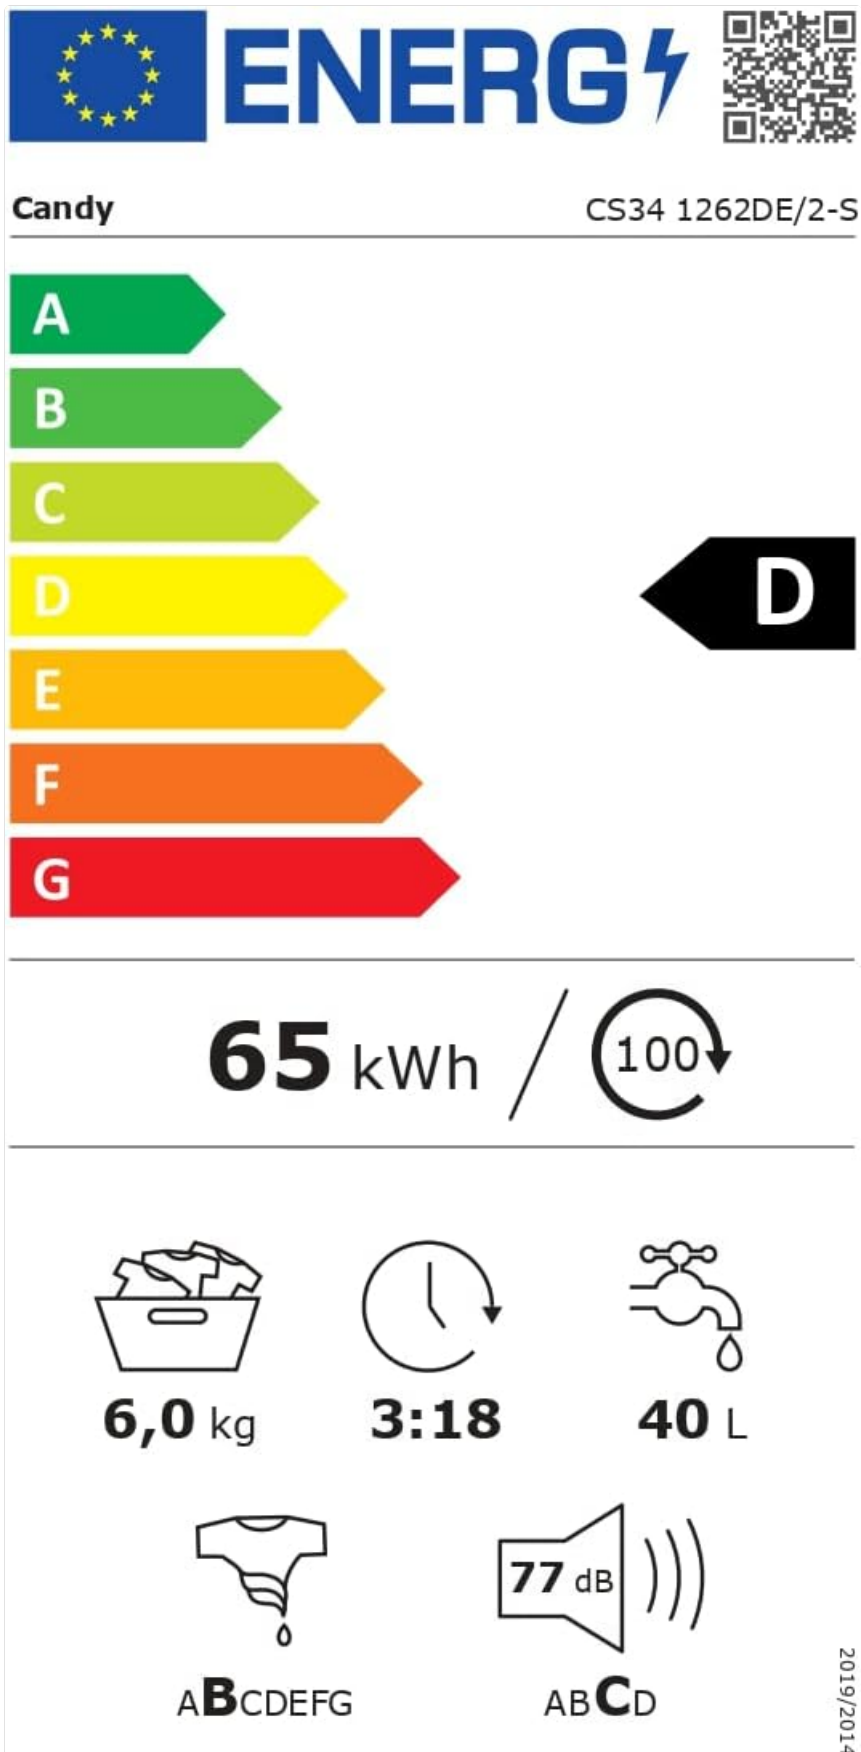 


Figure 5: EU Energy Label for the Candy Smart CS34 1262DE/2-S, showing energy efficiency class D, 65 kWh/100 cycles, 6.0 kg capacity, 3:18 cycle time, 40 L water consumption, and 77 dB noise level.

Ficha de información del producto

REGLAMENTO DELEGADO (UE) 2019/2014 DE LA COMISIÓN en lo relativo al etiquetado energético de las lavadoras domésticas y las lavadoras-secadoras domésticas

Nombre o marca comercial del proveedor: Candy

Dirección del proveedor: Candy Hoover Group contact, Comolli 16, 20861 Brugherio MB, IT

Identificador del modelo: CS34 1262DE/2-S

Parámetros generales del producto:					
Parámetro	Valor		Parámetro	Valor	
Capacidad asignada ^(a) (kg)	6,0		Dimensiones en cm	Altura	85
				Anchura	60
				Profundidad	38
Índice de eficiencia energética ^(a) (IEE _w)	80,0		Clase de eficiencia energética ^(a)	D	
Índice de eficiencia de lavado ^(a)	1,031		Eficacia del aclarado (g/kg) ^(a)	4,9	
Consumo de energía en kWh por ciclo, sobre la base del programa «eco 40-60» en una combinación a plena carga y con parte de la carga. El consumo real de energía dependerá de cómo se utilice el aparato.	0,648		Consumo de agua en litros por ciclo, sobre la base del programa «eco 40-60» en una combinación a plena carga y con parte de la carga. El consumo real de agua dependerá de cómo se utilice el aparato y de la dureza del agua.	40	
Temperatura máxima dentro de la ropa tratada ^(a) (°C)	Capacidad asignada	39	Contenido de humedad residual ponderado ^(a) (%)	53,9	
	Mitad	36			
	Cuarta parte	27			
Velocidad de centrifugado ^(a) (rpm)	Capacidad asignada	1 151	Clase de eficiencia de centrifugado ^(a)	B	
	Mitad	1 151			
	Cuarta parte	1 151			
Duración del programa ^(a) (h:min)	Capacidad	3:18	Tipo	de libre instalación	
Página 1 / 2					
	asignada				
	Mitad	2:36			
	Cuarta parte	2:36			
Ruido acústico aéreo emitido en la fase de centrifugado ^(a) (dB(A) re 1 pW)	77		Clase de ruido acústico aéreo emitido ^(a) (fase de centrifugado)	C	
Modo apagado (W) (si procede)	0,50		Modo preparado (W) (si procede)	1,00	
Inicio aplazado (W) (si procede)	4,00		Modo preparado en red (W) (si procede)	No aplicable	
Duración mínima de la garantía ofrecida por el proveedor: 24 meses					
Este producto ha sido diseñado para liberar iones de plata durante el ciclo de lavado			NO		
Información adicional:					
Enlace al sitio web del proveedor, en el que se encuentra la información contemplada en el punto 9 del anexo II del Reglamento (UE) 2019/2023 de la Comisión: https://corporate.haier-europe.com/en/					




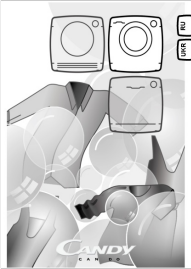 
(a) para el programa «eco 40-60»

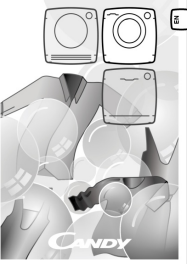 

Figure 6: Detailed product information sheet (Reglamento Delegado) for the washing machine. For more details, visit the official EPREL database: <https://eprel.ec.europa.eu/qr/336450>

9. WARRANTY AND CUSTOMER SUPPORT

Your Candy Smart CS34 1262DE/2-S Washing Machine comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical assistance, spare parts, or to report a fault, please contact Candy customer support. Contact details can typically be found on the manufacturer's website or in your purchase documentation.

Related Documents - CS34 1262DE/2-S

	<p>Candy Smart Washing Machine User Guide and Features</p> <p>Comprehensive guide to the Candy Smart washing machine, detailing programs, features, options, and basic usage. Access further multilingual information at go.he.services/smart-bi.</p>
	<p>Candy GVW 364TC Washer Dryer: Features and Specifications</p> <p>Discover the Candy GVW 364TC, a space-saving washer dryer with a 6kg wash capacity, 4kg drying capacity, and 1300 RPM spin speed. This guide details its features, programs, performances, and technical specifications.</p>
	<p>Candy CSTG282DE/1-S 8kg Smart Top-Load Washing Machine</p> <p>Discover the Candy CSTG282DE/1-S, an 8kg top-load washing machine with 1200 RPM spin speed and Class D energy efficiency. Features Smart Touch NFC technology, Mix Power System+, Gentle Touch Opening, and 16 versatile programs for optimal laundry care.</p>
	<p>Руководство пользователя стиральной машины Candy: Безопасность, Установка, Эксплуатация</p> <p>Полное руководство пользователя для стиральных машин Candy. Содержит инструкции по безопасности, установке, эксплуатации, обслуживанию и устранению неисправностей. Список моделей: CS34 1052D1/2-07, CS4 1052D1/2-07, CS34 1062D2/2-07, CS4 1062D1/2-07, CS4 1262D3/2-07, CS4 1172D1/2-07, CS4 1072D1/2-07, CS4 1272D3/2-07.</p>

	<p>Candy Washing Machine User Manual - WM Rapidó Series</p> <p>Comprehensive user manual for Candy WM Rapidó series washing machines, covering installation, operation, maintenance, troubleshooting, and safety instructions.</p>
	<p>Candy HE 1294TWM6/1-S Ultra Hygiene Washing Machine Specifications</p> <p>Detailed specifications for the Candy HE 1294TWM6/1-S Ultra Hygiene washing machine, including features, technical characteristics, energy efficiency, and dimensions.</p>