

[Manuals.plus](#) /

› [VINABTY](#) /

› VINABTY AKB74815376 Remote Control User Manual for LG Sound Bar SJ3 SPJ4B-W

VINABTY VI-117-2

VINABTY AKB74815376 Remote Control User Manual

Model: VI-117-2 | Compatible with LG Sound Bar SJ3 & SPJ4B-W

INTRODUCTION

This manual provides instructions for the VINABTY AKB74815376 replacement remote control, designed for use with LG Sound Bar models SJ3 and SPJ4B-W. Please read this manual thoroughly before using the remote control to ensure proper operation and longevity.

SETUP

Battery Installation

The VINABTY AKB74815376 remote control is designed for immediate use without complex programming. Simply insert two AAA batteries (not included) into the battery compartment. Ensure correct polarity (+/-) as indicated inside the compartment. No additional setup or pairing is required for this remote control to function with compatible LG Sound Bar models SJ3 and SPJ4B-W.





Figure 1: Front view of the VINABTY AKB74815376 Remote Control, showing all buttons and their labels.

OPERATING INSTRUCTIONS

Point the remote control directly towards your LG Sound Bar. Ensure there are no obstructions between the remote and the sound bar's sensor.

Button Functions:

- **Power Button** (Symbol:): Turns the sound bar on or off.

- **VOL + / -**: Increases or decreases the volume level.
- **Mute Button (Symbol:)**: Mutes or unmutes the sound.
- **ASC**: Activates Adaptive Sound Control, which analyzes content in real-time and adjusts sound settings automatically.
- **STANDARD**: Sets the sound mode to standard, providing balanced audio.
- **CINEMA**: Optimizes sound for movie viewing, enhancing dialogue and surround effects.
- **Playback Controls (Symbols:)**: Control media playback (Previous, Play/Pause, Next).
- **NIGHT ON / NIGHT OFF**: Activates or deactivates Night Mode, which reduces dynamic range for quieter listening.
- **WOOFER LEVEL + / -**: Adjusts the bass level of the connected subwoofer.
- **AUTO POWER ON / AUTO POWER OFF**: Enables or disables the automatic power on/off feature, which can turn the sound bar on/off with a connected TV.



Figure 2: Illustrates the remote control being used to operate a sound bar positioned below a television.

MAINTENANCE

Battery Replacement

When the remote control's range decreases or buttons become unresponsive, it is time to replace the batteries. Open the battery compartment cover on the back of the remote, remove the old batteries, and insert two new AAA batteries, observing the correct polarity. Close the cover securely.

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these may damage the surface or internal components.

Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with new ones.
 - Ensure there is a clear line of sight between the remote control and the sound bar's sensor. Remove any obstructions.
 - Verify that the sound bar is powered on.
- **Reduced operating range:**
 - This often indicates low battery power. Replace the batteries.
 - Ensure you are within the effective operating range of the sound bar.

SPECIFICATIONS

Model Number	VI-117-2
Compatible Devices	LG Sound Bar SJ3, LG Sound Bar SPJ4B-W (Stereo System)
Product Dimensions	5.8 x 2 x 0.7 inches
Item Weight	2.1 ounces
Color	Black
Special Feature	Ergonomic design
Power Source	2 x AAA Batteries (not included)

WARRANTY INFORMATION

Specific warranty details for this replacement remote control are typically provided by the seller at the time of purchase. Please refer to your purchase documentation or contact the seller directly for information regarding warranty coverage and terms.

SUPPORT

For further assistance, technical support, or inquiries not covered in this manual, please contact the seller or manufacturer through the platform where the product was purchased. Provide your order details and a clear description of the issue for prompt support.

