

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [VINABTY](#) /

› [VINABTY N2QAYB000820 Replacement Remote Control User Manual for Panasonic Viera TVs](#)

## VINABTY N2QAYB000820

# VINABTY N2QAYB000820 Replacement Remote Control User Manual

FOR PANASONIC VIERA TVs

## 1. Introduction

This manual provides comprehensive instructions for the VINABTY N2QAYB000820 replacement remote control. It is designed to be compatible with various Panasonic Viera TV models, offering a direct replacement experience without complex setup procedures. Please read this manual carefully to ensure proper use and maintenance of your remote control.

## 2. Setup

The VINABTY N2QAYB000820 replacement remote control is designed for immediate use with compatible Panasonic Viera TVs. No programming or pairing is required.

### 2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery cover.
3. Insert two (2) AAA batteries (not included), ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery cover securely.

**Note:** Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.







Figure 1: Front view of the VINABTY N2QAYB000820 replacement remote control, showing all buttons and their labels.

### 3. Operating Instructions

---

This section outlines the primary functions of the buttons on your VINABTY N2QAYB000820 remote control.

#### 3.1 Button Functions

- **Power (Red Button):** Turns the TV on or off.
- **MEDIA PLAYER:** Accesses the media player function of your TV.
- **CC (Closed Caption):** Toggles closed captions on or off.
- **SAP (Secondary Audio Program):** Switches between available audio tracks.
- **MENU:** Opens the TV's main menu.
- **SLEEP:** Sets the sleep timer for the TV.
- **FAVORITE:** Accesses favorite channels or content.
- **INPUT:** Selects the input source (e.g., HDMI 1, AV, Component).
- **EXIT:** Exits the current menu or screen.
- **INFO:** Displays information about the current program or input.
- **X:** Cancels an action or goes back to the previous screen.
- **Navigation Buttons (Up, Down, Left, Right):** Navigates through menus and options.
- **OK:** Confirms a selection or enters a menu item.
- **OPTION:** Accesses context-sensitive options.
- **RETURN:** Returns to the previous channel or menu.
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within certain menus or applications, as indicated on screen.
- **VOL +/-:** Adjusts the volume level.
- **CH ^/v:** Changes the channel up or down.
- **FORMAT:** Changes the screen format or aspect ratio.
- **MUTE:** Mutes or unmutes the TV audio.
- **Number Pad (0-9):** Directly enters channel numbers.
- **LAST:** Returns to the previously viewed channel.
- **TV:** Switches to TV mode.



Figure 2: A hand holding the VINABTY remote control, demonstrating its use to operate a television.

#### 4. Compatibility

The VINABTY N2QAYB000820 replacement remote control is compatible with a wide range of Panasonic Viera TV models, including but not limited to:

- TC-P50X60
- TH-65LRU60U, TH-32LRU6, TH-32LRU60, TH-39LRU6, TH-39LRU60, TH-42LRU6, TH-42LRU60, TH-50LRU60
- TC-L32B6X, TC-L39B6X, TC-32B6P, TC-L39B6P, TC-32LB64, TC-L39B6, TC-L50B6
- TC-32A400U, TC-39A400U, TC-40A420U, TC-50A400U
- TC-L32B6, TC-L32B6P, TC-L32XM6, TC-L39EM60, TC-L50EM60, TC-L50EM60E
- TC-P42X60

If your Panasonic Viera TV model is not listed, please refer to your TV's original manual or contact customer support to confirm compatibility.

#### 5. Maintenance

Proper care and maintenance will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries promptly when the remote's performance degrades. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

## 6. Troubleshooting

---

If you encounter issues with your remote control, try the following solutions:

- **Remote Not Responding:**
  - Ensure batteries are inserted correctly with the correct polarity.
  - Replace old batteries with new AAA batteries.
  - Check for any obstructions between the remote control and the TV's infrared sensor.
  - Ensure you are within the effective operating range and pointing the remote directly at the TV.
- **Buttons Unresponsive:**
  - Clean the remote control surface, especially around the buttons, to remove any dirt or debris that might be causing sticking.
  - If only specific buttons are unresponsive, the remote may be damaged and require replacement.
- **Short Operating Range:**
  - This often indicates low battery power. Replace the batteries.
  - Ensure there are no strong light sources (like direct sunlight or bright fluorescent lights) interfering with the IR signal.

## 7. Specifications

---

Feature	Specification
Product Dimensions	7.5 x 2 x 0.7 inches
Item Weight	2.39 ounces
Manufacturer	VINABTY
Special Feature	Ergonomic
Color	Black
Max Number of Supported Devices	18 (This refers to the remote's internal capability, not necessarily the number of TVs it can control simultaneously)
Compatible Devices	Television

## 8. Warranty and Support

---

For any questions, technical assistance, or warranty inquiries regarding your VINABTY N2QAYB000820

replacement remote control, please contact the manufacturer or your point of purchase. Keep your purchase receipt as proof of purchase.

© 2023 VINABTY. All rights reserved.