

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [NIXON](#) /
- › [NIXON Base Tide Pro A1307 Digital Watch User Manual](#)

NIXON A1307

NIXON Base Tide Pro A1307 Digital Watch User Manual

Model: A1307

INTRODUCTION

Welcome to the NIXON Base Tide Pro A1307 Digital Watch user manual. This guide provides detailed instructions for the setup, operation, and maintenance of your new digital watch. The Base Tide Pro is designed for water sports enthusiasts, offering essential features like tide data, sunrise/sunset times, and multiple timing functions, all within a durable, water-resistant design.



Figure 1: Front view of the NIXON Base Tide Pro A1307 Digital Watch, displaying time and tide graph.

1. Initial Power On and Battery

Your NIXON Base Tide Pro A1307 watch comes with a pre-installed battery. If the display is blank, press any button to activate it. If the watch does not power on, the battery may need replacement (refer to the Maintenance section).

2. Setting Time and Date

1. Press and hold the **MODE** button (typically bottom left) to enter the settings menu.
2. Use the **ADJUST** button (typically top right) to cycle through settings options (Time, Date, Year).
3. Use the **SET** button (typically bottom right) to change the selected value.
4. Press **MODE** again to confirm and exit settings.

3. Setting Home Beach and Tide Data

The watch is pre-programmed with tide data for over 550 beaches worldwide. To set your home beach:

1. From the main time display, press the **TIDE** button (refer to your watch's specific button layout for exact labeling).
2. Press and hold the **SET** button to enter tide location selection.
3. Use the **ADJUST** and **MODE** buttons to navigate through regions and specific beach locations.
4. Once your desired location is displayed, press **SET** to confirm.



Figure 2: Side view of the watch, showing the control buttons for navigation and settings.



Figure 3: The watch displaying tide information, superimposed on a world map indicating available tide locations.

OPERATING INSTRUCTIONS

1. General Navigation

The NIXON Base Tide Pro A1307 typically features four buttons for navigation and function selection. While specific labels may vary, common functions include:

- **MODE:** Cycles through main display modes (Time, Tide, Chronograph, Timer, Alarms).
- **SET/START:** Used to enter/exit settings, start/stop timers or chronographs.
- **ADJUST/LAP:** Used to adjust values in settings, or record laps in chronograph mode.
- **LIGHT:** Activates the EL backlight for visibility in low light conditions.

2. Time Mode

The default display shows the current time (12-hour or 24-hour format), date, and day of the week. You can toggle between different display configurations using the **ADJUST** button.

3. Tide Mode

Access Tide Mode by pressing the **MODE** button until the tide graph is displayed. This mode shows:

- Current tide graph for your selected home beach.
- Future and past tide data.
- Sunrise and sunset times.

Use the **ADJUST** button to scroll through future and past tide predictions.

4. Alarm Functions

The watch features three independent alarms. To set an alarm:

1. Navigate to Alarm Mode using the **MODE** button.
2. Press and hold **SET** to enter alarm setting.
3. Use **ADJUST** to select the alarm number (AL1, AL2, AL3).
4. Use **SET** to toggle between hours and minutes, and **ADJUST** to change values.
5. Press **MODE** to save and exit.

5. Countdown Timer

The countdown timer can be set for various durations.

1. Enter Timer Mode via the **MODE** button.
2. Press and hold **SET** to set the countdown duration.
3. Use **ADJUST** to change values and **SET** to move between hours, minutes, and seconds.
4. Press **SET** to start the countdown. Press again to pause, and **ADJUST** to reset.

6. Wave Counter and Chronograph

These functions are accessible through the **MODE** button.

- **Chronograph:** Use **SET** to start/stop and **ADJUST** for lap times.
- **Wave Counter:** Specific instructions for activating and using the wave counter can be found in the detailed PDF manual.

7. Water Resistance (100 Meter / 10 ATM)

The NIXON Base Tide Pro A1307 is water resistant to 100 meters (10 ATM). This makes it suitable for swimming, surfing, and snorkeling. **Do not operate buttons underwater** as this can compromise the water seal. Ensure the crown (if applicable) is fully pushed in before water exposure.



Figure 4: The watch being worn during an outdoor activity, demonstrating its practical use.

1. Cleaning Your Watch

To maintain the appearance and functionality of your watch, regularly clean it with a soft, damp cloth. For saltwater exposure, rinse the watch thoroughly with fresh water after each use and dry it with a soft cloth. Avoid using harsh chemicals or abrasive materials.

2. Battery Replacement

The watch uses a specific product-specific battery. When the battery runs low, the display may dim or become erratic. Battery replacement should be performed by a qualified watch technician to ensure the water resistance seal is properly maintained. Attempting to replace the battery yourself may void the warranty and compromise water resistance.

3. Band Care

The perforated PU band is designed for breathability and comfort. Clean the band with mild soap and water. Avoid prolonged exposure to direct sunlight or extreme temperatures, which can degrade the material. The double locking looper system ensures a secure fit.



Figure 5: Rear view of the watch, showing the stainless steel case back and the double locking loop system on the band.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead battery.	Replace battery (professional service recommended).
Incorrect time or date.	Time/date not set correctly or reset after battery change.	Refer to "Setting Time and Date" section to reset.
Tide data is inaccurate.	Incorrect home beach selected or data not synchronized.	Verify your home beach setting. Ensure time and date are accurate.
Buttons are unresponsive.	Watch may be wet, or internal issue.	Ensure watch is dry. If issue persists, contact NIXON support.

SPECIFICATIONS

- **Model Number:** A1307
- **Case Size:** 42mm
- **Band Width:** 24mm
- **Water Resistance:** 100 Meter / 10 ATM
- **Display:** Digital EL Backlight
- **Functions:** Time, Date, Sunrise/Sunset, Future/Past Tide, Dual Time, 3 Alarms, Countdown Timer, Wave Counter, Chronograph
- **Material:** Recycled ocean plastic case, Stainless steel caseback, PU band
- **Clasp Type:** Hook & Loop (Double locking looper system)
- **Battery:** 1 Product Specific battery (included)
- **Product Dimensions:** 4 x 5 x 5 inches; 2.19 ounces



Figure 6: Engraving on the watch case back, indicating model, water resistance, and material.

WARRANTY AND SUPPORT

NIXON products are manufactured to high-quality standards and are covered by a limited warranty against defects in materials and workmanship. For specific warranty details, terms, and conditions, please refer to the official NIXON website or contact their customer support.

For further assistance, detailed instructions, or to view the complete user manual in PDF format, please visit the official NIXON support page or download the PDF directly:

[Download NIXON Base Tide Pro User Manual \(PDF\)](#)