

Garwarm 8370-10-WJ New

Garwarm Dimmable LED Ceiling Light (Model 8370-10-WJ New) Instruction Manual

1. PRODUCT OVERVIEW

This manual provides instructions for the safe installation, operation, and maintenance of your Garwarm Dimmable LED Ceiling Light, Model 8370-10-WJ New. This modern acrylic flush mount ceiling lamp features a unique flower shape design and offers dimmable and color-changeable lighting options via remote control.

Key Features:

- **Unique Design:** Fashionable flower petal design made from high-quality metal iron and acrylic.
- **Dimmable & Color Changeable:** Adjust brightness (5% - 100%) and color temperature (3000K - 6500K) with the included remote control.
- **Eye Protection:** Designed to be flicker-free with no infrared or ultraviolet radiation, protecting eyes from harsh glare.
- **Energy Efficient:** 72W LED light source provides 5600 lumens, comparable to a 300-watt incandescent bulb, offering significant energy savings.
- **Long Lifespan:** LED light source has an average life of over 30,000 hours.

2. SAFETY INFORMATION

Please read all instructions carefully before installation and use. Retain this manual for future reference.

- **Electrical Safety:** Always turn off the main power supply at the circuit breaker before beginning any electrical work. If you are unsure about electrical wiring, consult a qualified electrician.
- **Compatibility:** This fixture is **NOT COMPATIBLE WITH EXTERNAL DIMMER SWITCHES**. Use only the provided remote control for dimming and color temperature adjustments. It is compatible with a regular on/off wall switch.
- **Installation:** Ensure the mounting surface can support the weight of the fixture. Follow all local electrical codes.
- **Handling:** Handle the acrylic components with care to prevent scratches or damage.
- **Indoor Use Only:** This product is designed for indoor use only and is not water-resistant.

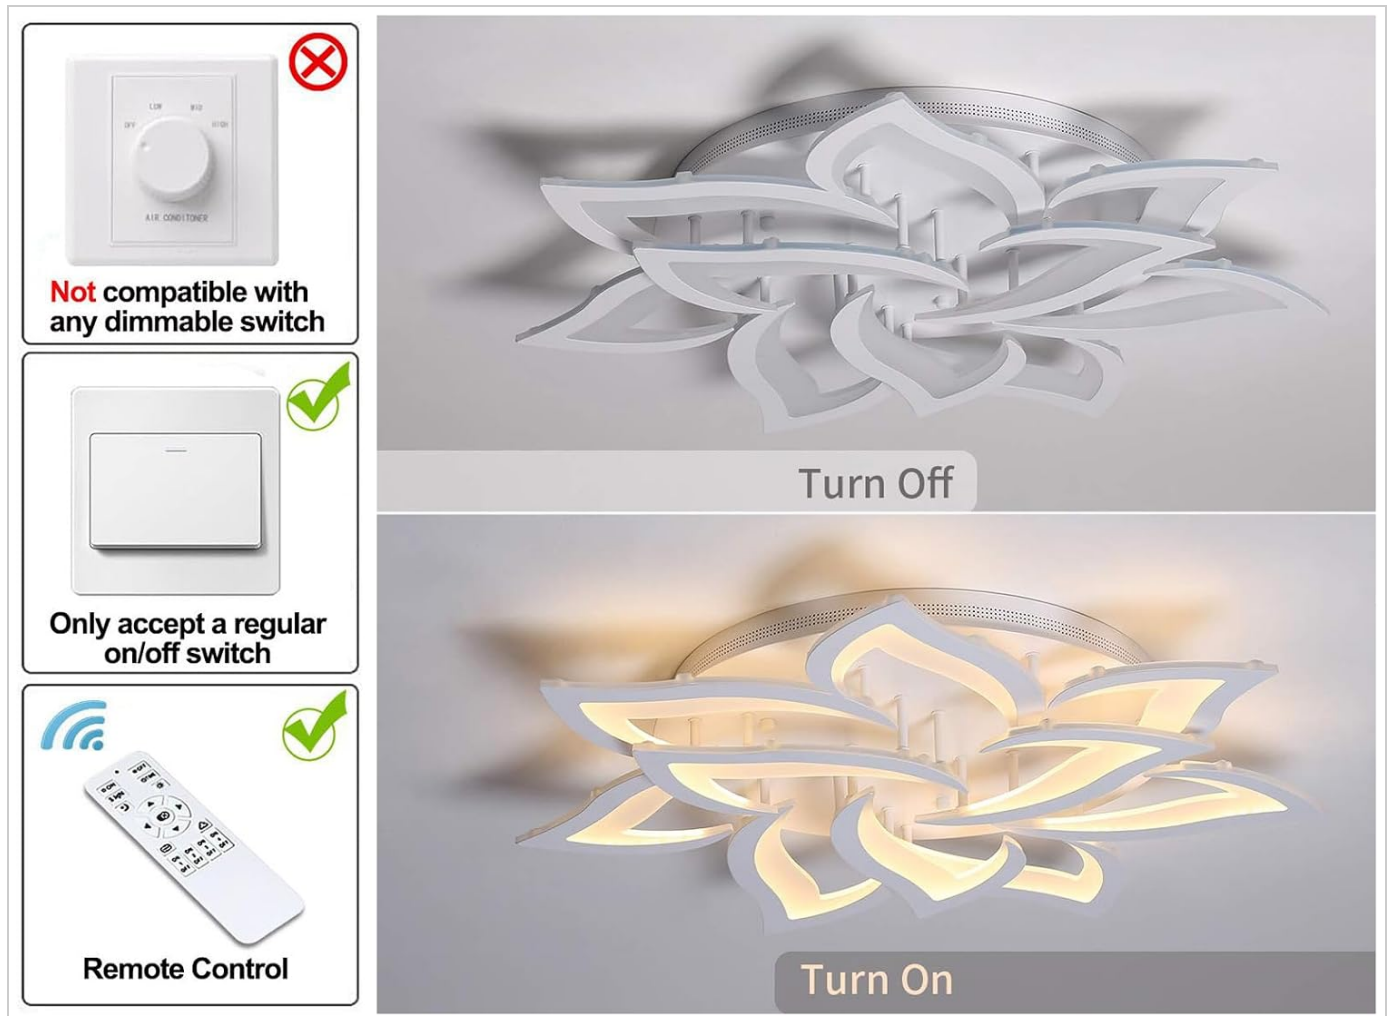 


Figure 2.1: The ceiling light is compatible with a regular on/off switch and the included remote control, but not with external dimmer switches.

3. PACKAGE CONTENTS


Verify that all components are present and undamaged before proceeding with installation.

- LED Ceiling Light Fixture (Base and Petals)
- Remote Control
- Mounting Hardware (Screws, Wall Anchors, Washers)
- Instruction Manual

4. SPECIFICATIONS

Feature	Specification
Brand	Garwarm
Model Number	8370-10-WJ New
Color	White
Material	Acrylic, Metal
Light Source	Integrated LED

Wattage	72 Watts
Brightness	5600 Lumens
Voltage	110 Volts
Color Temperature	3000K - 6500K (Adjustable)
Dimmable	Yes (via Remote Control)
Control Method	Remote Control
Mounting Type	Flush Mount
Item Dimensions (L x W x H)	33.5"L x 33.5"W x 3.93"H
Light Fixture Base Size	19.7 inches (50cm)
Average Life	30,000 hours

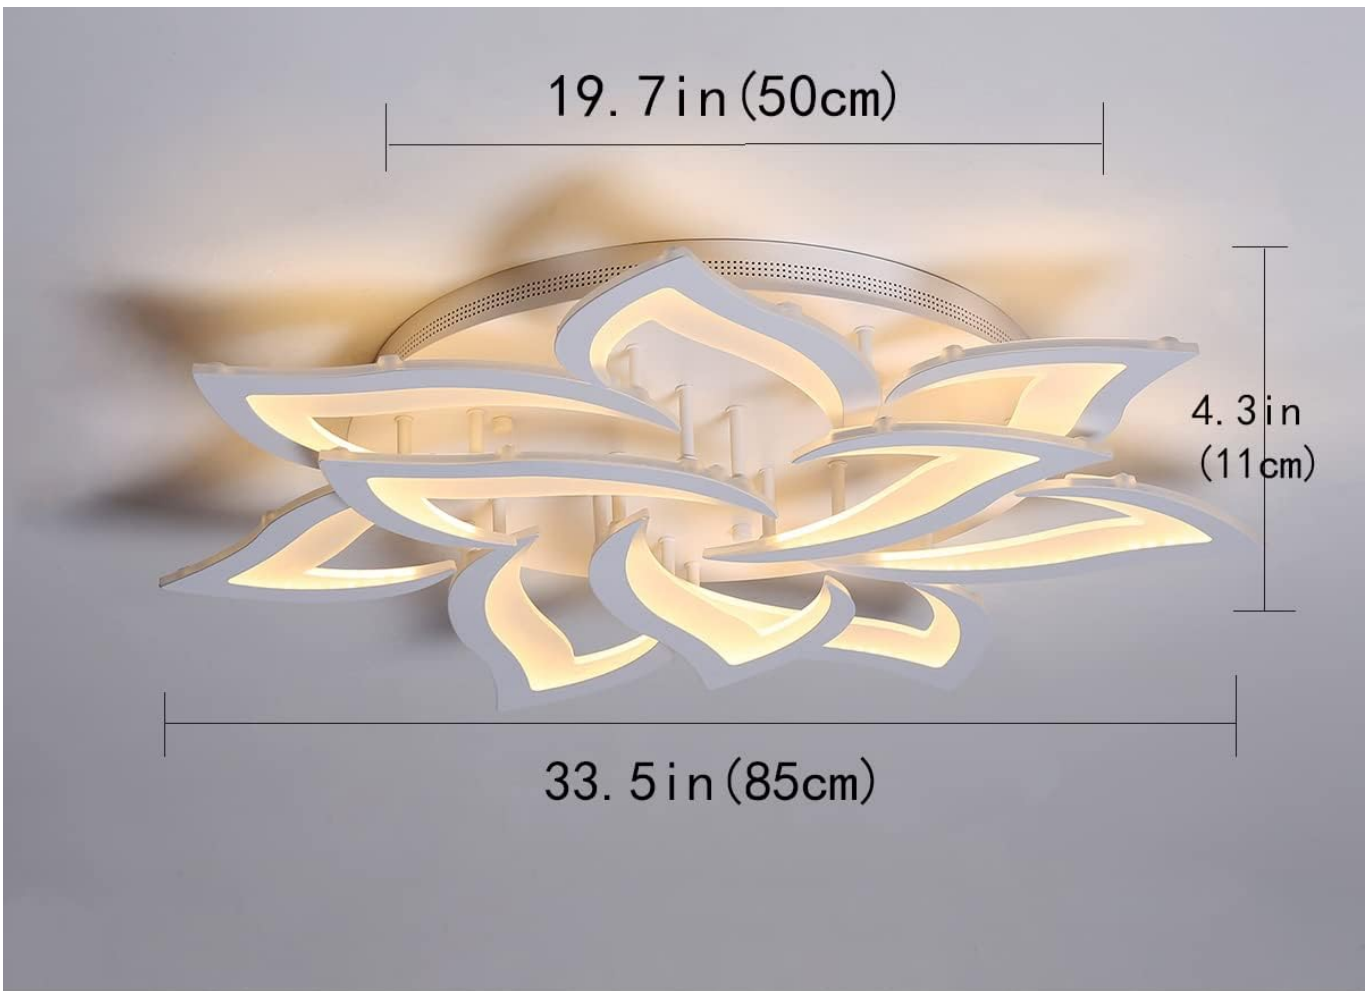 

Technical Details

Voltage:	110V	Bulb Wattage:	72 W
Dimmable		Material:	Acrylic and Aluminum
Finish:	powder coating	Lumen output:	4020lm (80lm/w)
CCT:	3000K - 6500K	Working hours:	>50000 hrs

Figure 4.1: Product dimensions and technical details.

5. SETUP AND INSTALLATION

Installation requires basic electrical knowledge. If you are not comfortable performing electrical work, please consult a professional electrician.


Before You Begin:

- Turn off power at the circuit breaker.
- Gather necessary tools: screwdriver, wire strippers, adjustable wrench, ladder.
- Unpack all components and verify against the package contents list.

Assembly Steps:

1. Attach the individual petal light modules to the main base of the fixture. Ensure all electrical connections between the petals and the base are securely plugged in.

2. Secure the petal modules to the base using the provided screws and washers. Use an adjustable wrench to tighten the nuts.
3. Connect the main power wires from the ceiling junction box to the fixture's wiring. Typically, this involves connecting black to black (live), white to white (neutral), and green/bare copper to green (ground).
4. Mount the assembled fixture to the ceiling junction box using the provided mounting bracket and screws. It is recommended to have a second person assist in holding the fixture during this step.
5. Once securely mounted, restore power at the circuit breaker.

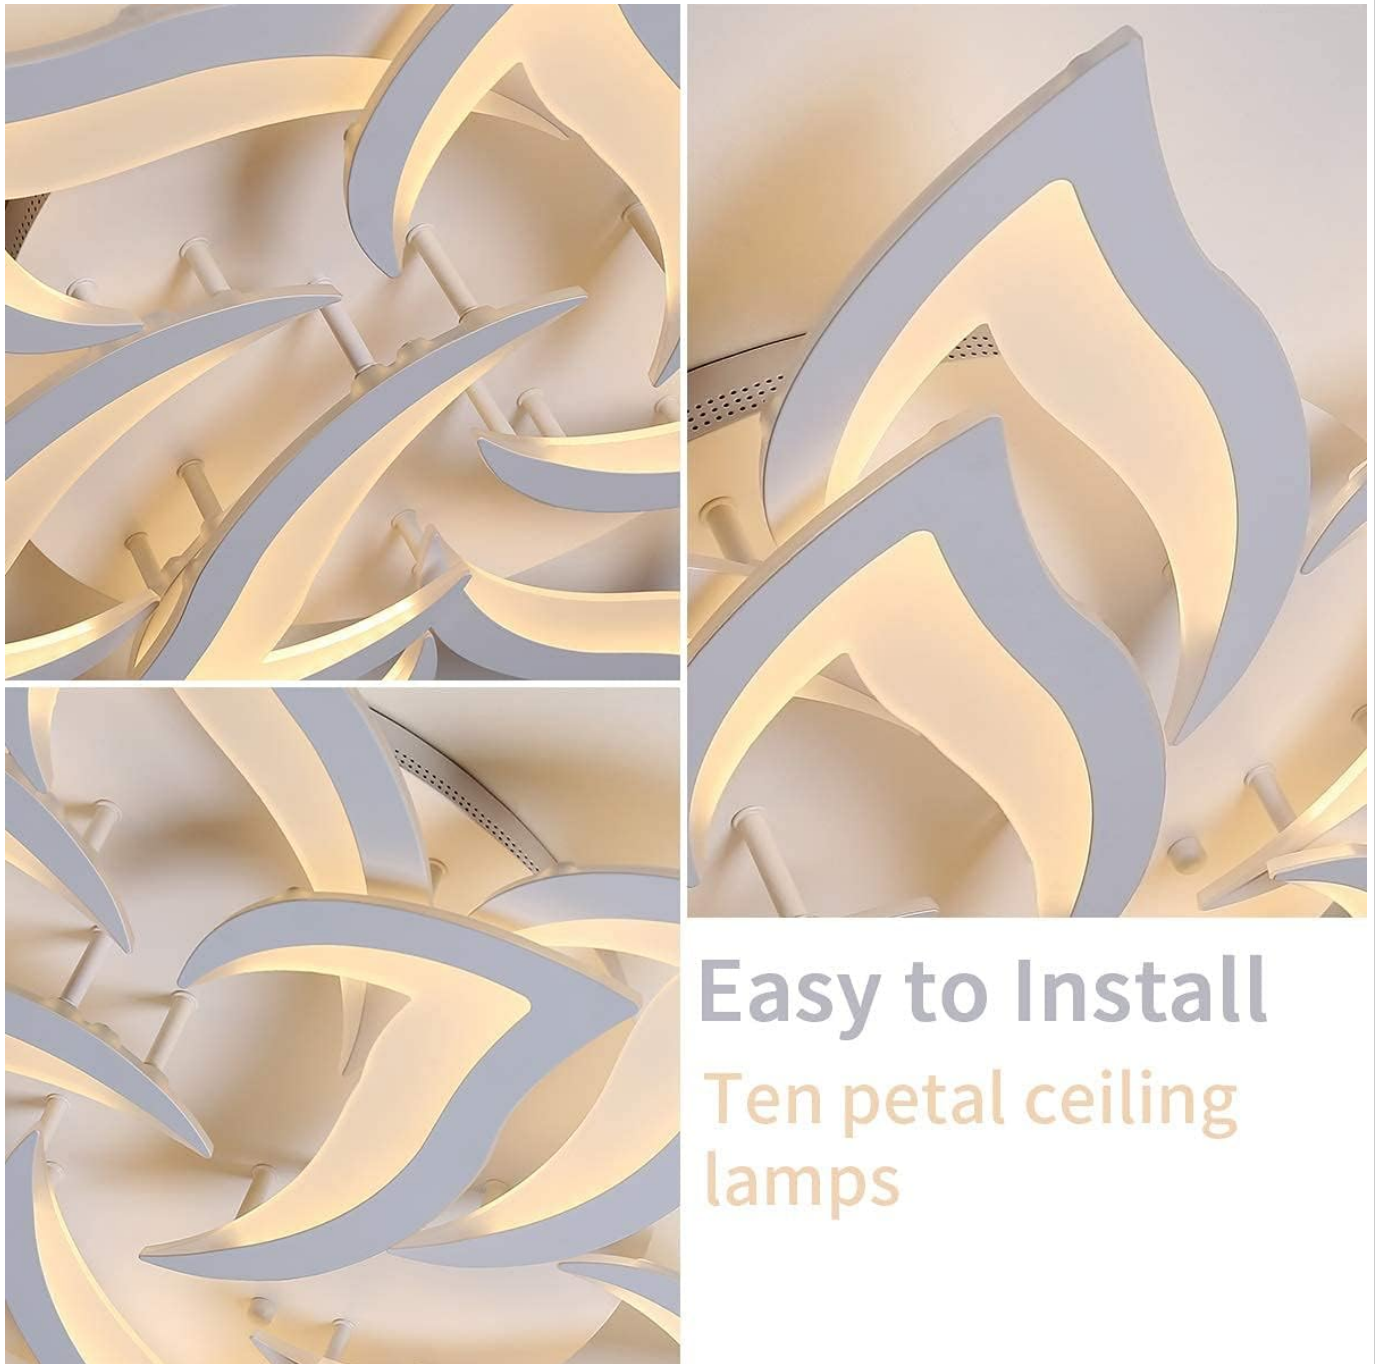

Easy to Install

Ten petal ceiling lamps

Figure 5.1: Illustration of attaching the light petals to the main fixture base.

Installation Video:

Your browser does not support the video tag.

Video 5.1: Detailed installation guide for the Garwarm 10-Petals Flower Ceiling Chandelier. This video demonstrates the assembly and wiring process.

6. OPERATING INSTRUCTIONS

The Garwarm Dimmable LED Ceiling Light is operated using the included remote control.

Remote Control Functions:

- **Power On/Off:** Press the 'I' button to turn on, 'O' button to turn off.
- **Brightness Adjustment:** Use the '+' and '-' buttons within the brightness control section to increase or decrease light intensity (5% - 100%).
- **Color Temperature Adjustment:** Use the 'K+' and 'K-' buttons to cycle through color temperatures from warm white (3000K) to neutral white (4500K) to cool white (6500K).
- **Preset Modes:** Dedicated buttons may be available for specific color temperatures (e.g., 3000K, 4500K, 6000K) or night light mode.
- **Memory Function:** The light will remember the last brightness and color temperature setting when turned off and on again.



Figure 6.1: Remote control for adjusting light settings.

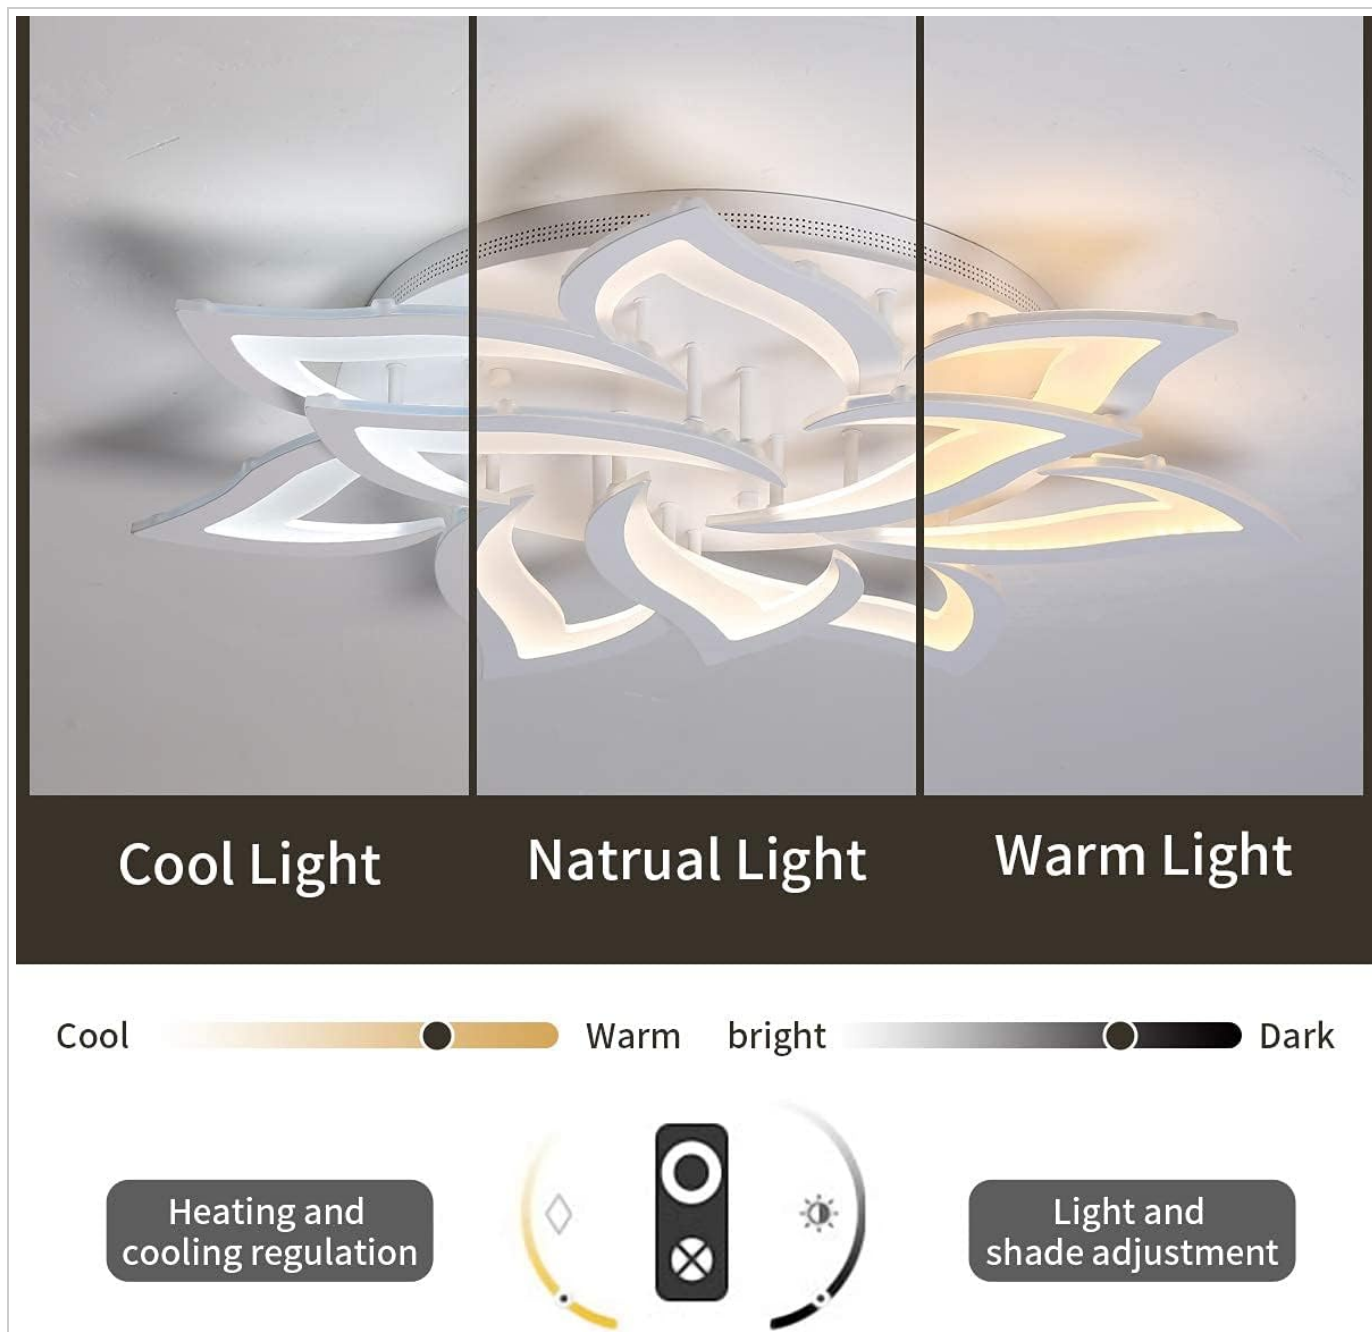 


Figure 6.2: The light offers adjustable color temperatures from cool to warm.

Operation Video:

Your browser does not support the video tag.

Video 6.1: Demonstration of the Garwarm 10-head dimmable flower ceiling light's various lighting modes and dimming capabilities.

7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your ceiling light.

- **Cleaning:** Turn off power before cleaning. Use a soft, dry cloth to wipe the fixture. Do not use abrasive cleaners or solvents, as they may damage the finish or acrylic.
- **Bulb Replacement:** The LED light source is integrated and not user-replaceable. If the LEDs fail, the entire fixture may need to be replaced.
- **Inspection:** Periodically check for any loose connections or signs of wear.

8. TROUBLESHOOTING

If you encounter issues with your ceiling light, refer to the following common solutions:

- **Light does not turn on:**

- Check if the power supply at the circuit breaker is on.
- Ensure all wiring connections are secure.
- Verify the remote control batteries are functional and correctly inserted.

- **Remote control not working:**

- Replace the remote control batteries.
- Ensure there are no obstructions between the remote and the light fixture.

- **Light flickers or dims unexpectedly:**

- Confirm that the fixture is not connected to an external dimmer switch. This fixture is only dimmable via its dedicated remote control.
- Check for stable power supply.

If these steps do not resolve the issue, please contact customer support.

9. WARRANTY AND SUPPORT

Warranty Information:

This Garwarm product comes with a 5-year manufacturer's warranty. Please retain your proof of purchase for warranty claims.

Customer Support:

For any questions, concerns, or issues regarding your Garwarm Dimmable LED Ceiling Light, please contact Garwarm Home Decor Store customer service. If the package you received is damaged or missing parts, we can replace or send the necessary parts to you for free.

Garwarm is committed to providing high-quality products and excellent service. We aim to create a comfortable, energy-efficient, and fantastic lifestyle for our customers.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question