

Pyle XPB20-288S PYRPUCWM22

Pyle Compact & Portable Washer & Dryer User Manual

Model: XPB20-288S PYRPUCWM22

Overview	Safety	Components	Setup	Operation	Maintenance	Troubleshooting	Specifications	Warranty
& Support								

1. PRODUCT OVERVIEW

The Pyle Compact & Portable Washer & Dryer is a versatile appliance designed for small loads of laundry, ideal for compact living spaces. This twin-tub unit combines washing and spin-drying functions, offering a convenient solution for delicate items, small garments, and everyday laundry needs. Its top-loading design and simple rotary controls ensure ease of use without requiring complex plumbing installations.



Figure 1: Pyle Compact & Portable Washer & Dryer, showing its twin-tub design and compact form factor.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury when using your appliance, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not operate any appliance with a damaged cord or plug, or if it is not working properly or has been dropped or damaged.

- Do not install or store this appliance where it will be exposed to the weather or to freezing temperatures.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
- Do not use this appliance for purposes other than its intended use.
- Always unplug the appliance from the electrical outlet before cleaning or performing any maintenance.
- Keep the area around the appliance clean and free of obstructions.
- Ensure the appliance is placed on a stable, level surface to prevent tipping.

3. PRODUCT COMPONENTS

Familiarize yourself with the main components of your Pyle Portable Washer & Dryer:

- **Wash Tub:** The larger compartment for washing clothes.
- **Spin Dryer Tub:** The smaller compartment for spin-drying clothes.
- **Control Panel:** Located on top, featuring rotary knobs for operation.
- **Water Inlet:** Port for adding water to the wash tub.
- **Drain Hose:** For expelling water after washing or spinning.
- **Power Cord:** For connecting the appliance to an electrical outlet.
- **Translucent Tub Container Window:** Allows visibility into the wash process.

Dimensions



Figure 2: Close-up of the control panel, showing the "Time Washer", "Program & Drain Selector", and "Spin Timer" knobs.

4. SETUP AND INSTALLATION

Proper setup ensures optimal performance and safety of your portable washer and dryer.

1. **Unpacking:** Carefully remove the appliance from its packaging. Inspect for any damage during transit. Retain packaging for future transport or storage.
2. **Placement:** Place the washer on a firm, level surface. Ensure there is sufficient space around the unit for ventilation and operation. Avoid placing it in direct sunlight or in areas with high humidity. The dimensions are approximately 22.2 inches (width) x 13.9 inches (depth) x 23.6 inches (height).

Easy to Operate

Separate timer control settings for washer and spinner



Figure 3: Illustrative diagram showing the approximate dimensions of the Pyle Portable Washer.

3. **Water Supply:** The unit does not require a permanent water hookup. Water can be manually poured into the wash tub using a bucket or hose. Ensure the water inlet is accessible.
4. **Drainage:** Position the drain hose to direct water into a sink, bathtub, or drain. Ensure the hose is not kinked or obstructed to allow for proper drainage. The drain hose should be placed lower than the unit's drain outlet for gravity drainage.
5. **Power Connection:** Plug the power cord into a standard 110V electrical outlet. Ensure the outlet is properly grounded and capable of handling the appliance's power requirements (250 Watt for washing, 120 Watt for spin-drying).

5. OPERATING INSTRUCTIONS

This section details the steps for washing and spin-drying your laundry.

5.1. Washing Clothes

1. **Load Laundry:** Open the lid of the wash tub and place your clothes inside. Do not overload the machine; the maximum wash-load capacity is 7.7 lbs.
2. **Add Water:** Pour water into the wash tub until the water level covers the clothes. You can use warm or cold water as desired.
3. **Add Detergent:** Add the appropriate amount of laundry detergent directly into the wash tub with the water and clothes.
4. **Set Wash Timer:** Turn the "Time Washer" rotary knob (Figure 2) to select the desired wash time. Typical wash cycles

range from 0 to 15 minutes.

- 5. **Select Wash Program:** Use the "Program & Drain Selector" knob (Figure 2) to choose between "Normal" or "Soft" wash cycles, depending on the fabric type.
- 6. **Start Washing:** The machine will begin washing automatically once the timer is set. The translucent window allows you to observe the washing process.
- 7. **Drain Water:** Once the wash cycle is complete, turn the "Program & Drain Selector" knob to the "Drain" position to empty the water from the wash tub. Ensure the drain hose is properly positioned.

5.2. Spin-Drying Clothes

- 1. **Transfer Clothes:** After washing and draining, transfer the wet clothes from the wash tub to the spin dryer tub. Distribute clothes evenly to prevent imbalance during spinning. The maximum spin-dryer capacity is 3.3 lbs.
- 2. **Close Lid:** Close the lid of the spin dryer tub securely.
- 3. **Set Spin Timer:** Turn the "Spin Timer" rotary knob (Figure 2) to select the desired spin time. Spin cycles typically range from 0 to 5 minutes.
- 4. **Start Spin-Drying:** The spin dryer will start automatically. Allow the cycle to complete.
- 5. **Remove Clothes:** Once the spin cycle is finished, open the lid and carefully remove the spin-dried clothes.

6. CARE AND MAINTENANCE

Regular cleaning and proper care will extend the life of your appliance.

- **Exterior Cleaning:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Interior Cleaning:** After each use, rinse the wash tub and spin dryer tub with clean water. You can run a short wash cycle with just water to clean the interior.
- **Drain Hose:** Periodically check the drain hose for blockages or kinks. Ensure it is clean and free-flowing.
- **Storage:** If storing the appliance for an extended period, ensure both tubs are completely dry. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Power Cord:** Inspect the power cord regularly for any signs of damage. If damaged, do not use the appliance and contact customer support.

7. TROUBLESHOOTING GUIDE

Refer to this guide for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start.	No power; power cord not plugged in; timer not set.	Ensure power cord is securely plugged into a live outlet. Check circuit breaker. Set the wash or spin timer.
Water does not drain.	Drain hose kinked or blocked; drain selector not set to "Drain"; drain hose positioned too high.	Straighten the drain hose. Clear any blockages. Turn the "Program & Drain Selector" to "Drain". Ensure the drain hose is lower than the unit's drain outlet.
Spin dryer vibrates excessively.	Clothes unevenly distributed in spin tub; machine not on a level surface.	Rearrange clothes evenly in the spin tub. Ensure the machine is on a stable, level surface.
Washing performance is poor.	Overloading; insufficient water; too little detergent.	Reduce laundry load. Add more water to cover clothes. Use recommended amount of detergent.

8. TECHNICAL SPECIFICATIONS

Feature	Detail
Model Number	XPB20-288S PYRPUCWM22
Brand	Pyle
Type	Compact & Portable Twin-Tub Washer & Spin Dryer
Power Supply	110V
Washing Motor Power	250 Watt
Wash-Load Capacity	7.7 lbs.
Spin-Dryer Power	120 Watt
Spin-Dryer Capacity	3.3 lbs.
Dimensions (L x W x H)	22.2" x 13.9" x 23.6" (approximate)
Item Weight	26.65 lbs.
Drum Material	Plastic
Controls Type	Knob
Access Location	Top Load

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Pyle website. For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Pyle customer service. Contact details can typically be found on the manufacturer's website or in your product packaging. You can visit the Pyle Store online for more information:[Pyle Official Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question