

Soocas S5

SOOCAS S5 Electric Razor Instruction Manual

4-in-1 Cordless Rechargeable Electric Shaver

1. INTRODUCTION

Thank you for choosing the SOOCAS S5 Electric Razor. This versatile 4-in-1 grooming kit is designed to provide a smooth, efficient, and comfortable shaving experience. Featuring a 3D rotary design, wet and dry use capability, and an intuitive LED display, the S5 model is engineered for convenience and performance. Please read this manual thoroughly before use to ensure proper operation and maintenance.



Figure 1.1: SOOCAS S5 Electric Razor and Accessories

Video 1.1: Overview of the SOOCAS 4-in-1 Electric Shaver, highlighting its cordless and wet/dry capabilities.

Video 1.2: Detailed demonstration of the SOOCAS 4-in-1 Cordless USB Rechargeable Electric Shaver's features and attachments.

2. PRODUCT COMPONENTS

- SOOCAS S5 Electric Razor (Main Body)
- 3D Rotary Shaver Head (Pre-installed)
- Facial Cleansing Brush Attachment
- Sideburn Trimmer Attachment
- Nose Hair Trimmer Attachment
- USB-C Charging Cable

- Cleaning Brush
- Travel Case
- User Manual (this document)

3. SETUP

3.1 Charging the Device

The SOOCAS S5 supports USB-C charging. A full charge takes approximately 1.5 hours and provides up to 60 days of use (based on 1 minute of daily use). The LED display will show the battery percentage during charging.

1. Ensure the charging port at the bottom of the shaver is dry before connecting the cable.
2. Connect the provided USB-C cable to the shaver's charging port.
3. Plug the other end of the USB-C cable into a compatible power source (e.g., USB wall adapter, power bank, PC, laptop).
4. The LED display will illuminate and show the charging progress.



Figure 3.1: Charging the SOOCAS S5 Electric Razor

3.2 Attaching and Detaching Heads

The SOOCAS S5 comes with four interchangeable heads for various grooming needs. To change a head:

1. Ensure the shaver is switched off.
2. To detach a head, firmly pull it straight upwards from the main body. Do not twist.
3. To attach a head, align the slot on the desired head with the corresponding slot on the shaver's main body. Press it down firmly until it clicks into place.



Figure 3.2: Attaching and Detaching Heads

4. OPERATING INSTRUCTIONS

4.1 Basic Shaving

The 3D rotary shaver head features innovative Air Cushion technology and double-layer, self-grinding blades for a close and comfortable shave. The blades automatically sharpen with use, maintaining efficiency over time.

- Press the power button to turn the shaver on.
- Gently move the shaver in circular motions across your face, allowing the 360° floating heads to adjust to your facial contours.
- The shaver can be used for both dry and wet shaving. For a more comfortable and cleaner shave, especially with thick beards, wet shave with shaving foam.



Figure 4.1: Smooth & Efficient Close Shave Technology

4.2 Speed Modes

The SOOCAS S5 offers two speed modes for customized shaving:

- **Standard Mode:** Default speed for regular shaving.
- **High-Speed Mode:** Provides a cutting speed of 3.9m/s and a blade rotation speed of 3400 rpm. Ideal for thicker or harder beards.

To switch between speed modes, long-press the power button for approximately 1 second while the shaver is on. The LED display will indicate the current speed mode.

4.3 Using Attachments

- **Facial Cleansing Brush:** Attach the brush head to deeply clean pores, grease, and dirt. Use with your preferred facial cleanser.

- **Sideburn Trimmer:** Attach the trimmer head to precisely trim sideburns and maintain your hairstyle details.
- **Nose Hair Trimmer:** Attach the nose hair trimmer head. Its 360° rotating blade safely trims excess nose hair without harming the nasal cavity.



Figure 4.2: 4-in-1 Multifunctional Use

4.4 Travel Lock

The travel lock feature prevents accidental activation of the shaver during transport, ensuring safety and preserving battery life.

- **To Activate:** Long-press the power button for 3 seconds while the shaver is off. A lock icon will appear on the LED display.
- **To Deactivate:** Long-press the power button for 3 seconds. The lock icon will disappear, and the shaver will be ready for use.

5. MAINTENANCE

5.1 Cleaning

The SOOCAS S5 is IPX7 waterproof, allowing for full body washing under running water. This makes cleaning convenient and hygienic.

1. Ensure the shaver is switched off and disconnected from the charging cable before cleaning.
2. Rinse the shaver head and main body under warm running water.
3. For thorough cleaning, detach the shaver head and rinse both the head and the internal mechanism. Use the provided cleaning brush to remove any stubborn hair residue.
4. Shake off excess water and allow all parts to air dry completely before reassembling or storing.



Figure 5.1: Wet & Dry Use and Full Body Washable Feature

5.2 Blade Replacement

The double-layer blades of the SOOCAS S5 are designed to self-grind, becoming sharper with continued use. Under normal daily use (1 minute per day), the blades are expected to maintain optimal performance for approximately one year. Replacement blades will be available from the manufacturer.

6. TROUBLESHOOTING

If you encounter any issues with your SOOCAS S5 Electric Razor, please refer to the following common problems and solutions:

- **Shaver not turning on:** Ensure the travel lock is deactivated (long-press power button for 3 seconds). Check battery level on the LED display and recharge if necessary.
- **Poor shaving performance:** Ensure the shaver head is clean and free of hair residue. Try using the high-speed mode for thicker beards. Consider wet shaving with foam for a closer result.
- **Skin irritation:** Ensure you are using the correct shaving technique (gentle circular motions). For sensitive skin, try wet shaving with foam. If irritation persists, consult a dermatologist.
- **Charging issues:** Verify that the USB-C cable is properly connected to both the shaver and the power source. Ensure the charging port is dry.

7. SPECIFICATIONS

- **Model Name:** S5
- **Power Source:** Battery Powered (1 Lithium Ion battery included)
- **Special Features:** Cordless, LED Display, Rechargeable
- **Recommended Uses:** Beard, Nose Hair
- **Waterproof Rating:** IPX7 (Fully washable)
- **Charging Time:** 1.5 hours for full charge
- **Working Time:** Up to 60 days (based on 1 min daily use)
- **Cutting Speed:** 3.9m/s (High-Speed Mode)
- **Blade Rotation Speed:** 3400 rpm (High-Speed Mode)
- **Product Dimensions:** 8.31 x 6.89 x 2.95 inches
- **Item Weight:** 8.82 ounces
- **Manufacturer:** SOOCAS

8. SAFETY INFORMATION

For your safety, please observe the following:

- Do not use the shaver in the shower or near water while it is plugged in or charging.
- Exercise caution when using high-speed mode and wet shaving to avoid potential skin irritation, especially if you have sensitive skin.
- Keep the device out of reach of children.
- Do not disassemble or attempt to repair the product yourself. Contact customer support for assistance.

9. WARRANTY & SUPPORT

Specific warranty details for the SOOCAS S5 Electric Razor are not provided in this manual. For information regarding warranty coverage, product support, or replacement parts, please refer to the manufacturer's official website or contact their customer service directly. Keep your purchase receipt as proof of purchase.