

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Princess](#) /

> [Princess 236047 Quick Boil Deluxe Stainless Steel Kettle User Manual](#)

Princess 236047

Princess 236047 Quick Boil Deluxe Stainless Steel Kettle User Manual

Model: 236047

INTRODUCTION

This manual provides essential information for the safe and efficient use of your Princess 236047 Quick Boil Deluxe Stainless Steel Kettle. Please read these instructions carefully before first use and retain them for future reference. This electric kettle features a 1.7-liter capacity, 3000W power for rapid boiling, and an adjustable temperature control for precise heating.

SAFETY INSTRUCTIONS

- Always ensure the kettle is placed on a stable, flat, heat-resistant surface.
- Do not immerse the kettle, power base, cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children and individuals with reduced physical, sensory, or mental capabilities.
- Unplug the kettle from the power outlet when not in use, before cleaning, and during filling.
- Do not operate the kettle if the power cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Avoid touching hot surfaces. Always use the handle.
- Do not fill the kettle above the maximum fill line or below the minimum fill line. Overfilling may cause boiling water to spill out. Operating empty may damage the heating element.
- Use only cold water for boiling.
- Ensure the lid is securely closed before operating.
- This appliance is intended for household use only. Do not use outdoors.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Princess Quick Boil Deluxe Kettle:

- Kettle Body (Stainless Steel)
- Lid with release button
- Handle

- Water Level Indicator with blue illumination
- Control Panel (Temperature selection, Keep Warm, Power On/Off)
- Spout with Anti-Calc Filter
- 360° Rotational Power Base with cord storage



Image: The Princess Quick Boil Deluxe Kettle showing the stainless steel body and the blue illuminated water level indicator.



Image: An overhead view of the kettle's interior with the lid open, showing the stainless steel base.



Image: The kettle with its lid open, revealing the removable anti-calc filter located in the spout area.

SETUP

1. **Unpacking:** Carefully remove the kettle and all accessories from the packaging. Dispose of packaging materials responsibly.
2. **First Use Cleaning:** Before using for the first time, fill the kettle with cold water to the maximum level. Boil the water, then discard it. Repeat this process two to three times to remove any manufacturing residues.
3. **Positioning:** Place the power base on a dry, flat, and stable surface. Ensure the power cord is not

dangling or in a position where it can be tripped over.

OPERATING INSTRUCTIONS

1. **Fill the Kettle:** Press the lid release button to open the lid. Fill the kettle with the desired amount of cold water, ensuring it is between the MIN and MAX marks on the water level indicator. Close the lid securely until it clicks.
2. **Place on Power Base:** Position the kettle onto the 360° rotational power base. Ensure it is seated correctly.
3. **Select Temperature:** Plug the power base into a suitable wall outlet. Use the temperature selection buttons on the handle's control panel to choose your desired water temperature. The kettle offers 13 adjustable temperature settings.
4. **Start Boiling:** Press the power button to start the heating process. The water level indicator will illuminate, and the kettle will begin to heat the water to the selected temperature.
5. **Automatic Shut-off:** The kettle will automatically switch off once the selected temperature is reached or if it boils dry.
6. **Keep Warm Function:** If desired, activate the 'Keep Warm' function after selecting your temperature. This will maintain the water at the chosen temperature for a set period.
7. **Pouring:** Carefully lift the kettle from its base and pour the hot water. Be cautious of steam and hot surfaces.



Image: A detailed view of the control panel on the kettle's handle, showing the temperature selection and power buttons.



Image: A hand pouring hot water from the Princess Quick Boil Deluxe Kettle into a glass.

MAINTENANCE

Regular cleaning and maintenance will prolong the life of your kettle.

- **Cleaning the Exterior:** Always unplug the kettle and allow it to cool completely before cleaning. Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- **Descaling:** Limescale buildup can affect performance. Descale your kettle regularly, especially in hard water areas. You can use a commercial descaling solution or a mixture of white vinegar and water (1 part vinegar to 2 parts water). Fill the kettle with the solution, boil it, and let it stand for 30 minutes before discarding. Rinse thoroughly with fresh water several times.
- **Cleaning the Anti-Calc Filter:** The removable anti-calc filter can be cleaned by rinsing it under running water. If heavily scaled, gently brush it with a soft brush. Ensure it is properly reinserted before use.
- **Dishwasher Safety:** **No parts of this kettle are dishwasher safe.**

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Kettle does not turn on.	No power supply; Kettle not properly seated on base; Dry-boil protection activated.	Check power outlet and plug connection. Ensure kettle is correctly placed on the power base. If dry-boil protection activated, allow kettle to cool down before refilling and restarting.
Water is not heating.	Kettle not switched on; Faulty heating element.	Press the power button. If the issue persists, contact customer support.
Kettle switches off before boiling or reaching set temperature.	Excessive limescale buildup; Faulty thermostat.	Descale the kettle as per maintenance instructions. If the problem continues, contact customer support.
Lid is difficult to open or close.	Mechanism obstruction or damage.	Ensure no debris is obstructing the lid mechanism. If the lid is damaged, contact customer support.

SPECIFICATIONS

- **Model:** 236047
- **Brand:** Princess
- **Capacity:** 1.7 Liters
- **Material:** Stainless Steel
- **Color:** Silver
- **Wattage:** 3000 W
- **Voltage:** 230 V
- **Dimensions (L x W x H):** 21 x 15 x 23 cm
- **Special Features:** Warm-hold function, Adjustable thermostat (13 settings), Overheat safety shut-off, Water level indicator, Dry-boil protection, Anti-calc filter, Concealed heating element, Automatic power off, Cordless design, 360° rotating base.

WARRANTY AND SUPPORT

This Princess 236047 Quick Boil Deluxe Stainless Steel Kettle comes with **a 2-year manufacturer's warranty**.

For warranty claims, technical support, or any questions regarding your product, please refer to the contact information provided with your purchase documentation or visit the official Princess website.