

[Manuals.plus](#) /

› [Bergström](#) /

› Bergström Sven 60 cm Headless Wall-Mounted Range Hood User Manual

Bergström SVEN

Bergström Sven 60 cm Headless Wall-Mounted Range Hood User Manual

Model: SVEN

1. INTRODUCTION

Thank you for choosing the Bergström Sven 60 cm Headless Wall-Mounted Range Hood. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your new appliance. Please read these instructions carefully before use and retain them for future reference.

2. SAFETY INSTRUCTIONS

To ensure safe operation, always follow these basic safety precautions:

- Ensure the electrical installation complies with local regulations.
- Do not allow children to operate the appliance.
- Regularly clean the filters to prevent grease accumulation, which can be a fire hazard.
- Do not flambé under the range hood.
- Ensure adequate ventilation in the room when the range hood is used simultaneously with gas or other fuel-burning appliances.
- Disconnect the appliance from the power supply before any cleaning or maintenance.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- Bergström Sven Wall-Mounted Range Hood
- Remote Control
- 2 Carbon Filters

- Illustrated Assembly Instructions
- Mounting Material

4. PRODUCT OVERVIEW

The Bergström Sven range hood features an elegant black design with innovative LED lighting and a high-quality finish. It is designed for wall-mounting and offers efficient extraction for your kitchen.



Image 4.1: Bergström Sven Range Hood, remote control, and energy label.



Image 4.2: Detail of the filter and LED lighting on the range hood.

5. DIMENSIONS

The overall dimensions of the range hood are crucial for proper installation and kitchen integration. Refer to the diagram below for detailed measurements.

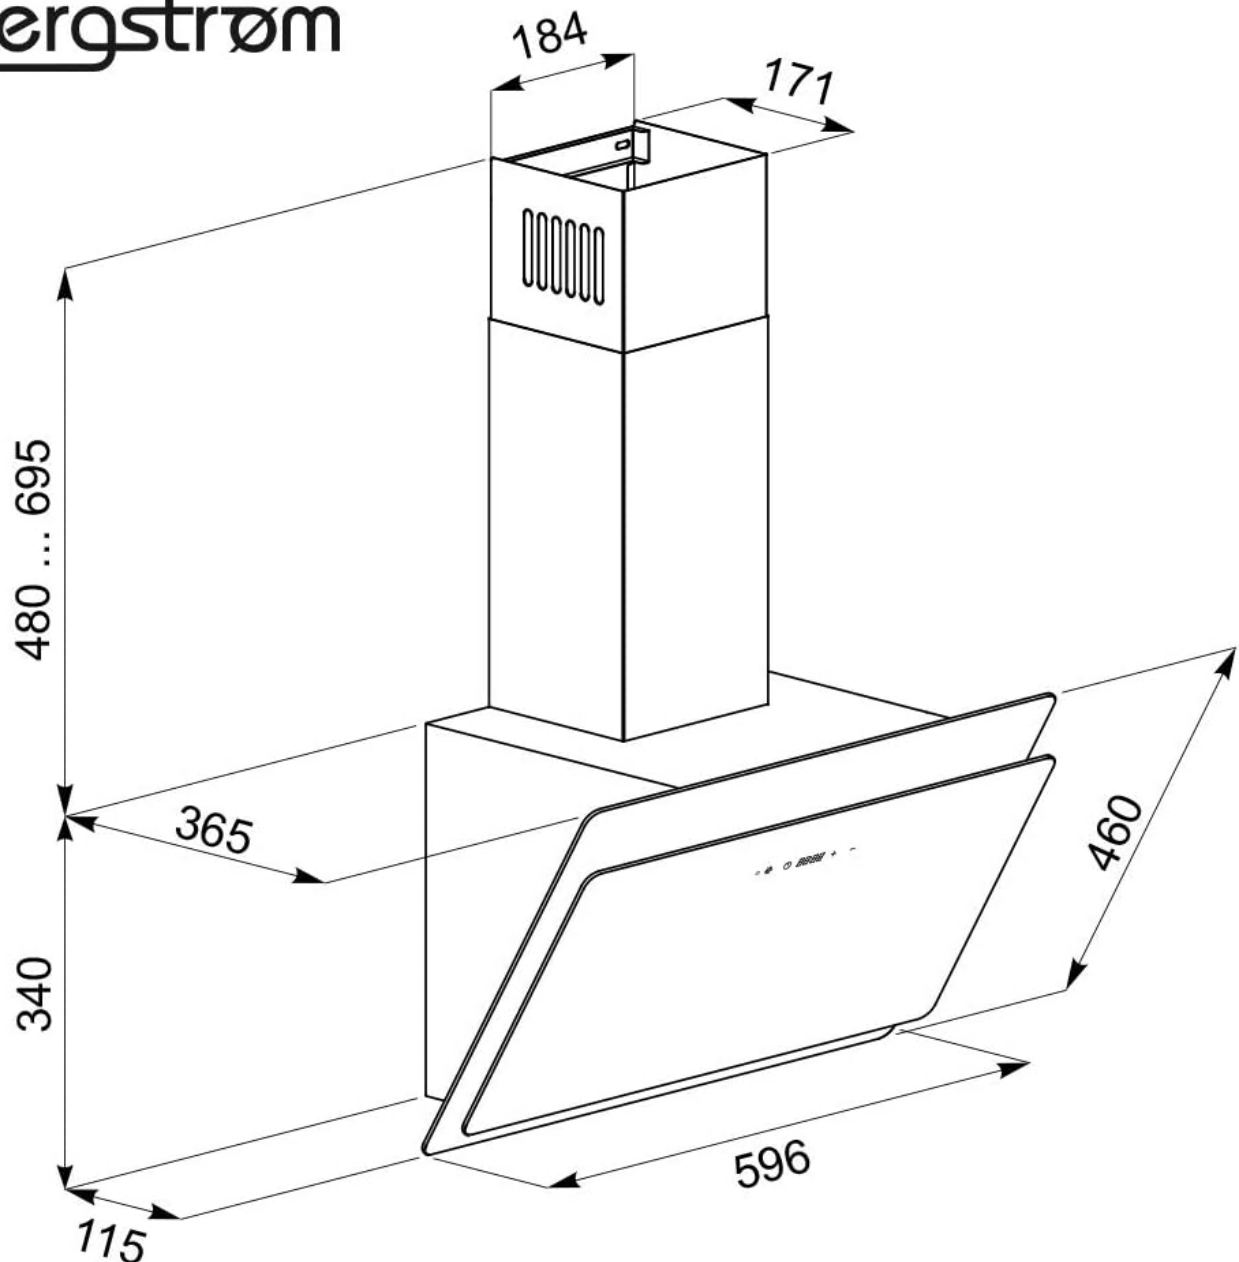


Image 5.1: Dimensional drawing of the Bergström Sven Range Hood.

Total Dimensions (Width x Height x Depth): 59.6 x 82-96.5 x 36.5 cm

6. SETUP AND INSTALLATION

The Bergström Sven range hood is designed for wall-mounted installation. For detailed step-by-step instructions, refer to the illustrated assembly instructions included in your package. Ensure you have the necessary tools and that the mounting surface is suitable to support the weight of the appliance.

- **Location:** Choose a location directly above your cooking surface, ensuring proper clearance as specified in the assembly instructions.
- **Ventilation:** Ensure the ducting system is correctly installed for optimal air extraction.
- **Electrical Connection:** Connect the appliance to a grounded electrical outlet according to local electrical codes.

7. OPERATING INSTRUCTIONS

Your range hood can be operated via its integrated touch interface or the provided remote control.

Bergstrøm

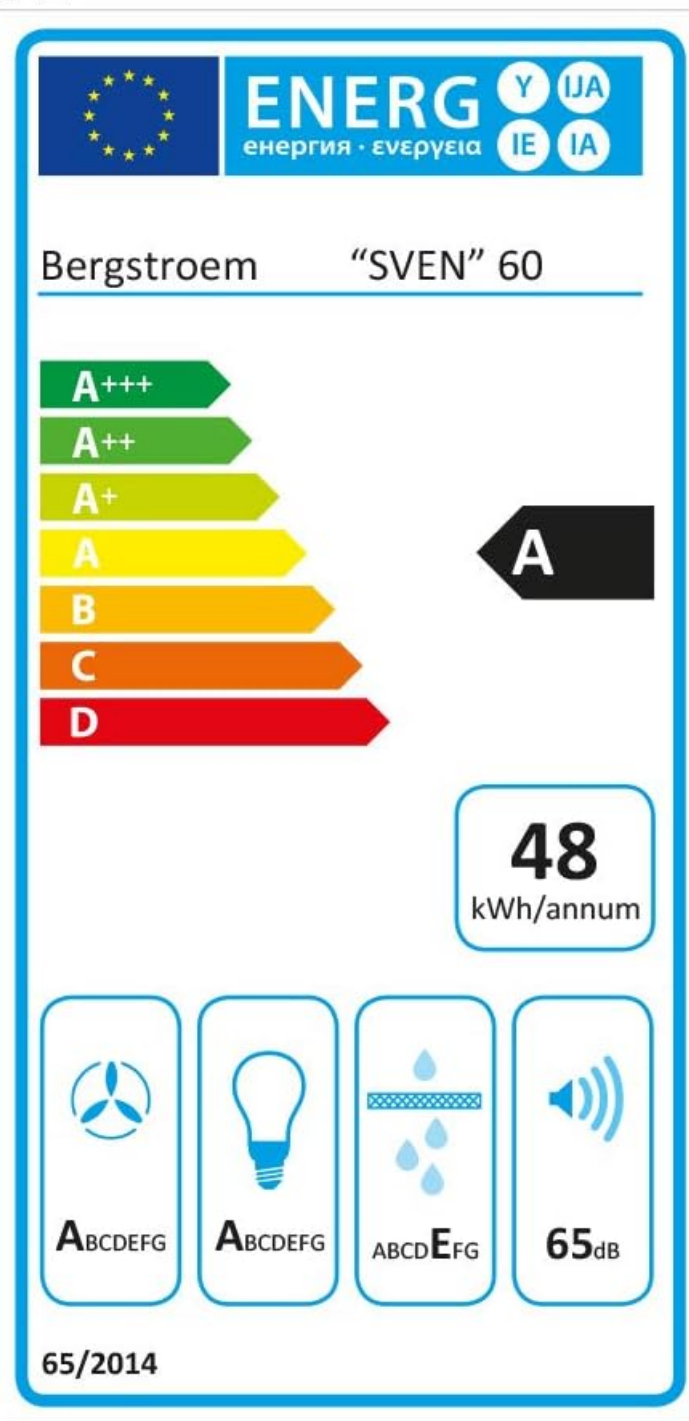


Image 7.1: Touch control panel and remote control for the range hood.

7.1. Power On/Off

Press the power button on the touch panel or remote control to turn the range hood on or off.

7.2. Adjusting Extraction Speed

The range hood features 4 extraction speeds. Use the '+' and '-' buttons on the touch panel or remote control to increase or decrease the fan speed according to your cooking needs.

7.3. LED Lighting

Press the light bulb icon button on the touch panel or remote control to turn the LED lights on or off. The LED lighting provides illumination for your cooking area.

8. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your range hood.

8.1. Cleaning the Exterior

Clean the exterior surfaces with a soft cloth and a mild, non-abrasive detergent. Avoid using harsh chemicals or abrasive materials that could damage the finish.

8.2. Carbon Filter Replacement

The range hood uses carbon filters for recirculation mode. These filters absorb odors and should be replaced periodically, typically every 3-6 months depending on usage. Refer to the assembly instructions for details on how to access and replace the carbon filters.

9. TROUBLESHOOTING

If you encounter issues with your range hood, consult the following table before contacting customer support:

Problem	Possible Cause	Solution
Range hood does not turn on.	No power supply.	Check if the appliance is plugged in and the circuit breaker is on.
Low extraction power.	Clogged filters or improper ducting.	Clean or replace carbon filters. Check for obstructions in the ducting.
Lights not working.	Faulty LED module.	Contact customer support for assistance.
Excessive noise.	Loose parts or motor issue.	Ensure all mounting screws are tight. If noise persists, contact customer support.

10. SPECIFICATIONS

Brand:	Bergström
Model:	SVEN
Color:	Black
Material:	Carbon (filter type)
Noise Level:	65 Decibels
Number of Speeds:	4
Light Source Type:	LED
Light Power:	3 Watts
Mounting Type:	Wall Mount

Control Type:	Remote Control, Touch Interface
Filter Type:	Carbon Filters
Energy Efficiency Class:	A

11. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

© 2026 Bergström. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

