

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [SIMPLE HOUSEWARE](#) /

› Simple Houseware Standard Double Rod Garment Rack, Silver User Manual

SIMPLE HOUSEWARE BO-08C-G

Simple Houseware Standard Double Rod Garment Rack, Silver

Model: BO-08C-G

1. PRODUCT OVERVIEW

The Simple Houseware Standard Double Rod Garment Rack in Silver is designed to provide a simple and efficient solution for additional garment storage. Constructed from heavy-duty steel with an elegant silver paint and chrome finish, this rack offers durability and portability. It features two horizontal rods, with the top rod being extendable, and smooth-rolling casters for easy movement.



Image 1.1: The Simple Houseware Standard Double Rod Garment Rack, Silver, fully assembled and holding various garments.

2. SAFETY INFORMATION

Please read and understand all instructions before assembly and use. Retain this manual for future reference.

- **Weight Capacity:** Do not exceed the maximum weight capacity of 150 pounds for the entire rack. Overloading can cause instability and damage.
- **Assembly:** Ensure all parts are securely connected before placing garments on the rack.
- **Stability:** Place the garment rack on a flat, level surface to prevent tipping.
- **Children and Pets:** Keep children and pets away from the rack during assembly to avoid injury. Do not allow children to climb on or play with the rack.
- **Movement:** When moving the rack, ensure it is not overloaded and move it slowly to maintain stability.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Top Horizontal Rods (2)
- Bottom Horizontal Rods (2)
- Vertical Support Poles (4)
- Base Frame Sections (2)
- Casters/Wheels (4)
- Connecting Joints/Hardware
- Assembly Tool (if included)

4. SETUP AND ASSEMBLY


Assembly is designed to be straightforward. Follow these steps carefully:

1. **Attach Casters to Base:** Secure the four casters to the designated holes on the two base frame sections. Ensure they are firmly attached.
2. **Assemble Base Frame:** Connect the two base frame sections using the provided connecting joints and hardware. Ensure the frame is stable and rectangular.
3. **Insert Vertical Support Poles:** Insert the bottom ends of the four vertical support poles into the corresponding holes on the assembled base frame. Ensure the push-button mechanisms (if present) click into place for secure locking.



Image 4.1: Close-up view of the base frame connection point, showing how vertical poles attach to the base.

4. **Attach Bottom Horizontal Rod:** Connect the bottom horizontal rod between the two lower vertical support poles. Ensure it is securely fastened.
5. **Attach Top Horizontal Rod:** Connect the top horizontal rod between the two upper vertical support poles. This rod may have extendable ends.

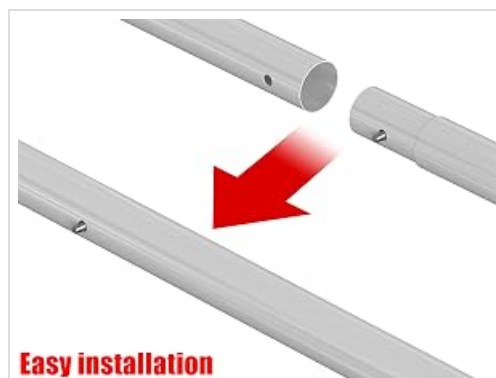

6. **Final Check:** Once assembled, gently shake the rack to ensure all connections are tight and the structure is stable.

5. OPERATION

The garment rack is designed for convenient use and mobility.

- **Hanging Garments:** Use hangers to place clothes on both the top and bottom rods. Distribute weight evenly to maintain stability.
- **Extending Rods:** The horizontal rods can be extended to increase hanging space. Gently pull the ends of the rods outwards until they reach the desired length. Ensure they are locked in place before hanging items on the extended sections.



Image 5.1: The garment rack illustrating the extendable horizontal rods, which can extend up to 8.75 inches on both sides.

- **Mobility:** The rack is equipped with four casters for easy movement. Push or pull the rack gently to relocate it.



Image 5.2: Detail of a caster wheel, highlighting the smooth-rolling design for easy movement.

6. MAINTENANCE

Regular maintenance will help prolong the life of your garment rack.

- **Cleaning:** Wipe down the metal surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Inspection:** Periodically check all connections and fasteners to ensure they remain tight. Re-tighten if necessary.
- **Caster Care:** Keep the caster wheels free of debris (e.g., hair, lint) to ensure smooth rolling.

7. TROUBLESHOOTING

If you encounter issues with your garment rack, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Rack is wobbly or unstable.	Loose connections; uneven weight distribution; uneven surface.	Ensure all bolts and connections are tightened. Redistribute garments evenly. Move the rack to a flat, level surface.
Casters do not roll smoothly.	Debris caught in wheels; damaged casters.	Clean any debris from the caster wheels. If casters are damaged, contact customer support for replacements.
Horizontal rods do not extend or retract easily.	Mechanism is stiff or obstructed.	Ensure no garments are obstructing the mechanism. Apply a small amount of silicone lubricant if necessary (avoiding contact with clothing).

8. SPECIFICATIONS

Detailed specifications for the Simple Houseware Standard Double Rod Garment Rack:

- **Model:** BO-08C-G
- **Color:** Silver
- **Material:** Heavy Duty Steel
- **Finish Type:** Chrome
- **Product Dimensions (assembled):** 17"D x 48"W x 58.75"H
- **Extendable Horizontal Rod:** Extends from 30.5" to 48" (each side extends 8.75")
- **Item Weight:** 9.33 Pounds
- **Maximum Weight Capacity:** 150 Pounds

- **Installation Type:** Free Standing
- **Special Feature:** Portable, Double Rod

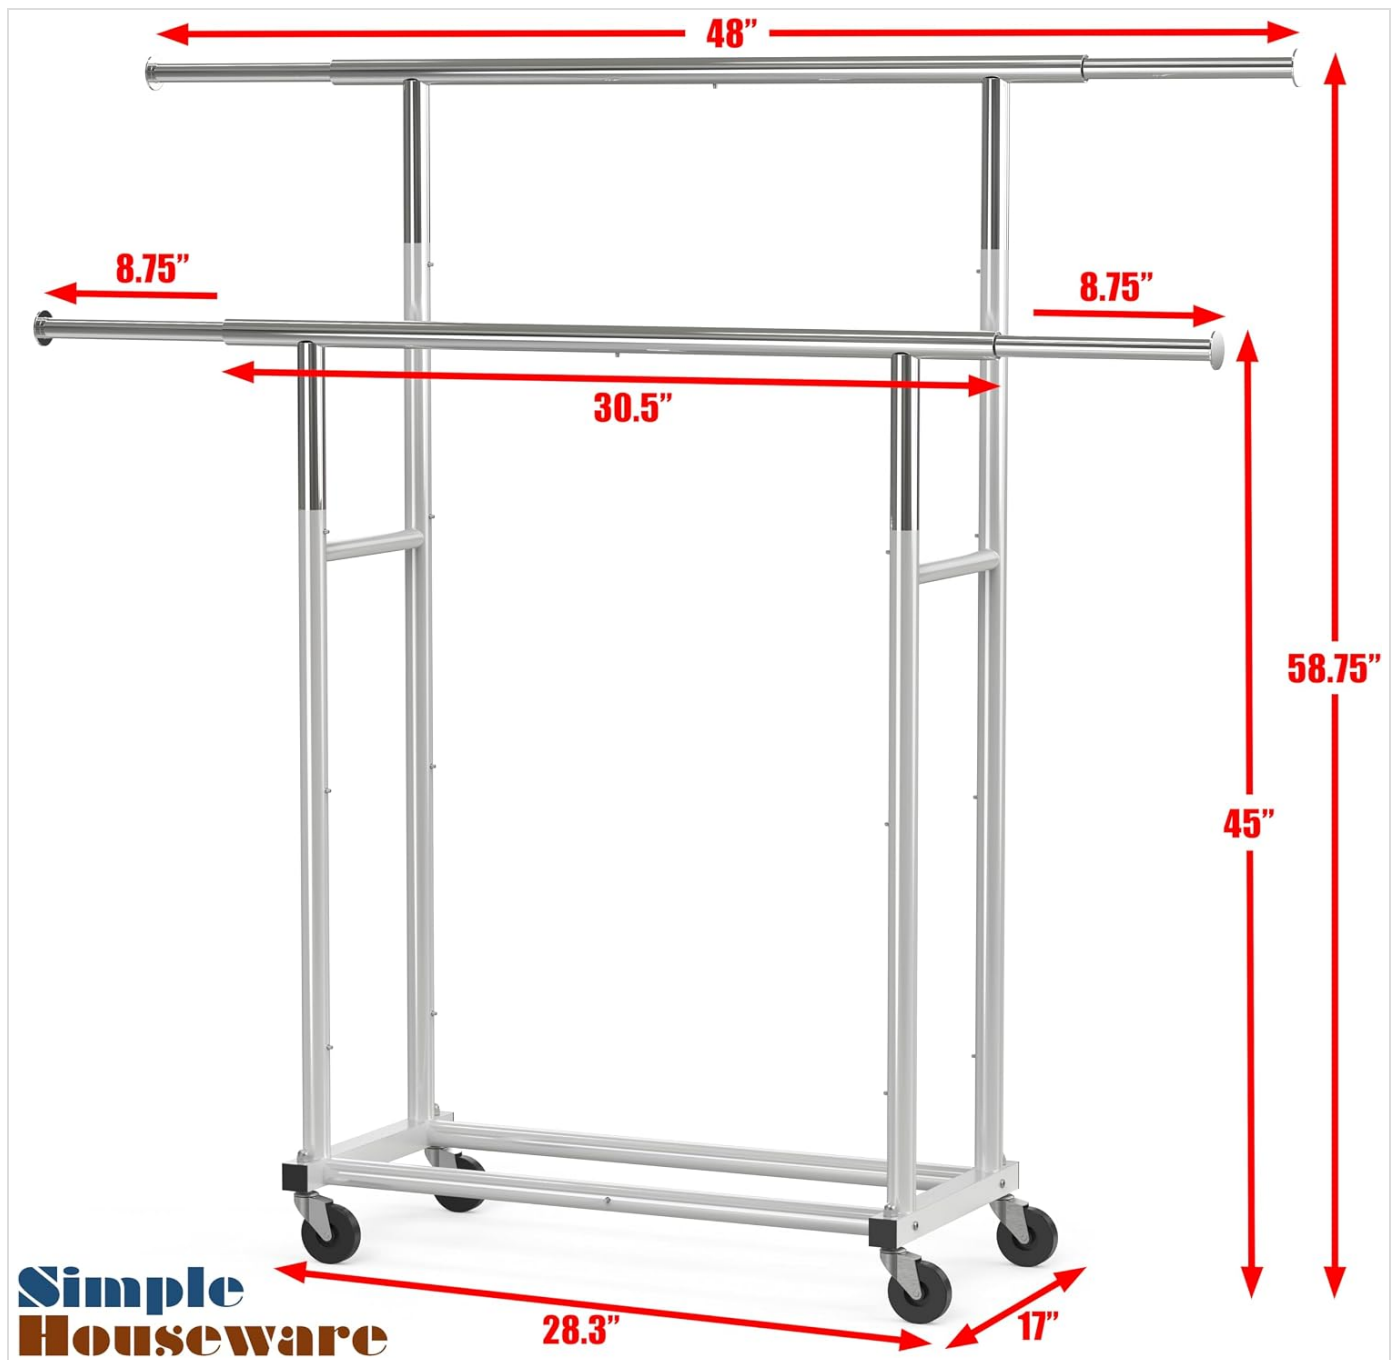


Image 8.1: Dimensional diagram of the garment rack, indicating height, width, and depth measurements.

9. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact Simple Houseware customer service. Refer to the product packaging or the official Simple Houseware website for the most current contact details.

Website: [Visit the SIMPLE HOUSEWARE Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08N2X92S7>

More documents and user manuals: <https://manuals.plus/>