

[Manuals.plus](#) /

› [Eapmic](#) /

› Eapmic Digital Induction Cooktop User Manual

Eapmic 1200W+1200W

Eapmic Digital Induction Cooktop User Manual

Model: 1200W+1200W Double Burner Electric Stove

1. INTRODUCTION

This user manual provides essential information for the safe and efficient operation of your Eapmic Digital Induction Cooktop. Please read this manual thoroughly before using the appliance and retain it for future reference.

The Eapmic Digital Induction Cooktop features two independent heating zones, each with 1200W power, designed for efficient and precise cooking. Its sleek black crystal panel and touch controls offer ease of use and cleaning.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the cooktop.
- **Induction Cookware Requirement:** This cooktop requires ferromagnetic cookware (e.g., cast iron, magnetic stainless steel). If there is no pot or the pot is not made of iron, the product will not work. Suitable pot diameters are 12cm-24cm.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or cooktop in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- Ensure adequate ventilation around the cooktop during operation.
- The ceramic plate is hot after cooking; please do not touch with your hand immediately.

3. PRODUCT FEATURES

- **Dual Burner Design:** Two independent heating zones, each with 1200W power, for versatile cooking.
- **Digital Sensor Touch Controls:** Full-screen tempered glass design with touch buttons for easy operation and cleaning.
- **Multiple Safety Protections:** Integrated circuit design for enhanced safety during operation.
- **8 Gear Firepower Regulation:** Precise control over cooking temperature and intensity.
- **Black Crystal Panel:** High temperature resistance and easy to clean surface.
- **Efficient Heat Dissipation:** Equipped with a fan for faster cooling.
- **Non-slip Pads:** For stable placement on countertops.

4. PACKAGE CONTENTS

Upon unpacking, please ensure all items are present and in good condition:

- 1 x Eapmic Digital Induction Cooktop (1200W+1200W Model)



Figure 4.1: Eapmic Digital Induction Cooktop.

5. SETUP

1. **Unpacking:** Carefully remove the cooktop from its packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the cooktop on a stable, flat, heat-resistant surface. Ensure there is adequate space around the unit for ventilation (at least 10-15 cm on all sides). Do not place it near heat sources or flammable materials.
3. **Power Connection:** Plug the cooktop into a standard 110V electrical outlet. Ensure the outlet is properly grounded and can support the appliance's power requirements (2400W total).
4. **Cookware Selection:** Use only induction-compatible cookware. This includes pots and pans made of cast iron, enameled iron, or magnetic stainless steel. The base of the cookware must be flat and have a diameter between

12cm and 24cm.



Figure 5.1: Cooktop dimensions for proper placement. The cooktop measures approximately 680mm (26.77 inches) in length and 380mm (14.96 inches) in width.



Figure 5.2: Examples of compatible cookware for the induction cooktop.

6. OPERATING INSTRUCTIONS

The Eapmic Digital Induction Cooktop features intuitive touch controls for easy operation.

1. **Power On:** Place an induction-compatible pot with contents on one of the cooking zones. Press the **"On/Off"** button for the desired burner. The display will illuminate.
2. **Select Power Level:** Use the **"Up" (+)** and **"Down" (-)** buttons to adjust the firepower. There are 8 power levels available. The display will show the current power setting.
3. **Function Button:** The **"Function"** button may cycle through pre-set cooking modes or specific temperature settings, if available. Refer to the display for active function.
4. **Timer Setting:** Press the **"Timer"** button to activate the timer function. Use the **"Up" (+)** and **"Down" (-)** buttons to set the desired cooking time. The cooktop will automatically turn off when the timer expires.
5. **Lock Function:** Press the **"Lock"** button to prevent accidental changes to settings during cooking. Press again to unlock.
6. **Power Off:** After cooking, press the **"On/Off"** button for the respective burner to turn it off. The cooktop will display **"H"** (Hot) if the surface is still hot.



Figure 6.1: The cooktop in operation, demonstrating its use for various dishes.



Figure 6.2: Close-up view of the cooktop with a pan on one of the induction zones, showing the digital controls.

7. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your induction cooktop.

- **Before Cleaning:** Always unplug the cooktop from the power outlet and allow it to cool completely before cleaning.
- **Surface Cleaning:** The black crystal panel is easy to clean. Wipe the surface with a soft, damp cloth and a mild detergent. For stubborn stains, use a non-abrasive ceramic cooktop cleaner.
- **Do Not Use:** Avoid using abrasive cleaners, scouring pads, or harsh chemicals, as these can scratch or damage the surface.
- **Ventilation Openings:** Keep the ventilation openings (fan area) clear of dust and debris to ensure proper heat dissipation. Do not block the fan.
- **Storage:** When not in use for extended periods, store the cooktop in a dry, cool place, away from direct sunlight and moisture.

8. TROUBLESHOOTING

If you encounter issues with your cooktop, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cooktop does not turn on or heat.	No power supply. Incorrect cookware used or no cookware detected. Cookware not centered on the cooking zone.	Check if the plug is securely inserted and the power outlet is working. Ensure you are using induction-compatible cookware (iron/magnetic base) with a diameter between 12cm-24cm. Reposition the cookware centrally on the cooking zone.
Display shows "E" or error code.	Overheating. Internal malfunction.	Turn off the cooktop, unplug it, and let it cool down for at least 30 minutes. Ensure ventilation is not blocked. If the error persists after cooling and checking cookware, contact customer support.
Cooktop makes a humming or buzzing noise.	Normal operation sound of induction technology. Vibration of cookware.	This is normal and not a defect. Try using different cookware or adjusting the power level.

If the problem persists after attempting these solutions, please contact Eapmic customer support.

9. SPECIFICATIONS

Attribute	Detail
Model	1200W+1200W (Double Burner)
Rated Voltage	110V
Power of Left Furnace	1200W
Power of Right Furnace	1200W
Total Power	2400W
Firepower Regulation	8 gear firepower
Control Type	Touch
Material	Black Crystal Panel (Tempered Glass)
Product Dimensions (L x W x H)	26.36"D x 15.74"W x 2.95"H (approx. 67cm x 40cm x 7.5cm)
Compatible Pot Diameter	12cm - 24cm (4.7 inches - 9.4 inches)
UPC	723508125333
ASIN	B08N42QQDZ

10. WARRANTY AND SUPPORT

Eapmic is committed to providing excellent customer service. While specific warranty details are not provided in this manual, if you have any questions, concerns, or require assistance with your Eapmic Digital Induction Cooktop, please do

not hesitate to contact our customer support team. We will endeavor to resolve your issue promptly.
For support, please refer to the contact information provided with your purchase or visit the official Eapmic website.

© 2023 Eapmic. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question