

[Manuals.plus](#) /

› [WHOLESUN](#) /

› WHOLESUN Electric Pressure Washer EJX-13 User Manual

WHOLESUN EJX-13

WHOLESUN Electric Pressure Washer EJX-13 User Manual

Model: EJX-13

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation and maintenance of your WHOLESUN Electric Pressure Washer EJX-13. Please read all instructions carefully before use and retain this manual for future reference.

The WHOLESUN Electric Pressure Washer EJX-13 is designed for various cleaning tasks, offering a powerful 1950 PSI at 3.9 GPM. It is suitable for cleaning vehicles, driveways, patios, and other outdoor surfaces.



Image: WHOLESUN Electric Pressure Washer EJX-13 with included nozzles, hose, and soap bottle.

2. SAFETY INFORMATION

Always follow basic safety precautions to reduce the risk of fire, electric shock, and personal injury. This pressure washer is equipped with an Automatic Total Stop System (TSS) for enhanced safety and prolonged motor life.

- Ensure the power cord is connected to a grounded outlet with GFCI protection.
- Never point the spray gun at people, pets, or electrical devices.
- Wear appropriate safety gear, including eye protection, during operation.
- Do not operate the unit if any parts are damaged.

- Keep children and bystanders away from the operating area.



Image: Overview of the pressure washer's key features, including its 1950 PSI pressure, 1.58 GPM flow rate, 1600W motor, Total Stop System, and IPX5 water resistance rating.

3. SETUP

Follow these steps for proper assembly and initial setup of your pressure washer:

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all components listed in the parts diagram are present.
2. **Attach Handle:** Securely attach the handle to the main unit. Ensure it clicks into place or is fastened with the provided hardware.
3. **Connect High-Pressure Hose:** Connect one end of the high-pressure hose to the pressure washer's outlet and the other end to the spray gun. Tighten connections firmly.
4. **Connect Water Supply:** Attach your garden hose to the water inlet on the pressure washer. Ensure the water supply is clean and free of debris.
5. **Connect Power:** Plug the 33 ft power cord with inline GFCI into a suitable outdoor electrical outlet.



- | | | |
|------------------------|----------------------|--------------------|
| 1 4 Adjustable Nozzles | 4 Long Pressure Hose | 7 Detergent Bottle |
| 2 Hose Connector | 5 Gun Handle | |
| | 6 Gun Lance | |


Image: Detailed diagram illustrating the various components of the pressure washer, including the adjustable nozzles, hose connector, detergent bottle, long pressure hose, gun handle, and gun lance.



Storage Easier



Detergent Bottle for Car

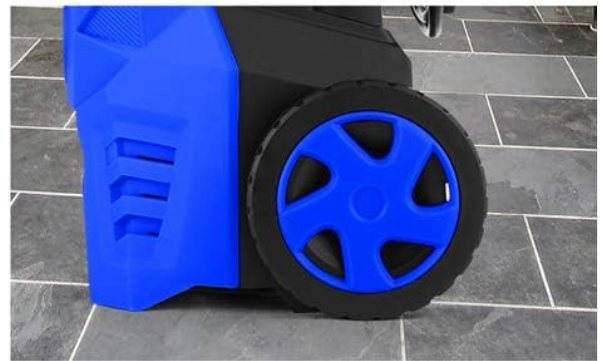

Big Wheel



Back Side

Image: The pressure washer highlighting its compact design for easy storage, the integrated detergent bottle for vehicle cleaning, and robust large wheels for effortless transport.

4. OPERATING INSTRUCTIONS

Before starting, ensure all connections are secure and the water supply is turned on. Purge air from the system by squeezing the spray gun trigger until a steady stream of water emerges.

4.1 Nozzle Selection

The pressure washer comes with 4 quick-connect nozzles (0°, 15°, 25°, 40°) and a soap nozzle. Each nozzle is color-coded for easy identification:

- **Red (0°):** For intense spot cleaning or hard-to-reach areas. Use with caution.

- **Yellow (15°):** For aggressive cleaning of small areas, such as removing stubborn stains.
- **Green (25°):** For general cleaning of most surfaces, like patios, driveways, and vehicles.
- **White (40°):** For gentle cleaning of delicate surfaces, such as windows or painted surfaces.
- **Black (Soap):** For applying detergent.

To change nozzles, pull back the collar on the spray gun and insert the desired nozzle. Release the collar to lock it in place.

4.2 Applying Detergent

Fill the detergent bottle with appropriate pressure washer detergent. Attach the soap nozzle to the spray gun. The pressure washer will automatically draw detergent when the soap nozzle is in use.

4.3 Cleaning Techniques

- Always start with the lowest pressure setting (widest spray angle) and gradually increase if needed.
- Keep the spray gun moving to avoid damaging surfaces.
- Maintain a safe distance from the surface being cleaned.



Image: A user operating the pressure washer to clean a wooden fence, showcasing its application for outdoor surface cleaning.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your pressure washer.

- **After Each Use:** Flush the system with clean water to remove any detergent residue.
- **Nozzle Cleaning:** Clean clogged nozzles with the included nozzle cleaning tool.
- **Storage:** Store the pressure washer in a dry, frost-free environment. Disconnect all hoses and drain any remaining water from the unit and accessories.
- **Filter Maintenance:** Regularly check and clean the water inlet filter to prevent debris from entering the pump.

6. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Motor does not start	Power cord not plugged in; GFCI tripped; No power at outlet	Check power connection; Reset GFCI; Test outlet with another device
Low pressure	Clogged nozzle; Insufficient water supply; Air in pump	Clean nozzle; Ensure full water flow; Purge air from system
Water leaks	Loose connections; Damaged O-rings	Tighten all connections; Replace damaged O-rings
Motor stops frequently	Thermal overload; Total Stop System (TSS) activating	Allow motor to cool; This is normal operation for TSS

7. SPECIFICATIONS

- **Brand:** WHOLESUN
- **Model Number:** EJX-13
- **Power Source:** Corded Electric
- **Maximum Pressure:** 1950 PSI
- **Maximum Flow Rate:** 3.9 Gallons Per Minute (GPM)
- **Hose Length:** 19.7 ft (236.2 Inches)
- **Power Cord Length:** 33 ft
- **Item Weight:** 17.16 pounds
- **Product Dimensions:** 10.6"L x 9.4"W x 26.8"H
- **Ingress Protection Rating:** IPX5
- **Safety Certifications:** CE, CSA



Image: Illustration of the Total Stop System (TSS) feature, which automatically turns off the pressure washer when the trigger is released, extending the product's lifespan.

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided with your product packaging or visit the official WHOLESUN website. Keep your purchase receipt as proof of purchase.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08N525CWT>

More documents and user manuals: <https://manuals.plus/>