



[Manuals.plus](#) /

› [Teamson Kids](#) /

› Teamson Kids Little Chef Milano Classic Kitchen Playset Instruction Manual TD-13397B

Teamson Kids TD-13397B

Teamson Kids Little Chef Milano Classic Kitchen Playset Instruction Manual

Model: TD-13397B

1. INTRODUCTION

This manual provides essential information for the assembly, operation, and maintenance of your Teamson Kids Little Chef Milano Classic Kids Kitchen Playset. Please read these instructions thoroughly before assembly and use to ensure safe and proper functionality of the product.



Image 1.1: The Teamson Kids Little Chef Milano Classic Kitchen Playset in gray, featuring a refrigerator, stove, oven, and sink area.

2. SAFETY INFORMATION

WARNING: This product contains small parts. Adult supervision is required during assembly and play to prevent choking hazards. Keep all packaging materials away from children.

- Ensure all components are securely fastened before use.
- Do not allow children to climb on the playset.
- Regularly inspect the playset for loose parts or damage. Discontinue use if any damage is found.

3. PACKAGE CONTENTS

Verify that all components listed below are present before beginning assembly:

- Play kitchen unit
- 6 plastic accessories: Pan, pot, 2 spatulas, and 2 spice bottles
- Ice maker unit with 3 plastic ice cubes and 1 cup



Image 3.1: Children interacting with various features of the kitchen playset, including the stove and sink.

4. SETUP AND ASSEMBLY

The Teamson Kids Little Chef Milano Classic Kitchen Playset requires adult assembly. Please follow the detailed instructions provided in the separate assembly guide included with your product. Ensure all screws and fasteners are tightened securely. The estimated assembly time is approximately one hour.

5. OPERATING INSTRUCTIONS

5.1. Electric Induction Cooker

- The induction cooker features realistic light and sound effects.
- **Battery Requirement:** The induction cooker requires 2 x 1.5V AA/LR6 batteries (not included). Insert batteries into the designated compartment, observing correct polarity.

- Press the ON/OFF button to activate the lights and sounds.



Image 5.1: A child interacting with the induction cooker, demonstrating its button functionality.

5.2. Ice Maker

- The refrigerator includes an interactive ice maker.
- Place the provided plastic ice cubes into the dispenser.
- Position the cup under the dispenser and press the lever to release the ice cubes.



Image 5.2: A child demonstrating the use of the ice maker, placing a cup to receive ice cubes.

5.3. Oven and Dishwasher

- The oven and dishwasher doors are designed to open and close, allowing for interactive play.
- The oven features turning knobs for additional realism.



Image 5.3: A child opening the oven door, revealing the interior space.

5.4. Sink and Faucet

- The playset includes a sink and faucet for pretend washing.



Image 5.4: A child interacting with the sink and faucet, simulating washing.

5.5. Product Overview Video

Your browser does not support the video tag.

Video 5.5: An official product video showcasing the features and interactive elements of the Teamson Kids Little Chef Milano Classic Kitchen Playset. This video demonstrates the induction cooker's lights and sounds, the ice maker functionality, and the opening doors of the oven and refrigerator.

6. MAINTENANCE

To clean the playset, wipe surfaces with a damp cloth. Avoid using abrasive cleaners or harsh chemicals, as these may damage the finish. Ensure the playset is dry before allowing children to play with it again.

7. TROUBLESHOOTING

- **Induction Cooker Not Working:** Check if batteries are inserted correctly and are not depleted. Replace batteries if necessary.
- **Loose Parts:** Periodically check all screws and connections. Tighten any loose components using appropriate tools.
- **General Wear and Tear:** While designed for durability, excessive force or improper use can cause damage. Inspect the playset regularly for any signs of damage and address them promptly.

8. SPECIFICATIONS

Product Dimensions	36 x 17 x 36 inches (H x L x W)
Item Weight	39.1 pounds
Model Number	TD-13397B
Recommended Age	3 years and up
Battery Requirement (Cooker)	2 x 1.5V AA/LR6 (not included)

9. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or visit the official Teamson Kids website. Contact customer service for assistance with any issues not covered in this manual.