

Accutime JRW4041AZ

Accutime Jurassic World Kids Smart Watch Instruction Manual

Model: JRW4041AZ

1. INTRODUCTION

This manual provides instructions for the Accutime Jurassic World Kids Smart Watch, Model JRW4041AZ. This device is designed for children, offering interactive features without internet connectivity, calling, or texting capabilities, ensuring a safe and engaging experience. Please read this manual thoroughly before using the watch to ensure proper operation and care.



Image 1.1: Front view of the Accutime Jurassic World Kids Smart Watch, showcasing its dinosaur-themed display and strap design.

2. PRODUCT FEATURES

The Jurassic World Kids Smart Watch includes a variety of functions designed for entertainment and utility:

- **Touchscreen Display:** Intuitive interface for easy navigation.
- **10 Changeable Watch Faces:** Customize the display with various dinosaur-themed designs.
- **Selfie Camera:** Capture photos directly from the watch.

- **Photo Album Viewer:** Browse saved images.
- **Video Player:** View recorded videos.
- **Voice Recorder:** Record and play back audio clips.
- **Pedometer (Step Counter):** Track daily steps.
- **Calculator:** Perform basic arithmetic.
- **Alarm Clock:** Set reminders and wake-up times.
- **Timer and Stopwatch:** Utility functions for various activities.
- **Interactive Games:** Engage with pre-loaded games.
- **Safety Features:** No Wi-Fi, calling, or texting capabilities for enhanced child safety.



Image 2.1: The smartwatch display surrounded by icons representing its various features like camera, video, games, and calculator.



Image 2.2: The watch face displaying a dinosaur scene, with text indicating '10 Changeable Watch Faces', '6 Interactive Games', and 'Fun Selfie Camera'.

3. SETUP

3.1. Charging the Device

Before initial use, fully charge the smartwatch for approximately 3 hours. Use the provided USB charging cable to connect the watch to a compatible USB power source (e.g., computer USB port or a USB wall adapter).

1. Locate the USB charging port on the side of the watch.
2. Connect the small end of the USB cable to the watch's charging port.
3. Connect the larger end of the USB cable to a powered USB port.
4. The screen may remain blank during charging; this is normal.



Image 3.1: The included USB charging cable, featuring a standard USB-A connector on one end and a micro-USB connector on the other.



Image 3.2: Side profile of the smartwatch, highlighting the USB charging port for connecting the charging cable.

3.2. Powering On/Off

To power on the watch, press and hold the power button (usually located on the side) until the screen illuminates. To power off, press and hold the power button again until a power-off option appears on the screen, then confirm.

4. OPERATING INSTRUCTIONS

4.1. Navigating the Touchscreen

The watch features a responsive touchscreen. Swipe left or right to scroll through applications and menus. Tap an icon to select an application or option. Swipe down from the top of the screen to access quick settings or notifications (if applicable).

4.2. Changing Watch Faces

The watch comes with 10 pre-installed dinosaur-themed watch faces. To change the watch face:

1. From the main time display, tap and hold the screen.
2. Swipe left or right to browse through the available watch face options.
3. Tap on the desired watch face to select and apply it.



Image 4.1: A visual representation of the ten distinct dinosaur-themed watch faces available for customization on the device.

4.3. Camera and Photo Album

To use the camera, tap the camera icon on the main menu. Tap the screen to take a photo. To view photos, select the photo album icon.

4.4. Video Player and Voice Recorder

Access the video player to view recorded videos. Use the voice recorder application to record short audio messages. Recordings are saved and can be played back through the respective applications.

4.5. Games

Select the games icon to access the pre-loaded interactive games. Follow on-screen instructions to play.

4.6. Pedometer (Step Counter)

The pedometer tracks physical activity by counting steps. Access the pedometer application to view your daily step count. Ensure the watch is worn securely on the wrist for accurate readings.

4.7. Calculator, Alarm, Timer, and Stopwatch

These utility applications function similarly to standard versions. Tap the respective icons to access them and follow the on-screen prompts to set alarms, start timers, or use the stopwatch.

5. MAINTENANCE

5.1. Cleaning

To clean the watch, gently wipe the screen and strap with a soft, dry, or slightly damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish or screen.

5.2. Battery Care

To prolong battery life:

- Avoid fully discharging the battery frequently.
- Charge the watch regularly, even if not in constant use.
- Store the watch in a cool, dry place when not in use.

6. TROUBLESHOOTING

If you encounter issues with your smartwatch, refer to the following common problems and solutions:

Problem	Possible Solution
Watch does not power on.	Ensure the watch is fully charged. Connect to the charger for at least 30 minutes, then attempt to power on.
Screen is unresponsive.	Restart the watch by holding the power button. If unresponsive, allow the battery to fully drain, then recharge and power on.
Battery drains quickly.	Reduce usage of power-intensive features like games or camera. Ensure the watch is fully charged before use.
Cannot take photos/videos.	Check if the storage is full. Delete old photos/videos if necessary.

7. SPECIFICATIONS

Specification	Detail
Model Number	JRW4041AZ
Manufacturer	Accutime Watch Corp.
Dimensions (Package)	5.83 x 3.5 x 3.39 inches
Weight	1.4 ounces
Battery Type	1 Lithium Ion battery (included)
Connectivity	USB for charging/data transfer (no Wi-Fi, Bluetooth, cellular)

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or

contact Accutime Watch Corp. directly. Keep your proof of purchase for warranty claims.

© 2025 Accutime Watch Corp. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question