

[Manuals.plus](#) /

› [Prominence Home](#) /

› Prominence Home Ashby Modern 52 Inch Ceiling Fan User Manual

Prominence Home Ashby 51630-01

Prominence Home Ashby Modern 52 Inch Ceiling Fan User Manual

Model: Ashby 51630-01

INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your Prominence Home Ashby Modern 52 Inch Ceiling Fan. Please read this manual thoroughly before beginning installation and retain it for future reference. This fan combines stylish details with modern influences, featuring a sleek body, dimmable LED lighting, and an innovative 5-blade design for energy-efficient airflow.



A full view of the Prominence Home Ashby 52-inch ceiling fan, featuring a sleek pewter finish and five blades, with an integrated LED light kit.



The Ashby ceiling fan seamlessly integrated into a modern bedroom setting, demonstrating its aesthetic appeal and suitable placement.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when installing and operating electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions carefully before installation.
- Ensure the power is turned off at the circuit breaker before installation or servicing.
- All wiring must be in accordance with national and local electrical codes. If you are unsure, consult a qualified electrician.
- The fan must be mounted to a structurally sound ceiling outlet box capable of supporting the fan's weight (minimum 35 lbs).
- Maintain a minimum clearance of 7 feet from the floor to the bottom of the fan blades.
- Do not operate the fan with damaged blades or housing.

- Do not insert objects into the path of the fan blades.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Blade Irons
- Blades (5)
- Hardware Pack
- Light Kit
- Owner's Manual
- Remote Control and Wall Dock
- LED Bulbs (2)
- 4-inch Downrod

SETUP AND INSTALLATION

Room Size and Placement

The 52-inch Ashby ceiling fan is ideal for indoor spaces up to 400 sq. ft., such as bedrooms, living rooms, and dining rooms. Ensure your room size is appropriate for optimal airflow.



A guide to help determine the appropriate fan size for different room dimensions. The Ashby 52-inch fan is suitable for large rooms up to 12 ft x 18 ft.

Fan Dimensions

Refer to the diagram below for detailed fan dimensions to ensure proper fit and clearance in your installation area.



A detailed diagram showing the key dimensions of the Ashby ceiling fan, including a 52-inch blade length, a 4-inch downrod, and a total height of 14.89 inches from the ceiling to the bottom of the light kit.

Mounting Options

The Ashby ceiling fan offers three versatile hanging options:

- **Standard Mount:** Utilizes the included 4-inch downrod for typical ceiling installations.
- **Closemount:** Provides a low-profile or flush-mount appearance, suitable for rooms with lower ceilings.
- **Angled Mount:** Allows for installation on vaulted or angled ceilings with the use of a longer downrod (sold separately).

Follow the step-by-step instructions provided in the included Owner's Manual for detailed wiring and assembly procedures. Ensure all connections are secure and properly insulated.

OPERATING INSTRUCTIONS

Remote Control Functions

Your Ashby ceiling fan comes with an easy-to-use remote control for convenient operation from anywhere in the room. The remote also includes a wall mount for storage.



Remote + Wall Dock
Included



			
FAN POWER	LIGHT POWER Press and hold to dim.	FAN SPEED HIGH	WALK AWAY DELAY
			
FAN SPEED MEDIUM	NATURE BREEZE Cycle fan to simulate natural air movement.	FAN SPEED LOW	SAFE HOME Simulate use while away from home.

The included remote control for the Ashby fan, displaying buttons for fan power, light power (dimmable), fan speeds (high, medium, low), Nature Breeze, Walk Away Delay, and Safe Home functions. A wall dock for the remote is also shown.

- **Fan Power:** Turns the fan on or off.
- **Light Power:** Turns the light on or off. Press and hold to dim the light.
- **Fan Speed High/Medium/Low:** Adjusts the fan speed.
- **Nature Breeze:** Cycles fan speed to simulate natural air movement.
- **Walk Away Delay:** Provides a delay before turning off the fan.
- **Safe Home:** Simulates occupancy while you are away from home.

Reversible Airflow

For year-round comfort, the Ashby fan features a reversible motor. A switch on the fan housing allows you to change the direction of the blades:

- **Summer Mode (Counter-clockwise):** Creates a downward airflow, producing a cooling effect.
- **Winter Mode (Clockwise):** Circulates warm air trapped near the ceiling, helping to reduce heating costs.

Reversible Blades

Pick Your Side



GRAY OAK



PEWTER

An illustration highlighting the reversible blades of the Ashby fan, offering two distinct finishes: Gray Oak and Pewter, allowing for versatile decor matching.

LED Light Operation

The integrated LED light kit provides efficient and dimmable illumination for your space.



A visual representation detailing the integrated LED light globe of the Ashby fan, indicating it is dimmable from 100% to 20% and uses two E26/A15 bulbs.

- The light uses two energy-efficient LED bulbs (included).
- The light is dimmable from 100% to 20% using the remote control.
- Light output: 800 lumens.
- Color temperature: 3000 Kelvin.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your ceiling fan.

- **Cleaning:** To avoid scratching the finish, clean the fan with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Blade Cleaning:** Dust the blades regularly to prevent dust buildup, which can affect balance and airflow.
- **Tighten Fasteners:** Periodically check all screws and fasteners on the fan and mounting hardware to ensure they are

secure.

- **No Lubrication Needed:** The motor is permanently lubricated and does not require oiling.

TROUBLESHOOTING

If you experience issues with your fan, consult the following table for common problems and solutions.

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control battery low.	Check circuit breaker/fuse; Verify all wire connections are secure; Replace remote control battery.
Fan wobbles	Loose blade screws; Unbalanced blades; Loose mounting bracket.	Tighten all blade screws; Use balancing kit (if included) or swap blade positions; Ensure mounting bracket is securely fastened to the ceiling box.
Light does not work	Bulbs are faulty; Loose wire connections in light kit; Remote control issue.	Replace LED bulbs; Check light kit wiring; Ensure remote battery is good and paired correctly.
Noisy operation	Loose screws; Motor housing rubbing; Incorrect installation.	Check and tighten all screws; Ensure no wires are rubbing against the motor housing; Re-check installation steps.

SPECIFICATIONS

Feature	Specification
Brand	Prominence Home
Model Name	Ashby
Model Number	51630-01
Size	52 Inches
Number of Blades	5
Blade Material	Engineered Wood
Color	Pewter
Light Type	Integrated LED
Luminous Flux	800 Lumen
Color Temperature	3000 Kelvin
Wattage	8.5 watts (fan), 8 watts (light)
Voltage	120 Volts
Control Method	Remote, Touch

Feature	Specification
---------	---------------

Special Features	Remote Control, Reversible Airflow
Indoor/Outdoor Usage	Indoor
Item Weight	20.4 pounds (9.25 Kilograms)

WARRANTY AND SUPPORT

Your Prominence Home Ashby Modern 52 Inch Ceiling Fan is backed by a**Limited Lifetime Warranty**. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or any questions regarding your product, please visit the official Prominence Home store or contact their customer service. You can find more information and support resources at the [Prominence Home Store on Amazon](#).

© 2023 Prominence Home. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question