

## ALTOMEX AL-1183

# Altomex AL-1183 Portable Bluetooth Speaker User Manual

Model: AL-1183 | Brand: ALTOMEX

## INTRODUCTION

Thank you for purchasing the Altomex AL-1183 Portable Bluetooth Speaker. This manual provides detailed instructions on how to set up, operate, and maintain your speaker to ensure optimal performance and longevity. Please read this manual thoroughly before using the product and keep it for future reference.

## SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, humidity, or direct sunlight.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble, repair, or modify the speaker yourself. Contact qualified service personnel for any repairs.
- Keep the speaker away from water and other liquids.
- Use only the provided charging cable or a certified equivalent.
- Do not operate the speaker at excessively high volumes for prolonged periods to prevent hearing damage.

## PACKAGE CONTENTS

- 1 x Altomex AL-1183 Portable Bluetooth Speaker
- 1 x Charging Cable
- 1 x User Manual (this document)

## PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your Altomex AL-1183 speaker.



**Figure 1:** Front view of the Altomex AL-1183 Portable Bluetooth Speaker. It features a main speaker grille with a blue LED light and the Altomex logo, two smaller speaker grilles above, and a built-in stand on top designed to hold a smartphone or tablet.



**Figure 2:** Top view of the Altomex AL-1183 Portable Bluetooth Speaker. This image highlights the control panel located on the top surface, featuring buttons for mode selection (M), play/pause (▶||), and volume control (- and +).



**Figure 3:** Rear view of the Altomex AL-1183 Portable Bluetooth Speaker. This view shows the various input ports and the power switch. From left to right, there is a DC 5V charging port (micro USB), a USB port for flash drives, a TF (micro SD) card slot, and an ON/OFF toggle switch.

## Controls and Ports:

- **M (Mode) Button:** Switches between Bluetooth, FM Radio, USB, TF Card, and AUX modes.
- **▶|| (Play/Pause) Button:** Plays or pauses audio. In FM mode, long press to auto-scan stations.
- **- (Volume Down / Previous Track) Button:** Short press for previous track/station. Long press to decrease volume.
- **+ (Volume Up / Next Track) Button:** Short press for next track/station. Long press to increase volume.
- **DC 5V Port:** Micro USB input for charging the speaker.
- **USB Port:** For connecting USB flash drives to play audio.
- **TF Card Slot:** For inserting TF (micro SD) cards to play audio.
- **AUX Port:** 3.5mm audio input for connecting external devices via an auxiliary cable.
- **ON/OFF Switch:** Powers the speaker on or off.
- **Microphone Port:** For connecting an external microphone (if applicable, not explicitly mentioned in specs but in feature bullets).

## SETUP

---

### 1. Charging the Speaker

1. Locate the DC 5V charging port on the rear of the speaker.
2. Connect the provided charging cable to the speaker's DC 5V port.

3. Connect the other end of the charging cable to a USB power adapter (not included) or a computer's USB port.
4. The charging indicator light (if present) will illuminate during charging and turn off when fully charged.
5. A full charge typically takes 2-3 hours.

**Note:** It is recommended to fully charge the speaker before first use.

## 2. Powering On/Off

- To power on, slide the ON/OFF switch to the "ON" position. You will hear an audible prompt.
- To power off, slide the ON/OFF switch to the "OFF" position.

# OPERATING INSTRUCTIONS

---

## 1. Bluetooth Mode

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED light and an audible prompt.
2. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
3. Search for "AL-1183" (or similar name) in the list of available Bluetooth devices.
4. Select "AL-1183" to pair. Once successfully connected, you will hear a confirmation sound.
5. You can now play audio from your device through the speaker.
6. Use the Play/Pause, Volume Up/Down, and Next/Previous Track buttons on the speaker or your connected device to control playback.

**Note:** The effective Bluetooth range is approximately 10 meters (33 feet) without obstacles.

## 2. FM Radio Mode

1. Turn on the speaker and press the "M" (Mode) button repeatedly until you hear the FM radio prompt.
2. To auto-scan and save available FM stations, long press the "▶||" (Play/Pause) button. The speaker will scan and store stations automatically.
3. Once scanning is complete, use the "-" (Previous) and "+" (Next) buttons to navigate between saved stations.

## 3. USB / TF Card Mode

1. Insert a USB flash drive into the USB port or a TF (micro SD) card into the TF card slot.
2. The speaker will automatically detect the storage device and switch to USB/TF card mode, beginning playback of supported audio files. If it doesn't switch automatically, press the "M" (Mode) button.
3. Use the Play/Pause, Volume Up/Down, and Next/Previous Track buttons to control playback.

**Note:** Ensure your audio files are in a compatible format (e.g., MP3).

## 4. AUX Mode

1. Connect one end of a 3.5mm audio cable (not included) to the AUX port on the speaker.
2. Connect the other end of the audio cable to the headphone jack or audio output of your external device (e.g., MP3 player, laptop).
3. Press the "M" (Mode) button until the speaker enters AUX mode.
4. Control playback directly from your connected external device. Volume can be adjusted on both the speaker and the external device.

## 5. Microphone Usage (if applicable)

- Connect a compatible microphone (not included) to the microphone port on the speaker.
- Ensure the speaker is powered on.
- Adjust the volume using the speaker's volume controls.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the speaker. Do not use abrasive cleaners, alcohol, or chemical solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is low or dead.	Charge the speaker fully.
Cannot pair via Bluetooth.	Bluetooth is not enabled on your device; speaker is too far; speaker is connected to another device.	Ensure Bluetooth is on and within 10m. Disconnect from other devices. Restart both speaker and device.
No sound.	Volume is too low; incorrect mode selected; audio source issue.	Increase volume. Press "M" to select correct mode. Check audio source device.
FM radio reception is poor.	Weak signal; environmental interference.	Try repositioning the speaker. Perform auto-scan again.
USB/TF card not playing.	Unsupported file format; card/drive not inserted correctly; corrupted files.	Ensure files are MP3. Reinsert card/drive. Try another card/drive.

## SPECIFICATIONS

Feature	Detail
Model	AL-1183
Brand	ALTOMEX
Bluetooth Version	5.0
Bluetooth Range	Up to 10 meters
Output Power	5W RMS

Feature	Detail
Frequency Response	20Hz-20KHz
Battery Capacity	1200 mAh
Playback Time	3-5 hours
Charging Time	2-3 hours
Charging Voltage	5V (USB)
Connectivity	Bluetooth, USB, TF Card, AUX, FM Radio, Microphone Port
Dimensions (H x W x D)	23 cm x 6 cm x 11 cm (approx.)
Weight	0.524 kg (approx.)

## WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact the retailer or Altomex customer service through their official channels.

**Customer Service:** Please visit the official ALTOMEX website or contact your point of purchase for support information.

© 2024 ALTOMEX. All rights reserved.

Information in this manual is subject to change without notice.