

VGR V-175

VGR V175 Professional Cord/Cordless Grooming Kit User Manual

Model: V-175

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using this appliance and retain for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the appliance in water or use it near water.
- Keep the appliance away from heated surfaces.
- Do not use the appliance if the blades are damaged or broken, as this may cause injury.
- Ensure the appliance is switched off before cleaning or maintenance.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use only the charger supplied with the appliance.
- Do not open the appliance casing. There are no user-serviceable parts inside.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- VGR V175 Trimmer Unit
- Full-size Trimmer Head
- Precision Trimmer Head
- Design Trimmer Head
- Nose Trimmer Head
- Shaver Head
- 5 Guide Combs (various lengths)
- Charging Base
- USB Charging Cable

- Cleaning Brush
- Lubricating Oil
- User Manual



Image: All components of the VGR V175 Professional Cord/Cordless Grooming Kit, including the main trimmer unit, various attachment heads, guide combs, charging base, USB cable, cleaning brush, and oil.

3. PRODUCT OVERVIEW

3.1 Main Unit Features

- **ON/OFF Button:** Powers the device on or off.
- **Precision Switch:** Adjusts cutting length or speed (if applicable).
- **LED Display:** Shows battery percentage and charging status.
- **Charging Port:** Connects to the USB charging cable.
- **Sharp Blade:** Durable stainless steel blade for efficient cutting.



Image: Detailed view of the VGR V175 trimmer's main unit, highlighting the ON/OFF button, precision switch, LED display, charging port, and sharp blade.

3.2 Attachment Heads

- **Full Size Trimmer:** For general hair clipping and beard trimming.
- **Precision Trimmer:** For detailed styling and sharp lines.
- **Design Trimmer:** For creating patterns and intricate designs.
- **Nose Trimmer:** For removing unwanted nose and ear hair.
- **Shaver:** For a close shave on smaller areas.




Image: Illustration of the five interchangeable trimmer heads included with the VGR V175 kit: Full Size Trimmer, Design Trimmer, Shaver, Nose Trimmer, and Precision Trimmer.

4. CHARGING INSTRUCTIONS

The VGR V175 can be used corded or cordless. For optimal performance, ensure the battery is fully charged before first use.


1. Connect the USB charging cable to the charging port on the trimmer or the charging base.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer USB port.
3. The LED display on the trimmer will show the charging progress. A full charge typically takes approximately 2 hours.
4. Once fully charged, the trimmer provides approximately 150 minutes of cordless runtime.
5. Disconnect the charger once charging is complete to preserve battery life.

VGR[®]
V O Y A G E R

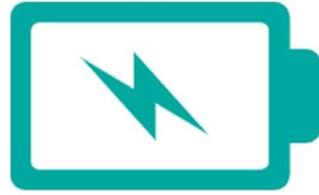

Charge:

2 hours

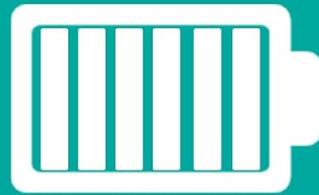

Duration:

150min

Image: Graphic illustrating the VGR V175 trimmer's battery specifications: 2 hours for a full charge, providing 150 minutes of runtime.



Image: The VGR V175 trimmer unit placed on its charging stand, with various guide combs and attachment heads neatly organized around it.

5. ATTACHMENT INSTALLATION AND REMOVAL

To change attachment heads:

1. Ensure the trimmer is switched off.
2. To remove an attachment head, gently push it upwards from the front of the trimmer until it detaches.
3. To install a new attachment head, align the head with the slot on the trimmer body and press down firmly until it clicks into place.

To attach or remove guide combs:

- Ensure the desired attachment head (e.g., Full Size Trimmer) is installed.
- Slide the guide comb onto the attachment head until it securely locks.
- To remove, gently pull the guide comb away from the attachment head.

6. OPERATING INSTRUCTIONS

Before use, ensure your skin and hair are clean and dry. For best results, trim against the direction of hair

growth.

6.1 Hair Clipping and Beard Trimming (Full Size Trimmer)

1. Attach the Full Size Trimmer head.
2. Select the desired guide comb for your preferred hair length.
3. Switch on the trimmer.
4. Start trimming from the bottom upwards, moving the trimmer slowly and steadily against the direction of hair growth.
5. For detailing, remove the guide comb and use the trimmer head directly.

6.2 Precision Trimming and Design (Precision/Design Trimmer)

1. Attach the Precision or Design Trimmer head.
2. Switch on the trimmer.
3. Carefully outline edges, create sharp lines, or intricate designs as desired.

6.3 Nose and Ear Hair Trimming (Nose Trimmer)

1. Attach the Nose Trimmer head.
2. Switch on the trimmer.
3. Gently insert the trimmer tip into your nostril or ear canal.
4. Move the trimmer in a circular motion to trim unwanted hair. Do not insert too deeply.

6.4 Shaving (Shaver Head)

1. Attach the Shaver head.
2. Switch on the trimmer.
3. Hold the shaver flat against your skin and move it in short, gentle strokes.
4. This head is suitable for small areas and touch-ups.

7. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your trimmer.

1. **After Each Use:** Switch off and unplug the trimmer. Remove the attachment head. Use the cleaning brush to remove any loose hairs from the blades and the trimmer body.
2. **Rinsing Blades:** The blades can be rinsed under running water. Ensure the trimmer body is not submerged. Allow blades to air dry completely before reattaching or storing.
3. **Lubrication:** After every few uses, or if the blades feel sluggish, apply a small drop of the provided lubricating oil to the blades. Run the trimmer for a few seconds to distribute the oil. Wipe off any excess oil.
4. **Storage:** Store the trimmer and all accessories in a dry, cool place, away from direct sunlight and out of reach of children.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer for at least 2 hours.

Problem	Possible Cause	Solution
Trimmer runs slowly or pulls hair.	Blades are dirty or not lubricated.	Clean the blades and apply lubricating oil.
Attachment head does not fit securely.	Incorrect alignment or debris.	Ensure correct alignment and press firmly until it clicks. Check for any obstructions.
Reduced battery runtime.	Battery not fully charged or aging battery.	Ensure a full 2-hour charge. Battery life naturally decreases over time.

9. SPECIFICATIONS

- **Model:** V-175
- **Power Source:** Battery Powered (Cord/Cordless operation)
- **Battery Type:** Lithium Ion
- **Charging Time:** Approximately 2 hours
- **Runtime:** Up to 150 minutes
- **Blade Material:** Stainless Steel
- **Product Dimensions:** 20 x 2.6 x 7 cm
- **Item Weight:** 455 g
- **Target Audience:** Men
- **Special Features:** Cordless, LED Display

10. WARRANTY AND SUPPORT

This VGR V175 Grooming Kit comes with a **1 Year VGR India Warranty**. This warranty is applicable only on products sold by authorized sellers (e.g., LEPL or Cloutail in India).

For warranty claims, technical support, or any product-related inquiries, please contact your point of purchase or refer to the official VGR support channels available in your region. Keep your purchase receipt as proof of purchase.

Related Documents - V-175

	<p>VGR V-990 Cordless Hair Trimmer User Guide</p> <p>Comprehensive guide to using the VGR V-990 professional cordless hair trimmer, featuring 8000RPM, barber-grade performance, and easy hair cutting for men.</p>
	<p>VGR V-282 Professional Hair Clipper User Manual and Specifications</p> <p>Comprehensive user manual for the VGR V-282 Voyager Professional Hair Clipper. Includes detailed information on components, safety instructions, usage, charging, maintenance, technical features, and disposal guidelines.</p>

	<p>VGR V-906 Professional Hair Trimmer User Manual</p> <p>Comprehensive user manual for the VGR V-906 electric hair trimmer, detailing features, operation, charging, maintenance, and troubleshooting for professional and home grooming.</p>
	<p>VGR V-930 Professional Hair Trimmer User Manual with AFA Endorsement</p> <p>Comprehensive user manual for the VGR V-930 Professional Hair Trimmer, featuring AFA endorsement with player imagery. Covers safety instructions, components, usage, charging, cleaning, maintenance, and technical specifications for this personal grooming device.</p>
	<p>VGR V-085 Professional Hair Trimmer Manual and Safety Instructions</p> <p>This document provides comprehensive safety instructions, components list, usage guidelines, cleaning and maintenance procedures, and technical specifications for the VGR V-085 Professional Hair Trimmer.</p>
	<p>VGR V-085 Professional Hair Trimmer User Manual & Safety Instructions</p> <p>This document provides comprehensive safety instructions, component descriptions, usage guidelines, charging, cleaning, and maintenance information for the VGR V-085 Professional Hair Trimmer.</p>