

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [VGR](#) /

> [VGR V-071 Cordless Professional Hair Trimmer User Manual](#)

## VGR V-071

# VGR V-071 Cordless Professional Hair Trimmer User Manual

Model: V-071 | Brand: VGR

## INTRODUCTION

---

Thank you for choosing the VGR V-071 Cordless Professional Hair Trimmer. This manual provides essential information for the safe and effective use, maintenance, and care of your new trimmer. Please read it thoroughly before first use and keep it for future reference.

## IMPORTANT SAFETY INFORMATION

---

**WARNING: To reduce the risk of electric shock, injury, or fire, always follow these basic safety precautions.**

This appliance may be used by children over 8 years of age and by persons with reduced physical, sensory, or mental capabilities only if they have been given supervision or instruction concerning the safe use of the appliance and understand the hazards involved. Children should not play with the appliance, and cleaning or maintenance should not be done by children without adult supervision. Always check the appliance before use; do not use it if damaged, as this may cause injury. Do not open the appliance to replace the rechargeable battery. This appliance is not washable and should never be immersed in water or rinsed under the tap. Avoid using compressed air, scouring pads, abrasive cleaning agents, or aggressive liquids such as petrol or acetone. The built-in rechargeable battery should not be exposed to fire, heat, or high temperatures. Keep the oil bottle out of reach of children, do not swallow, and avoid contact with eyes. Dispose of the appliance and its parts in accordance with local regulations, separating it from household waste.

## WHAT'S IN THE BOX

---

- 1x Hair Trimmer
- 3x Cutting Guide Comb
- 1x Cleaning brush
- 1x Lubricating oil
- 1x Protection cap
- 1x Type-C USB Cable
- 1x User manual



Image: The VGR V-071 trimmer alongside its retail packaging, showcasing the product and its box contents.

## SETUP

---

### Charging the Trimmer

The VGR V-071 features a Type-C USB charging port for convenient and fast charging. Before first use, ensure the trimmer is fully charged.

1. Connect the Type-C USB cable to the charging port on the trimmer.

2. Connect the other end of the USB cable to a compatible power source (e.g., power bank, 5V/1A wall adapter, computer USB port).
3. The LED indicator will glow red during charging.
4. A full charge takes approximately 1.5 hours and provides up to 120 minutes of runtime. The LED indicator will glow green when fully charged.



Image: Close-up of the VGR V-071 trimmer showing the Type-C USB charging port and cable connection, illustrating the charging process.

### **Attaching Guide Combs**

The trimmer comes with 3 cutting guide combs (1mm, 2mm, 3mm) to achieve desired hair lengths.

1. Ensure the trimmer is turned off.

2. Align the desired guide comb with the trimmer blade.
3. Gently push the comb onto the blade until it clicks securely into place.
4. To remove, gently pull the comb away from the blade.



Image: The VGR V-071 trimmer with various guide combs (1mm, 2mm, 3mm) displayed, indicating multiple length control options.

## OPERATING INSTRUCTIONS

---

## Powering On/Off and Mode Selection

- To turn on the trimmer in **Normal Mode** (5500 RPM), press the On/Off button once. The LED indicator will glow red.
- To activate **Turbo Mode** (6500 RPM) for extra cutting power, press the On/Off button twice. The LED indicator will glow green.
- To turn off the trimmer, press the On/Off button once more.

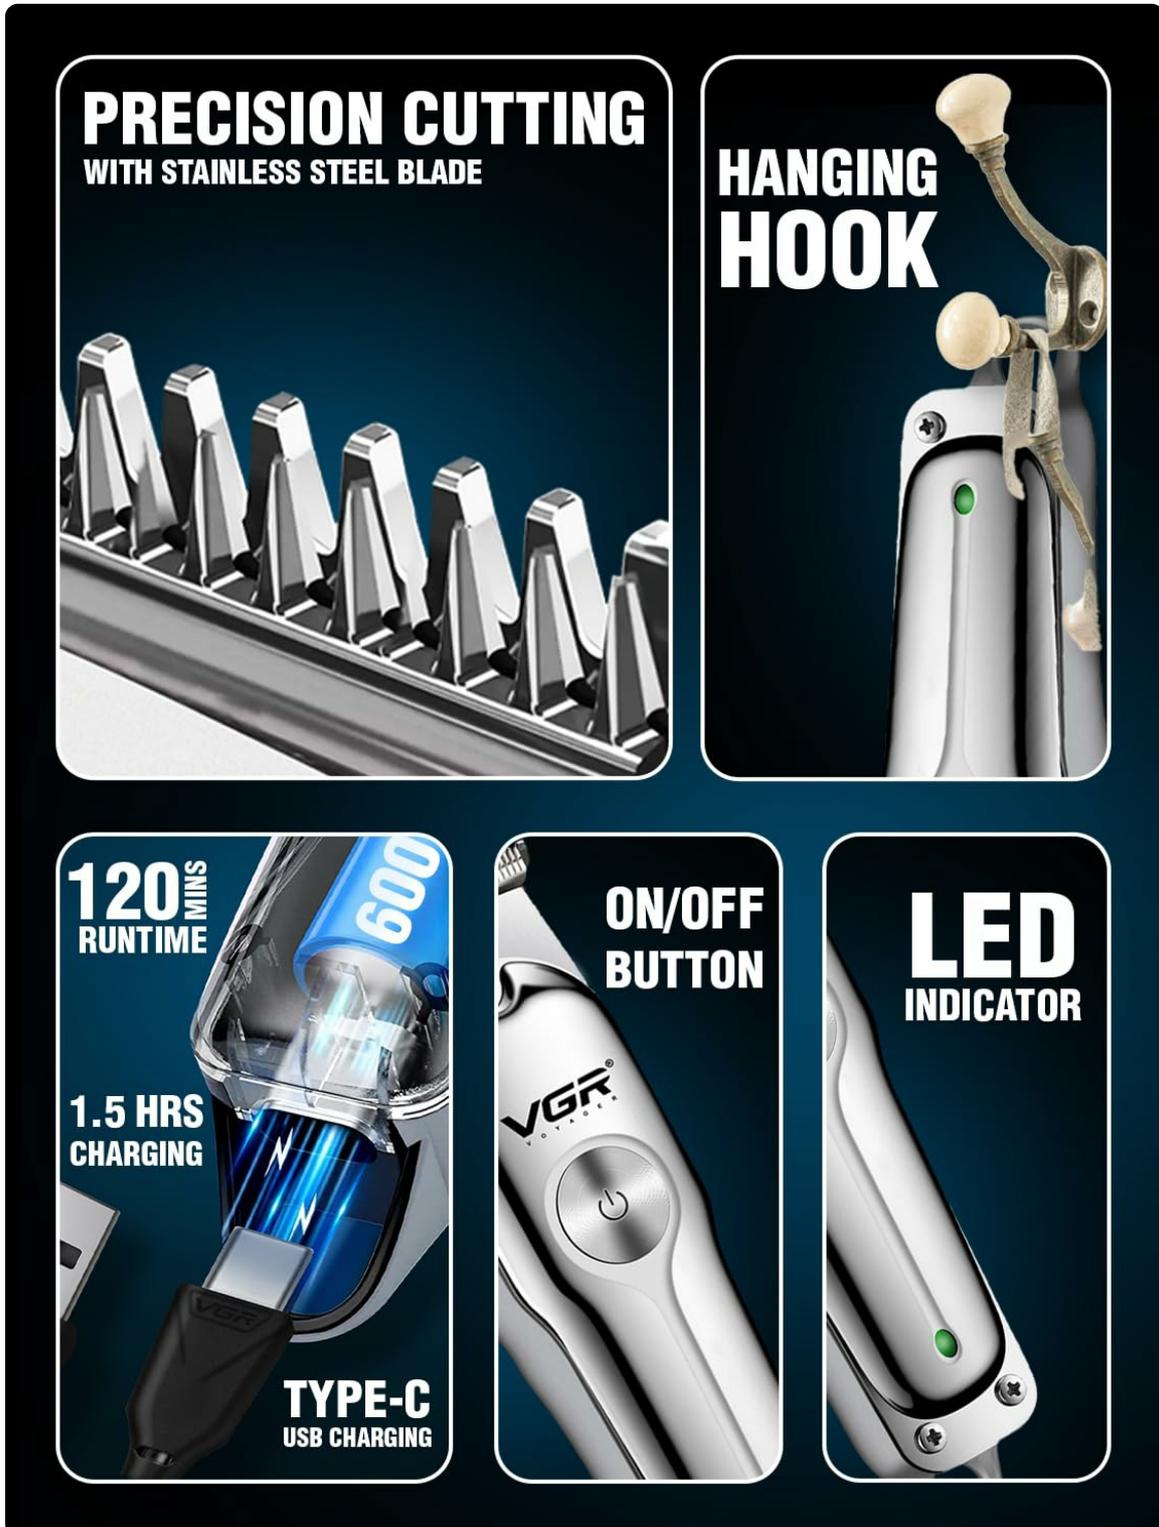


Image: A detailed view of the VGR V-071 trimmer highlighting the On/Off button and the LED indicator, demonstrating how to switch between normal and turbo modes.

## Trimming Technique

For best results, follow these guidelines:

1. Ensure hair is clean and dry.
2. Select the appropriate guide comb for your desired length.
3. Hold the trimmer with the blade flat against the skin.
4. Move the trimmer slowly against the direction of hair growth.
5. For detailing and sharp lines, remove the guide comb and use the precision T-blade directly.

## MULTIPLE LENGTH CONTROL



**1mm**  
**(0.04inch)**



**2mm**  
**(0.08inch)**



**3mm**  
**(0.12inch)**



Image: A man using the VGR V-071 trimmer to precisely trim his beard, illustrating the product's application for facial hair grooming.

### Versatile Usage

The VGR V-071 is designed for various grooming needs:

- **Hair:** For haircuts and maintaining desired hair length.
- **Beard:** For shaping, trimming, and detailing beards and moustaches.
- **Body:** Suitable for general body grooming.
- **Ear/Neckline:** Ideal for precise trimming around ears and necklines.

## MAINTENANCE

---

### Cleaning the Trimmer

Regular cleaning ensures optimal performance and extends the life of your trimmer.

1. After each use, turn off the trimmer.
2. Use the included cleaning brush to remove any hair clippings from the blade and trimmer body.
3. The appliance is not washable; do not rinse under water or immerse in liquids.

### Oiling the Blades

To maintain blade sharpness and smooth operation, oil the blades regularly.

1. After cleaning, apply a small drop of the included lubricating oil to the teeth of the blade.
2. Turn on the trimmer for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil with a soft cloth.

## TROUBLESHOOTING

---

If you encounter any issues with your VGR V-071 trimmer, please refer to the following common solutions:

- **Trimmer not turning on:** Ensure the battery is fully charged. Connect the Type-C USB cable and charge for 1.5 hours.
- **Poor cutting performance:** Clean the blades thoroughly to remove any trapped hair. Apply lubricating oil to the blades. Ensure the guide comb is correctly attached.
- **Unusual noise:** Clean and oil the blades. If the noise persists, contact customer support.
- **Overheating:** Ensure the trimmer is not used continuously for extended periods without breaks. Allow it to cool down if it feels excessively warm.

For issues not covered here, please contact VGR customer support.

## SPECIFICATIONS

---

Feature	Detail
Model Number	V-071
Brand	VGR
Blade Material	Stainless Steel
Power Source	Battery Powered
Battery Type	Lithium Ion (600mAh)
Runtime	Up to 120 minutes
Charging Time	Approx. 1.5 hours
Charging Port	Type-C USB
Special Features	Charge Indicator Light, Travel Size, Fast Charge, Turbo Mode
Item Weight	120 Grams
Dimensions (LxWxH)	14 x 4 x 3 Centimeters
Country of Origin	China

## WARRANTY AND SUPPORT

---

The VGR V-071 Cordless Professional Hair Trimmer comes with a 1-year brand warranty. For warranty claims, technical support, or any inquiries, please contact:

- **Manufacturer:** Ningbo VGR Electric Appliances Co., Ltd.
- **Email:** [support@loomantha.in](mailto:support@loomantha.in)
- **Phone:** +91-9667796740

Please retain your purchase receipt as proof of purchase for warranty purposes.