



[Manuals.plus](#) /

> [MasterChef](#) /

> MasterChef 18cm Non-Stick Saucepan Instruction Manual

## MasterChef 525506

# MasterChef 18cm Non-Stick Saucepan Instruction Manual

Model: 525506

[Instructions](#)   [Maintenance](#)   [Overview](#)   [Setup](#)   [Operating](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. PRODUCT OVERVIEW

The MasterChef 18cm Non-Stick Saucepan is designed for versatile and healthy cooking. It features a durable non-stick coating and is suitable for various cooking surfaces, including induction hobs. The saucepan comes with a tempered glass lid, allowing for easy monitoring of your cooking progress.

### Key Features:

- **Multi-Purpose:** Compatible with gas, halogen, ceramic, and induction hobs.
- **Non-Stick & Scratch Resistant:** Features Swiss engineered ILAG coating for safe cooking and easy cleaning.
- **Durable Construction:** Made from heavy-gauge forged aluminum for strength and longevity.
- **Even Heat Distribution:** Thick walls ensure uniform heat conduction for efficient cooking.
- **Ergonomic Handles:** Soft-touch flameguard handles on both the pan and lid provide a secure, cool grip.
- **Tempered Glass Lid:** Includes a steam vent and silicone rim for heat retention and flavor sealing.



**Adatto sia per piani cottura a induzione che a gas**



Image: The MasterChef 18cm saucepan in use on a gas hob, demonstrating its versatility across different cooking surfaces. A person is shown carefully lifting the tempered glass lid to check the contents.

## 2. SETUP AND FIRST USE

---

1. **Unpacking:** Carefully remove all packaging materials, labels, and protective films from the saucepan and lid.
2. **Initial Cleaning:** Before first use, wash the saucepan and lid thoroughly with warm, soapy water. Rinse completely and dry with a soft cloth.
3. **Conditioning (Optional for Non-Stick):** For optimal non-stick performance, lightly coat the interior cooking surface with a small amount of cooking oil (e.g., vegetable oil). Heat the pan over low heat for 30 seconds, then remove from heat and wipe off excess oil with a paper towel. This step helps to maintain the non-stick properties.
4. **Lid Assembly:** Ensure the lid's handle is securely attached. If it requires assembly, follow the instructions provided with the lid components.

## 3. OPERATING INSTRUCTIONS

---

### 3.1. Cooktop Compatibility

This saucepan is designed for use on all common cooking surfaces, including:

- Gas hobs
- Electric hobs (coil and solid plate)
- Ceramic hobs
- Halogen hobs
- Induction hobs



**Alluminio forgiato per durata e resistenza**



Image: The base of the MasterChef saucepan, featuring symbols indicating its compatibility with various heat sources, including induction cooktops.

### 3.2. Cooking Guidelines

- **Heat Settings:** Use low to medium heat for most cooking tasks. High heat can damage the non-stick coating over time and is rarely necessary due to the pan's excellent heat distribution.
- **Oil/Fat Usage:** While the non-stick coating allows for cooking with little to no oil, a small amount can enhance flavor and browning. Avoid aerosol cooking sprays as they can leave a residue that may affect non-stick performance.

- **Utensils:** Always use wooden, silicone, or plastic utensils to protect the non-stick surface from scratches. Avoid metal utensils.
- **Lid Usage:** The tempered glass lid helps retain heat and moisture, speeding up cooking and preserving flavors. The steam vent prevents excessive pressure buildup.
- **Handle Safety:** The flameguard handles are designed to stay cool during normal stovetop use. However, always use caution and consider using oven mitts, especially during prolonged cooking or when using high heat.



**Rivestimento antiaderente di ingegneria svizzera**



Image: A person adding fresh herbs to a dish simmering in the MasterChef saucepan, illustrating typical cooking use.

## 4. CARE AND MAINTENANCE

---

### 4.1. Cleaning

- **Cool Down:** Always allow the saucepan to cool completely before washing. Submerging a hot pan in cold water can cause warping.
- **Hand Washing:** Hand washing is recommended to preserve the non-stick coating and the pan's overall appearance. Use warm, soapy water and a soft sponge or cloth.

- **Stubborn Food:** For stubborn food residues, fill the pan with warm water and a small amount of dish soap, let it soak for 15-20 minutes, then clean as usual. Avoid using abrasive cleaners, steel wool, or scouring pads, as these can damage the non-stick surface.
- **Drying:** Dry the saucepan thoroughly after washing to prevent water spots and maintain its finish.

## 4.2. Storage

When storing, place a soft cloth or pan protector between the saucepan and other cookware to prevent scratches to the non-stick surface.

## 4.3. General Care Tips

- Do not use the saucepan in the oven, as it is not oven-safe.
- Avoid extreme temperature changes.
- Do not cut food directly in the pan with sharp knives.

## 5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Food sticks to the pan.	Pan not properly conditioned; too high heat; residue buildup from cooking sprays.	Re-condition the pan with oil. Use lower heat settings. Avoid aerosol cooking sprays. Ensure pan is clean before use.
Pan warps or deforms.	Sudden temperature changes (e.g., hot pan under cold water); excessive high heat.	Always allow the pan to cool naturally before washing. Use low to medium heat settings.
Handles become too hot.	Prolonged high heat cooking; flame extending up the sides of the pan.	Ensure flame size is appropriate for the pan's base. Use oven mitts or pot holders when necessary, especially during extended cooking.

## 6. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	525506
Brand	MasterChef
Size	18cm
Material	Aluminum
Finish Type	Non-Stick
Coating Description	ILAG Non-Stick & Scratch Resistant Coating
Color	Black
Capacity	1.8 Liters
Product Dimensions (D x W x H)	3.54"D x 7.09"W x 7.09"H

Feature	Detail
Item Weight	0.87 Kilograms
Oven Safe	No
Stovetop Suitable	Yes (Gas, Electric, Ceramic, Halogen, Induction)

## Misure Della Casseruola

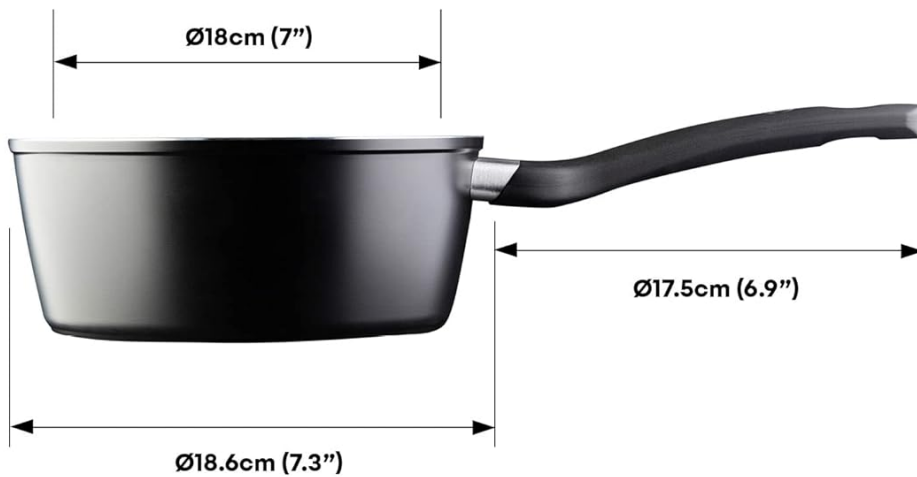


Image: A technical diagram illustrating the key dimensions of the 18cm MasterChef saucepan, including diameter and height measurements.

## 7. WARRANTY AND SUPPORT

Specific warranty information for the MasterChef 18cm Non-Stick Saucepan is not provided in this manual. For details regarding warranty coverage, claims, or product support, please refer to the documentation included with your purchase or contact MasterChef customer service directly.

You may also visit the official MasterChef website for further assistance and contact information.

