



Manuals.plus /

- › Acorn /
- › BANG SERIES 2 DVD User Manual

## Acorn B08NDSSHR9

# BANG SERIES 2 DVD User Manual

Your guide to enjoying the BAFTA-winning Welsh drama.

## INTRODUCTION TO BANG SERIES 2

---

Welcome to the official user manual for the **BANG SERIES 2 DVD**. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your DVD set. **BANG SERIES 2** continues the gripping Welsh drama, following DS Gina Jenkins as she investigates a serial killer, while her brother Sam navigates life after prison. This DVD set contains all episodes of the second series, presented in standard definition for home viewing.

ACORN TV



Image: Front cover of the BANG SERIES 2 DVD. It displays the title "BANG SERIES 2" prominently, with the Acorn TV logo at the top. The artwork features two main characters, a woman with dark hair and a man with short dark hair, looking directly forward. Below them, three figures stand on a rocky shore, one in a police uniform. A critical quote, "UNMISSABLE... BRILLIANT AND COMPELLING" from The British

## GETTING STARTED (SETUP)

---

To begin watching **BANG SERIES 2**, follow these simple steps:

1. **Unpack the DVD Set:** Carefully remove the DVD discs from their packaging. This set includes 2 discs.
2. **Prepare Your DVD Player:** Ensure your DVD player or Blu-ray player is connected to your television or display device and is powered on.
3. **Insert Disc:** Gently insert one of the **BANG SERIES 2** discs into the disc tray or slot of your player, label side facing up.
4. **Automatic Playback:** Most DVD players will automatically begin playing the disc or display a main menu. If not, select the "Play" or "Disc" option on your player's remote control.

## OPERATING THE DVD

---

Navigate the DVD content using your remote control.

- **Main Menu:** From the main menu, you can typically choose to "Play All Episodes," "Select Episode," "Scene Selection," or "Subtitles."
- **Episode Selection:** Use the arrow keys on your remote to highlight your desired episode and press "Enter" or "OK."
- **Subtitles:** **BANG SERIES 2** features English subtitles for Welsh dialogue. To activate or deactivate subtitles, navigate to the "Subtitles" option on the main menu or use the "Subtitle" button on your remote control if available.
- **Playback Controls:** Use standard remote control buttons such as Play, Pause, Stop, Fast Forward, Rewind, and Skip (for next/previous chapter or episode).

## DISC CARE AND HANDLING (MAINTENANCE)

---

Proper care will ensure the longevity and optimal performance of your **BANG SERIES 2** DVDs.

- **Handle by Edges:** Always hold the DVD discs by their edges to avoid touching the playing surface.
- **Keep Clean:** If a disc becomes dirty, gently wipe it from the center outwards with a soft, lint-free cloth. Do not use abrasive materials or harsh cleaning solutions.
- **Store Properly:** Store discs in their original case when not in use, away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Scratches:** Do not bend discs or place them on rough surfaces. Scratches can lead to playback errors.

## TROUBLESHOOTING PLAYBACK ISSUES

---

If you encounter problems playing your **BANG SERIES 2** DVDs, try the following solutions:

Problem	Possible Solution
Disc does not play or load.	<ul style="list-style-type: none"><li>• Ensure the disc is inserted correctly (label side up).</li><li>• Clean the disc gently with a soft cloth.</li><li>• Try playing another DVD to confirm your player is functioning correctly.</li><li>• Restart your DVD player.</li></ul>
Video or audio skips/freezes.	<ul style="list-style-type: none"><li>• Clean the disc for smudges or dust.</li><li>• Check the disc for visible scratches. Deep scratches may prevent proper playback.</li><li>• Ensure your DVD player's lens is clean (refer to your player's manual for cleaning instructions).</li></ul>
No subtitles appear.	<ul style="list-style-type: none"><li>• Activate subtitles from the DVD's main menu.</li><li>• Press the "Subtitle" button on your remote control.</li></ul>

## PRODUCT SPECIFICATIONS

---

- **Title:** BANG SERIES 2
- **Format:** DVD, Subtitled, NTSC
- **Number of Discs:** 2
- **Run Time:** Approximately 4 hours and 57 minutes
- **Language:** English (with Welsh dialogue and English subtitles)
- **Actors:** David Hayman, Catrin Stewart, Jacob Ifan
- **Studio:** Acorn
- **Release Date:** February 23, 2021
- **Product Dimensions:** 0.7 x 7.5 x 5.4 inches (packaging)
- **ASIN:** B08NDSSHR9

## LIMITED WARRANTY AND SUPPORT

---

This DVD set is produced to high quality standards. In the unlikely event of a manufacturing defect that prevents proper playback, please refer to the return policy of your retailer or contact the distributor, Acorn, for assistance.

For general inquiries or technical support related to your DVD player, please consult your player's user manual or contact its manufacturer.

**Note:** This warranty does not cover damage caused by improper handling, misuse, or normal wear and tear.