

INDESIT EWC 61051 W IT N

Indesit EWC 61051 W IT N Washing Machine User Manual

Model: EWC 61051 W IT N

INTRODUCTION

This user manual provides comprehensive instructions for the safe and efficient use of your new Indesit EWC 61051 W IT N washing machine. Please read this manual carefully before installing, operating, or performing maintenance on the appliance. Keep this manual for future reference.

1. SETUP AND INSTALLATION

Proper installation is crucial for the optimal performance and longevity of your washing machine. Follow these steps carefully.

1.1 Unpacking

- Remove all packaging materials. Ensure no parts are left inside the drum.
- Remove the transport bolts located at the rear of the machine. These bolts secure the drum during transit and must be removed before use to prevent damage.
- Keep packaging materials out of reach of children.

1.2 Positioning

- Place the washing machine on a flat, stable floor.
- Ensure there is adequate space around the machine for ventilation and maintenance.
- This is a freestanding, front-loader appliance.



Figure 1: Indesit EWC 61051 W IT N washing machine, a front-loader model, positioned beneath a dryer in a contemporary setting. The machine is white and features a circular door for loading laundry. This setup illustrates a typical installation for the appliance.

1.3 Leveling

- Adjust the adjustable feet at the bottom of the machine to ensure it is perfectly level. Use a spirit level to verify.
- A level machine reduces vibration and noise during operation.

1.4 Water Connection

- Connect the water inlet hose to a cold water tap with a 3/4" thread. Ensure the connection is tight to prevent leaks.
- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during draining.

1.5 Electrical Connection

- Plug the power cord into a grounded electrical outlet. The machine operates on 230 Volts.
- Do not use extension cords or adapters.
- Ensure the electrical supply matches the requirements specified on the machine's rating plate.

2. OPERATING INSTRUCTIONS

This section guides you through the daily operation of your Indesit washing machine.

2.1 Control Panel Overview

The washing machine features a control panel with a dial for program selection and buttons for additional options. The display type is LED/LCD.

- **Program Selector Dial:** Used to choose from 18 available wash programs.
- **Function Buttons:** Activate special features like 'Quick', 'Extra Rinse', 'Energy Saving', 'Extra Wash', 'Temperature', and 'Delayed Start'.
- **Start/Pause Button:** To start or pause a wash cycle.

2.2 Loading Laundry

- Open the front-loader door.
- Load laundry into the drum, ensuring not to exceed the maximum capacity of 6 kilograms. Overloading can affect wash performance.
- Close the door firmly until it clicks.

2.3 Adding Detergent

- Pull out the detergent dispenser drawer.
- Add the appropriate amount of detergent and fabric softener to the designated compartments. Refer to your detergent packaging for dosage recommendations.
- Push the dispenser drawer back in completely.

2.4 Program Selection

Turn the program selector dial to choose the desired wash program. The machine offers 18 programs, including:

- **Quick Cycles:** Colourful Mixes 59', Cotton 59', Synthetics 59', Cotton 45', Mixed 30', Express 20'.
- **Standard Cycles:** Cotton, Synthetics, Wool, Eco 40-60, 20°C, Whites, Silk and Delicates, Sport.
- **Special Functions:** Rinse + Spin, Spin + Drain, Eco Cotton.

2.5 Adjusting Options

After selecting a program, you can customize it using the function buttons:

- **Variable Spin Speed:** Adjust the spin speed up to a maximum of 1000 RPM.
- **Temperature:** Modify the wash temperature.
- **Delayed Start:** Postpone the start of the cycle.
- **Water Balance Plus:** An intelligent sensor optimizes water consumption based on the load size, ensuring efficient use.
- **Inverter Motor:** Provides advanced performance and fiber care, improving efficiency and saving energy.

2.6 Starting a Cycle

- Press the Start/Pause button to begin the selected wash cycle.
- The display will show the remaining time or program status.

3. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

3.1 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

3.2 Cleaning the Detergent Dispenser

- Periodically remove the detergent dispenser drawer and rinse it under running water to remove any detergent residue.
- Clean the housing of the dispenser with a brush if necessary.

3.3 Cleaning the Drain Filter

- Locate the drain filter, usually at the bottom front of the machine.
- Place a shallow container beneath the filter to catch any residual water.
- Carefully unscrew and remove the filter. Clean it of lint, coins, or other debris.
- Screw the filter back in securely.

3.4 Drum Cleaning

- Run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent) periodically to prevent odors and limescale buildup.

4. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; door not closed properly; program not selected; Start/Pause button not pressed.	Check power connection; ensure door is latched; select a program; press Start/Pause.
No water filling	Water tap closed; inlet hose kinked or blocked; water supply issue.	Open water tap; straighten hose; check household water supply.
Water not draining	Drain hose kinked or blocked; drain filter blocked.	Straighten drain hose; clean drain filter (see Maintenance section).
Excessive vibration/noise	Machine not level; transport bolts not removed; uneven load.	Level the machine; ensure transport bolts are removed; redistribute laundry evenly.
Poor wash results	Overloading; incorrect detergent dosage; wrong program selection.	Reduce load size; adjust detergent amount; select appropriate program.

5. TECHNICAL SPECIFICATIONS

Key technical details for the Indesit EWC 61051 W IT N washing machine.

Feature	Specification
Model Number	EWC 61051 W IT N
Type	Freestanding Front-Loader Washing Machine
Capacity	6 Kilograms
Maximum Spin Speed	1000 RPM

Feature	Specification
Product Dimensions (D x W x H)	51.7D x 59.5W x 85H centimeters
Weight	59.6 Kilograms
Voltage	230 Volts
Number of Programs	18
Control Type	Knob, Dial
Display Type	LED, LCD
Special Features	High efficiency, Delayed start, Water Balance Plus, Inverter Motor
Drum Material	Plastic
Color	White
Energy Class	F

6. WARRANTY INFORMATION

Your Indesit EWC 61051 W IT N washing machine comes with a standard manufacturer's warranty.

- Please retain your proof of purchase (receipt or invoice) as it will be required for any warranty claims.
- The warranty covers manufacturing defects and faults under normal domestic use.
- Damage caused by improper installation, misuse, neglect, or unauthorized repairs is not covered.
- For detailed terms and conditions of the warranty, please refer to the separate warranty document provided with your appliance or visit the official Indesit website.

7. CUSTOMER SUPPORT

If you encounter any issues that cannot be resolved using the troubleshooting guide, or if you require further assistance, please contact Indesit customer service.

- Before calling, please have your appliance's model number (EWC 61051 W IT N) and serial number ready. This information can usually be found on a label inside the door or at the back of the machine.
- You can find contact details for your regional Indesit customer service on the official Indesit website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question