

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [RELAX4LIFE](#) /
- › [RELAX4LIFE Dining Chairs RXE-65771 Instruction Manual](#)

RELAX4LIFE RXE-65771

RELAX4LIFE Dining Chairs (Model RXE-65771) Instruction Manual

Set of 4 Black Mid-Century Kitchen Chairs

1. INTRODUCTION

Thank you for choosing the RELAX4LIFE Dining Chairs. This manual provides essential information for the safe assembly, operation, and maintenance of your new chairs. Please read these instructions carefully before assembly and retain them for future reference.



Image 1: RELAX4LIFE Dining Chairs in a dining room setting.

2. SAFETY INFORMATION

- Ensure all parts are present and undamaged before assembly. Do not use if any parts are missing or broken.
- Assemble the chairs on a soft, clean surface to prevent scratches.
- Tighten all screws firmly, but do not overtighten. Periodically check and retighten fasteners as needed.
- Do not stand on the chairs. Use them only for seating.
- The maximum weight capacity for each chair is 440 lbs. Do not exceed this limit.
- Keep small parts away from children during assembly to prevent choking hazards.

3. PACKAGE CONTENTS

Your package should contain the following items:

- 4 x Dining Chairs (PP seat and beech wood legs)

- 1 x Assembly Bag (containing screws and tools)
- 1 x Instruction Manual

4. ASSEMBLY INSTRUCTIONS

The RELAX4LIFE Dining Chairs feature an effortless pre-assembled design, allowing for quick and easy setup. Assembly typically takes one person approximately 15 minutes per chair.

1. Step 1: Attach Wood Legs to the Seat

Carefully align the pre-assembled wood leg base with the mounting points on the underside of the chair seat. Ensure the legs are oriented correctly.

2. Step 2: Tighten the Screws

Using the provided screws and tools from the assembly bag, securely fasten the leg base to the seat. Tighten all screws evenly until the connection is firm. Do not overtighten.


Effortless Assembly

15 Min Installation | 1 Person | 440 LBS Weight Capacity

①



②

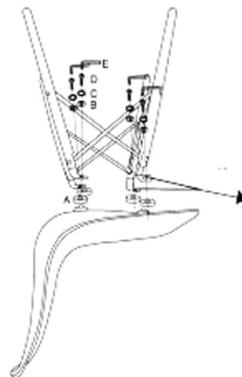

STEP 1 ▶

Attach wood legs to the seat

③



STEP 2 ▶

Tighten the screws and enjoy your time

Image 2: Visual guide for chair assembly.

Once assembled, ensure the chair is stable before use. You can use these dining chairs individually or combine them with your existing dining table.

5. USAGE

These modern dining chairs are designed for versatile use in various indoor settings. Their ergonomic design provides a comfortable seating experience, making them suitable for:

- Dining rooms
- Kitchens
- Living rooms
- Offices
- Waiting rooms
- Cafes and restaurants

The lightweight design (7.7 lbs per chair) allows for easy movement and rearrangement as needed.

Video 1: Overview of RELAX4LIFE Dining Chairs in various settings.

6. CARE AND MAINTENANCE

To maintain the appearance and longevity of your RELAX4LIFE Dining Chairs, follow these simple care instructions:

- **Cleaning:** Wipe clean with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the plastic seat or wood legs.
- **Protection:** The chairs are equipped with non-scratch plastic foot pads to protect your floors. Ensure these pads are intact and in place.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.

7. SPECIFICATIONS

Detailed specifications for the RELAX4LIFE Dining Chairs (Model RXE-65771):

Brand	RELAX4LIFE
Model Name	Dining Chairs
Model Number	RXE-65771
Color	Black
Material	PP (Polypropylene) Seat, Beech Wood Legs
Product Dimensions (W x D x H)	18.5" x 17" x 32"
Seat Dimensions (W x D)	18.5" x 17"
Seat Height	18"
Item Weight (Each Chair)	7.7 lbs
Maximum Weight Recommendation	440 lbs
Style	Modern, Mid-Century
Special Feature	Ergonomic, Pre-assembled legs



Image 3: Chair dimensions for reference.

8. TROUBLESHOOTING

If you encounter any issues with your RELAX4LIFE Dining Chairs, please refer to the following common solutions:

- **Wobbling Chair:** Ensure all screws connecting the seat to the leg base are fully tightened. If the issue persists, loosen all screws slightly, sit on the chair to settle the legs, and then retighten the screws evenly.
- **Scratches on Floor:** Verify that the non-scratch plastic foot pads are securely attached to the bottom of each leg. If a pad is missing or damaged, contact customer support for replacements.
- **Difficulty Assembling:** Double-check that you are using the correct screws for each connection and that the leg base is oriented correctly. Refer to the assembly diagram in Section 4.

9. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact RELAX4LIFE customer service directly. Refer to the contact information provided at the point of purchase or on the official RELAX4LIFE website. Please have your model number (RXE-65771) and purchase date available when contacting support.

