

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TENMIYA](#) /

› [TENMIYA A30 Portable Bluetooth Speaker User Manual](#)

TENMIYA A30

TENMIYA A30 Portable Bluetooth Speaker User Manual

Model: A30

Brand: TENMIYA

INTRODUCTION

This user manual provides comprehensive instructions for operating and maintaining your TENMIYA A30 Portable Bluetooth Speaker. Designed for versatile audio playback, this speaker features powerful sound, colorful lights, and multiple connectivity options, making it ideal for various indoor and outdoor settings.

PRODUCT OVERVIEW

The TENMIYA A30 is a 2.2-channel portable wireless speaker equipped with four speaker drivers (two woofers and two tweeters) and a rear heavy bass tube, delivering 40W (60W Peak) of high-fidelity sound. It features Bluetooth 5.0 for stable wireless connections, FM radio, TF/SD card and USB flash drive music playback, AUX line-in, and a 3.5mm microphone jack. The integrated colorful LED lights enhance the audio experience, creating an engaging atmosphere.



Figure 1: TENMIYA A30 Portable Bluetooth Speaker and Remote Control.



Figure 2: Detailed view of the TENMIYA A30 speaker's control panel, display, and various input/output ports including MIC, USB, TF Slot, AUX, ON/OFF switch, and DC 5V charging port. Dimensions are also indicated.

WHAT'S IN THE BOX

- 1 x A30 Bluetooth speaker
- 1 x Remote control (requires 2*AAA batteries, not included)
- 1 x Phone holder
- 1 x AUX cable
- 1 x USB cable
- 1 x User manual

SETUP

Initial Charging

Before first use, fully charge the speaker. Connect the provided USB cable to the DC 5V port on the speaker and the other end to a compatible USB power adapter (not included). A full charge typically takes 2-4 hours. The speaker has 4 built-in 2000 mAh rechargeable lithium batteries, totaling 8000 mAh, providing approximately 6-10 hours of playtime depending on volume.

Power On/Off

Locate the ON/OFF switch on the speaker's control panel. Flip the switch to the "ON" position to power on the speaker. The digital display will light up, and the speaker will enter Bluetooth pairing mode by default. To power off, flip the switch to the "OFF" position.

OPERATING INSTRUCTIONS

Bluetooth Mode

Upon powering on, the speaker automatically enters Bluetooth mode, indicated by "BLUE" on the digital display. The colorful LED lights will flash, indicating it's ready for pairing.

1. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
2. Search for "A30" in the list of available devices.
3. Select "A30" to pair. A voice prompt will confirm successful connection.
4. Once paired, you can play audio from your device through the speaker. The effective Bluetooth range is up to 100 feet (30.48 meters).



Outdoor party speakers
Wireless Bluetooth 5.0
Quickly and stably pair any
Bluetooth device within 100 feet

Figure 4: The TENMIYA A30 speaker is suitable for outdoor use, offering quick and stable Bluetooth 5.0 pairing within 100 feet for party and camping environments.

FM Radio Mode

To switch to FM Radio mode, press the "MODE" button on the speaker or the remote control until "FM" appears on the display.

- **Automatic Scan:** Long press the "Play/Pause" button to automatically scan and save available FM channels.
- **Manual Tuning:** Use the "Previous" and "Next" buttons to manually tune to specific frequencies or navigate through saved stations. The remote control allows direct frequency input.

TF/SD Card and USB Playback

Insert a TF/SD card or USB flash drive into the corresponding slot. The speaker will automatically switch to the respective mode and begin playing audio files.

AUX Line-in Mode

Connect an external audio device (e.g., MP3 player, computer) to the speaker's AUX port using the provided 3.5mm AUX cable. The speaker will automatically switch to AUX mode.

Microphone Connection (Karaoke Function)

Connect a microphone (not included) to the 3.5mm microphone jack for karaoke or public speaking. Adjust microphone volume and echo using the dedicated controls on the speaker or remote.

Remote Control Functions

The included remote control provides full functionality for the speaker. Ensure 2 AAA batteries are installed (not included). Functions include:

- Power On/Off
- Mode selection (Bluetooth, FM, AUX, USB/TF)
- Volume adjustment (Master, Bass, Treble)
- Track navigation (Previous/Next)
- Play/Pause
- EQ settings
- Light control (double-click Play/Pause button on unit to turn lights off/on)

LARGE CAPACITY BATTERY

10H
Playtime

- Master Volume Tuning
 - Bass Tuning
 - Treble Tuning
 - Microphone Echo Tuning
 - Microphone Volume Tuning
-



Figure 5: The TENMIYA A30 speaker offers approximately 10 hours of playtime and features controls for Master Volume, Bass, Treble, Microphone Echo, and Microphone Volume tuning.

FOUR SPEAKERS NEW TECHNOLOGY NEW EXPERIENCE

360 ° Stereo Effect



Figure 6: The TENMIYA A30 speaker features a 2.2-channel system with two woofers and two tweeters, providing a 360° stereo effect and heavy bass.

MAINTENANCE

- Keep the speaker dry. Do not expose it to water or excessive moisture, as it is not waterproof.
- Clean the speaker with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- Store the speaker in a cool, dry place when not in use.
- Avoid dropping or subjecting the speaker to strong impacts.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery or power switch is off.	Charge the speaker fully. Ensure the ON/OFF switch is in the "ON" position.
Cannot pair via Bluetooth.	Speaker not in pairing mode, device Bluetooth off, or too far.	Ensure speaker is in "BLUE" mode. Turn Bluetooth on your device. Move device closer to speaker (within 100ft).
No sound from speaker.	Volume too low, incorrect mode, or faulty connection.	Increase speaker and device volume. Check if the correct input mode (Bluetooth, AUX, etc.) is selected. Reconnect cables if using AUX/USB/TF.
FM radio static/poor reception.	Weak signal.	Extend the antenna fully. Try moving the speaker to a different location for better reception.
Remote control not working.	Batteries low/missing or obstruction.	Install 2 AAA batteries (not included). Ensure no obstructions between remote and speaker.

SPECIFICATIONS

Feature	Detail
Product Type	A30 Bluetooth Speaker
Speaker Output Power	15W*2 (Woofers) + 5W*2 (Tweeters) = 40W (60W Peak)
Speaker Driver Size	2.5" x 2 Woofers, 2.5" x 2 Tweeters
Frequency Response	80Hz-20KHz
Input Voltage	DC 5V
Product Dimensions	7.3"D x 4.5"W x 9.1"H
Playing Time	About 6-10 hours (depends on playing volume)
Battery Capacity	8000 mAh (4 x 2000 mAh lithium batteries)
Charging Time	About 2-4 hours
Bluetooth Version	5.0
Wireless Range	Up to 100 feet (30.48 meters)
Connectivity	Bluetooth, TF Card, AUX, USB, FM Radio, Microphone
Special Features	Colorful Lights, Digital Display, Remote Control, EQ, Karaoke
Weight	3.9 pounds
Water Resistance	Not Water Resistant

WARRANTY AND SUPPORT

TENMIYA products are designed and manufactured to the highest quality standards. For any product-related inquiries, technical support, or warranty claims, please refer to the contact information provided on the product packaging or the official TENMIYA website. We are committed to providing 100% quality service and will respond to your inquiries within 12 hours.