

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [NERF](#) /
- › [Nerf Elite 2.0 Echo CS-10 Blaster Instruction Manual](#)

## NERF E9533

# Nerf Elite 2.0 Echo CS-10 Blaster Instruction Manual

Brand: NERF

Model: E9533

## INTRODUCTION

The Nerf Elite 2.0 Echo CS-10 Blaster is designed for customizable tactical performance in Nerf competitions. This blaster features built-in capabilities for upgrades, allowing users to adapt their strategy for various missions and battles. It offers a versatile play experience with its removable components and multiple firing modes.



Figure 1: Nerf Elite 2.0 Echo CS-10 Blaster with included darts and clip.

## SAFETY INFORMATION

**WARNING:** Do not aim at eyes or face. Eyewear is recommended for players and individuals within range. Only use official Nerf darts. Other darts may not meet safety standards. Do not modify darts or the blaster. **WARNING: CHOKING HAZARD -** Small parts may be generated. Not suitable for children under 3 years of age.

## PACKAGE CONTENTS

- 1x Nerf Elite 2.0 Echo CS-10 Blaster
- 1x Removable Stock
- 1x Removable Barrel Extension
- 1x 10-Dart Clip
- 24x Official Nerf Darts



Figure 2: All components included in the Nerf Elite 2.0 Echo CS-10 Blaster package.



## SETUP GUIDE

### 1. Loading Darts into the Clip

1. Take the 10-dart clip.
2. Insert up to 10 Official Nerf darts into the clip, ensuring they are fully seated.
3. Keep the remaining 14 darts nearby for quick reloads during play.



Figure 3: Loading darts into the 10-dart clip.

4. Insert the loaded 10-dart clip firmly into the blaster's magazine well until it clicks into place.





Figure 4: Inserting the loaded clip into the blaster.

## 2. Attaching Removable Components (Customization)

The Echo CS-10 blaster is designed for customization with its removable stock and barrel extension. These can be attached or removed to change the blaster's configuration for different play styles.

1. To attach the **removable stock**, align the stock with the rear attachment point on the blaster and push firmly until it locks into place.





Figure 5: Attaching the removable stock.

2. To attach the **removable barrel extension**, align it with the front of the blaster and twist to secure it.





Figure 6: Attaching the removable barrel extension.

The blaster also features 5 tactical rails for adding other compatible Nerf accessories (sold separately).

## OPERATING INSTRUCTIONS

### 1. Single Shot Firing

1. Ensure the 10-dart clip is loaded and inserted into the blaster.
2. Grip the orange priming slide located on top of the blaster.
3. Move the priming slide fully backward, then fully forward. This primes the blaster for firing.
4. Aim the blaster at your target.
5. Press the trigger to fire one dart.

### 2. Slam Fire Action

The slam-fire feature allows for rapid, continuous dart blasting.

1. Hold down the trigger.
2. While holding the trigger, rapidly move the orange priming slide backward and forward repeatedly to unleash all 10 darts in quick succession.

Your browser does not support the video tag.

Video 1: Demonstration of the Nerf Elite 2.0 Echo CS-10 Blaster's firing capabilities, including single shot and slam fire.

### 3. Blaster Customization

The Nerf Elite 2.0 Echo CS-10 Blaster offers multiple ways to customize its configuration:

- **Standard Blaster:** Use the blaster without the stock or barrel extension for a compact design.
- **Blaster with Stock:** Attach the removable stock for increased stability and aiming support.
- **Blaster with Barrel Extension:** Attach the removable barrel extension for a longer barrel and potentially improved accuracy over distance.
- **Full Configuration:** Attach both the stock and barrel extension for a complete rifle-like setup.
- **Tactical Rails:** Utilize the 5 tactical rails to attach compatible Nerf accessories such as scopes, grips, or other gear (sold separately) to enhance your play.





Figure 7: User demonstrating the Nerf Elite 2.0 Echo CS-10 Blaster in action.

## MAINTENANCE

- **Cleaning:** Wipe the blaster with a dry or slightly damp cloth to remove dust and dirt. Do not submerge the blaster in water or use harsh cleaning agents.
- **Dart Care:** Store darts in a clean, dry place. Avoid bending or crushing darts, as this can affect their performance.
- **Storage:** Store the blaster in a cool, dry place away from direct sunlight and extreme temperatures to prevent material degradation.

## TROUBLESHOOTING



Problem	Possible Cause	Solution
Dart does not fire or jams.	Blaster not fully primed. Damaged or non-official dart. Dart jammed in the firing mechanism.	Ensure the priming slide is pulled fully back and then fully forward. Use only official, undamaged Nerf darts. Open the unjamming door (located on top of the blaster) and carefully remove any jammed darts. Close the door firmly before attempting to fire again.
Clip does not insert or remove easily.	Clip not aligned correctly. Release button not fully pressed.	Ensure the clip is aligned with the magazine well. Press the clip release button firmly and fully before attempting to remove or insert the clip.

## SPECIFICATIONS

- **Model Number:** E9533
- **Product Dimensions:** 2.5 x 16.5 x 12.88 inches
- **Item Weight:** 2.59 pounds
- **Manufacturer:** Hasbro
- **Recommended Age:** 8 years and up
- **Dart Firing Range:** Up to 90 feet (27 meters)
- **Power Source:** Manual (No batteries required)


## WARRANTY AND SUPPORT





For warranty information or product support, please refer to the contact details provided on the product packaging or visit the official NERF website. Keep your purchase receipt as proof of purchase.

You can visit the official NERF Store for more products and information:[NERF Store on Amazon](#)

© 2025 NERF. All rights reserved.

### Related Documents - E9533

	<p><a href="#">Nerf N-Strike Elite Strongarm Blaster: User Guide</a></p> <p>Official instructions for the Nerf N-Strike Elite Strongarm toy blaster. Learn how to load darts, fire single shots, and use the slam-fire feature for rapid firing. Includes safety warnings and product details.</p>
---	--

	<p><a href="#">NERF Modulus ECS-10 Blaster: Instructions and Safety Guide</a></p> <p>Official instructions and safety information for the NERF Modulus ECS-10 blaster by Hasbro. Learn how to load, fire, maintain, and safely use your NERF blaster.</p>
<p>User Manual of Product 1: Nerf Rough Cut 2X4 Elite Blaster - 18 Dart Capacity - From 2 Darts At Once - Pump Action - Semi Fire - Includes 6 Official Elite Darts, Motor</p>	<p><a href="#">Nerf Rough Cut 2X4 Elite Blaster User Manual</a></p> <p>User manual for the Nerf Rough Cut 2X4 Elite Blaster, detailing its features, operation, and safety precautions. Includes instructions for loading, single fire, and slam fire modes.</p>
<p>How to Replace Nerf CS-18 Plunger</p> <p><b>iFixIT</b></p> <p><b>Nerf Alpha Trooper CS-18 Plunger Replacement</b></p> <p>A broken plunger may affect your gun's...</p> <p>Written By: Charles Proctor</p> 	<p><a href="#">Nerf Alpha Trooper CS-18 Plunger Replacement Guide</a></p> <p>A step-by-step guide from iFixit on how to replace the plunger in a Nerf Alpha Trooper CS-18 dart blaster. Includes tools needed and detailed disassembly instructions.</p>
	<p><a href="#">Nerf Pro Stryfe X Dart Blaster: User Manual and Safety Instructions</a></p> <p>Comprehensive guide to operating the Nerf Pro Stryfe X Dart Blaster, including charging, loading, firing, safety warnings, and storage. Features detailed instructions for safe play and regulatory information.</p>
	<p><a href="#">Nerf Roblox Arsenal Pulse Laser Blaster Instructions</a></p> <p>Comprehensive guide on how to operate, load, fire, and clear jams for the Nerf Roblox Arsenal Pulse Laser motorized dart blaster. Includes safety warnings and battery information.</p>