

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LEGO](#) /

› [LEGO Creator 3in1 Safari Wildlife Tree House 31116 Instruction Manual](#)

## LEGO 31116

# LEGO Creator 3in1 Safari Wildlife Tree House 31116 Instruction Manual

Model: 31116

## 1. PRODUCT OVERVIEW

The LEGO Creator 3in1 Safari Wildlife Tree House (31116) building set offers three distinct models for construction and play. This kit contains 397 pieces and is recommended for ages 7 and up.

### 1.1. Primary Model: Safari Wildlife Tree House

The main build is a Safari Wildlife Tree House. This model features a balcony with a couch and a ladder for access. The interior includes a toilet and a sink. Accompanying the tree house are three brick-built animals: a posable giraffe, a flamingo, and a hornbill. Two minifigures, a boy and a girl, are also included, equipped with a camera accessory.



Image: The Safari Wildlife Tree House model, showcasing its structure, minifigures, and included animals.

### 1.2. Alternate Model 1: Biplane

The first alternate build is a biplane. This model includes a cockpit designed to accommodate a minifigure. It is accompanied by a brick-built lion, a tree, and an African lovebird.

### 1.3. Alternate Model 2: Catamaran

The second alternate build is a catamaran. This model features an adjustable sail. It comes with a brick-built crocodile and a marabou stork.



Image: The product packaging illustrating the three possible models that can be constructed from the set.

## 2. SETUP AND ASSEMBLY

This LEGO Creator 3in1 set provides instructions for building three different models. Each model requires disassembling the previous one to construct the next. The set contains 397 pieces.

### 2.1. Unpacking the Set

Carefully open the product packaging. The set includes multiple bags of LEGO elements and separate instruction booklets for each of the three models. It is advisable to sort the pieces before beginning assembly.



Image: The front of the product box, displaying the main Safari Wildlife Tree House model.

## 2.2. Following Instructions

Refer to the provided instruction booklets for step-by-step guidance on assembling your chosen model. Each step clearly indicates the required pieces and their placement. Ensure all connections are secure to maintain model stability.



Image: A collection of LEGO building elements from the set, ready for assembly.

### 3. OPERATING AND PLAY FEATURES

The LEGO Creator 3in1 Safari Wildlife Tree House set is designed for imaginative play, allowing users to interact with the models and minifigures in various scenarios.

#### 3.1. Safari Wildlife Tree House Interaction

- **Minifigure Placement:** Position the boy and girl minifigures on the tree house balcony or inside the structure.
- **Animal Posing:** The giraffe toy is posable, allowing for dynamic display and play.
- **Accessory Use:** Utilize the camera accessory with the minifigures to simulate wildlife photography.
- **Interior Features:** Engage with the toilet and sink elements inside the tree house for role-playing scenarios.

Your browser does not support the video tag.

Video: A 360-degree view of the LEGO Creator Safari Wildlife Tree House, highlighting its design and features.

## 3.2. Biplane and Catamaran Interaction

- **Biplane:** Place a minifigure in the biplane's cockpit for aerial adventures.
- **Catamaran:** Adjust the sail on the catamaran for sailing simulations.

Your browser does not support the video tag.

Video: An official product video showcasing the various models and play possibilities of the LEGO Creator 3in1 set.

## 4. MAINTENANCE

Proper care ensures the longevity and cleanliness of your LEGO bricks.

### 4.1. Cleaning

To clean LEGO bricks, use a mild soap solution and lukewarm water (not exceeding 40°C or 104°F). Gently scrub the bricks with a soft brush or cloth. Rinse thoroughly with clear water and allow them to air dry at room temperature. Avoid using hot water, harsh chemicals, or abrasive materials, as these can damage the plastic.

### 4.2. Storage

Store LEGO bricks in a clean, dry place away from direct sunlight and extreme temperatures. Prolonged exposure to sunlight can cause discoloration. Keep small pieces organized to prevent loss.

## 5. TROUBLESHOOTING

If you encounter issues during assembly or play, consider the following common solutions.

### 5.1. Missing Pieces

If you find a piece missing from your new LEGO set, first double-check all packaging and surrounding areas. Sometimes small pieces can be overlooked. If a piece is genuinely missing, contact LEGO Customer Service for assistance.

### 5.2. Assembly Difficulties

If a step in the instructions seems unclear or difficult, re-examine the image carefully. Ensure you are using the correct pieces and that they are oriented correctly. Sometimes, taking a short break and returning to the step can help. The LEGO Builder app can also provide 3D digital instructions for some sets, which may offer a clearer view.

## 6. SPECIFICATIONS

- **Brand:** LEGO
- **Model Number:** 31116 (Item model number: 6327662)
- **Product Dimensions:** 11.1 x 10.32 x 2.32 inches
- **Item Weight:** 1.48 pounds
- **Number of Pieces:** 397
- **Recommended Age:** 7 years and up

- **Release Date:** March 1, 2021

## 7. WARRANTY AND SUPPORT

For information regarding product warranty, missing parts, or any other support needs, please refer to the official LEGO customer service channels. Specific warranty details may vary by region and purchase location.

### 7.1. Contacting LEGO Customer Service

Visit the official LEGO website and navigate to their customer service or support section. You can typically find options for contacting them via phone, email, or live chat for assistance with your product.