

Winia WKOC9Q4DS

Winia WKOC9Q4DS 1.0 Cu. Ft. Countertop Convection Microwave Oven User Manual

Model: WKOC9Q4DS

1. IMPORTANT SAFETY INFORMATION

Read all instructions carefully before using the appliance. Keep this manual for future reference.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not use corrosive chemicals or vapors in this appliance.
- Always use oven mitts when handling hot items from the oven.
- Liquids such as water, coffee, or tea can overheat beyond the boiling point without appearing to boil. This can result in very hot liquids suddenly boiling over when a spoon or other utensil is inserted into the liquid.

2. PRODUCT OVERVIEW

The Winia WKOC9Q4DS is a 1.0 Cu. Ft. countertop appliance offering microwave, grill, and convection cooking functions. It features a stainless steel exterior and an interior designed for even heating.



Figure 2.1: Front view of the Winia WKOC9Q4DS microwave oven. This image shows the appliance with its stainless steel finish, control panel on the right, and the oven door with a handle.



Figure 2.2: Interior view of the Winia WKOC9Q4DS microwave oven with the door open. The image highlights the honeycomb cavity walls and the interior space.

2.1 Control Panel Features

- **Display:** Shows time, cooking settings, and status.
- **Function Buttons:** Dedicated buttons for Microwave (M/W), Grill, Convection, Clock, Steam Cleaning, and Warm functions.
- **Auto Cook:** Pre-programmed settings for common dishes (Roast pork, Roast beef, Roast chicken, Baked fish, Fresh vegetable).
- **Defrost:** For thawing frozen foods.
- **Time/Weight Quantity Dial:** Used to adjust cooking time, weight for defrost, or temperature for convection.
- **STOP/Clear Button:** Stops cooking, clears settings, or activates child lock.
- **START/Speedy Cook Button:** Starts cooking or initiates quick start cooking.



Figure 2.3: Detail of the Auto Cook button with its list of pre-set menus.



Figure 2.4: Detail of the Defrost button.

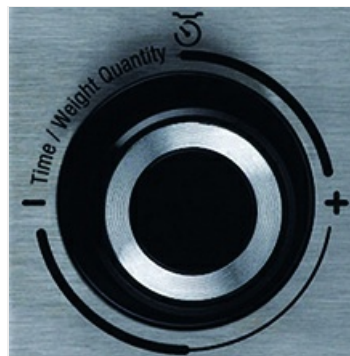


Figure 2.5: Detail of the Time/Weight Quantity dial for adjustments.



Figure 2.6: Detail of the START/Speedy cook button.

3. SETUP AND INSTALLATION

3.1 Unpacking

- Remove all packaging materials from inside and outside the oven.
- Check the oven for any damage, such as a misaligned or bent door, damaged door seals, or dents in the cavity. If any damage is present, do not operate the oven and contact customer service.
- Ensure all accessories are present: turntable and turntable support.

3.2 Placement

- Place the oven on a flat, stable surface that can support its weight.
- Allow at least 4 inches (10 cm) of space on the top, back, and sides for proper ventilation. Do not block any ventilation openings.
- Keep the oven away from heat sources and strong magnetic fields.

3.3 Electrical Connection

- Plug the oven into a dedicated, properly grounded 120V, 60Hz AC outlet. Do not use extension cords or adapters.
- Ensure the electrical circuit is rated for the oven's wattage (900 watts).

4. OPERATING INSTRUCTIONS

4.1 Setting the Clock

1. Press the **Clock** button once.
2. Turn the **Time/Weight Quantity Dial** to set the hour.
3. Press the **Clock** button again.
4. Turn the **Time/Weight Quantity Dial** to set the minutes.
5. Press the **Clock** button one more time to confirm.

4.2 Microwave Cooking

1. Place food in a microwave-safe container on the turntable.
2. Press the **M/W** button.
3. Turn the **Time/Weight Quantity Dial** to set the desired cooking time.
4. To adjust power level (default is 100%), press **M/W** repeatedly to cycle through power levels (P100, P90, P80, etc.).
5. Press **START/Speedy Cook** to begin cooking.

4.3 Grill Cooking

1. Place food on the grill rack (if provided) or a heat-resistant dish.
2. Press the **Grill** button.
3. Turn the **Time/Weight Quantity Dial** to set the desired grilling time.
4. Press **START/Speedy Cook** to begin grilling.

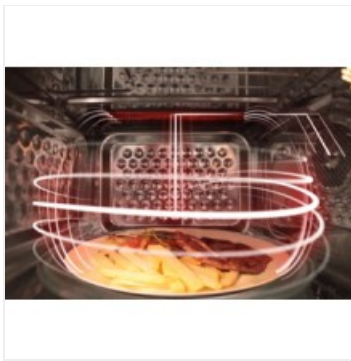


Figure 4.1: Illustration depicting the grill cooking process within the oven cavity.

4.4 Convection Cooking

1. Place food in an oven-safe dish.
2. Press the **Convection** button.
3. Turn the **Time/Weight Quantity Dial** to select the desired temperature.
4. Press **START/Speedy Cook** to preheat the oven. The oven will beep when preheating is complete.
5. Place food inside and turn the **Time/Weight Quantity Dial** to set the cooking time.
6. Press **START/Speedy Cook** to begin convection cooking.



Figure 4.2: Illustration showing the hot air circulation during convection cooking for even heat distribution.

4.5 Combination Cooking

This oven allows for combined microwave and grill or microwave and convection cooking. Refer to the specific combination modes in your full manual for detailed instructions.

4.6 Auto Cook Menus

The oven has 5 pre-programmed auto cook menus for convenience:

1. Roast pork
2. Roast beef
3. Roast chicken
4. Baked fish
5. Fresh vegetable

To use an Auto Cook menu:

1. Press the **Auto Cook** button repeatedly to select the desired menu number.
2. Turn the **Time/Weight Quantity Dial** to select the weight or quantity of food.
3. Press **START/Speedy Cook** to begin.

4.7 Defrost Function

The oven features an Auto Defrost function.

1. Place the frozen food on the turntable.
2. Press the **Defrost** button.
3. Turn the **Time/Weight Quantity Dial** to select the weight of the food.
4. Press **START/Speedy Cook** to begin defrosting.

4.8 Child Lock Function

To activate the child lock, press and hold the **STOP/Clear** button for 3 seconds until a lock indicator appears on the display. To deactivate, press and hold the **STOP/Clear** button again for 3 seconds.

5. MAINTENANCE AND CLEANING

5.1 General Cleaning

- Always unplug the oven before cleaning.
- Clean the oven cavity after every use with a damp cloth and mild detergent. Avoid abrasive cleaners.
- The turntable and turntable support can be removed and washed in warm, soapy water or a dishwasher.
- Wipe the exterior surfaces with a soft, damp cloth.
- Clean the door seals and sealing surfaces regularly to ensure proper operation.

5.2 Steam Clean Function

The Easy Steam Clean function helps to loosen food residue inside the oven.

1. Place a microwave-safe bowl with water inside the oven.
2. Press the **Steam Cleaning** button.
3. The oven will run for approximately 10 minutes.
4. Once complete, carefully open the door and wipe the interior with a damp cloth to remove loosened grime.



Figure 5.1: Visual sequence illustrating the steam cleaning process: water heating, grime loosening, and final wipe-down.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close door firmly; Check household fuse or reset circuit breaker.
Food not heating	Door not closed properly; Incorrect cooking time/power level set; Food container not microwave-safe.	Close door firmly; Adjust cooking time and power level; Use microwave-safe cookware.
Turntable not rotating	Turntable not properly placed on support; Turntable support dirty or damaged.	Ensure turntable is correctly seated; Clean turntable support and rollers; Contact service if damaged.
Oven light not working	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.
Unusual noise during operation	Turntable or support misaligned; Food container touching oven walls.	Adjust turntable and support; Ensure food container does not obstruct rotation.

7. SPECIFICATIONS

Model: WKOC9Q4DS

Capacity: 1.0 Cubic Feet

Power Output: 900 watts

Voltage: 120 Volts

Product Dimensions (D x W x H): 15.8 x 20.2 x 12.2 inches

Item Weight: 40.5 pounds

Installation Type: Countertop

Oven Cooking Modes: Microwave, Grill, Convection

Special Features: Child Safety Lock, Auto Defrost, Steam Clean Function

Included Components: Turntable

Exterior Material: Stainless Steel

Inner Material: Metal

8. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the warranty card included with your product or visit the official Winia website. Do not attempt to repair the appliance yourself.

Winia Customer Service: Please refer to your product documentation for contact details or visit the Winia website for the most current support information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question