

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Uncanny Brands](#) /
- › [Uncanny Brands Star Wars R2D2 Deluxe Toaster Instruction Manual](#)

Uncanny Brands TSTE-SRW-R2D2

# Uncanny Brands Star Wars R2D2 Deluxe Toaster Instruction Manual

**Brand:** Uncanny Brands | **Model:** TSTE-SRW-R2D2 | **UPC:** 840790114286

## 1. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plug, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.

- Bread and other foods can burn. Never leave the toaster unattended when in use.

## 2. PRODUCT OVERVIEW

The Uncanny Brands Star Wars R2D2 Deluxe Toaster is designed to toast bread and other similar items. This appliance features a unique R2-D2 design, incorporating authentic sounds and lights during operation. It includes two wide slots suitable for various bread types, a shade selector dial, and dedicated buttons for bagel and cancel functions. The toaster is constructed with a durable plastic exterior and includes a removable crumb tray for easy cleaning.



Image: The R2-D2 toaster on a kitchen counter, with toasted bread, jam, and bacon, illustrating its use in a breakfast setting.

### Key Features:

- **R2-D2 Design:** Detailed replica of the R2-D2 character.
- **Authentic Sounds and Lights:** Activates R2-D2 sounds and lights during the toasting cycle.
- **Two Wide Slots:** Accommodates standard bread slices, bagels, and English muffins.
- **Variable Browning Control:** Shade selector dial for light to dark toasting.
- **Bagel and Cancel Buttons:** Dedicated functions for specific toasting needs.

- **Removable Crumb Tray:** For convenient cleaning.
- **BPA-Free Construction:** Ensures food safety.

### 3. SETUP

---

1. **Unpacking:** Carefully remove the toaster and all packaging materials. Retain packaging for future storage or transport if needed.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials such as curtains or walls. Ensure adequate ventilation around the appliance.
3. **Initial Cleaning:** Before first use, wipe the exterior with a damp cloth. Remove and clean the crumb tray. It is recommended to operate the toaster empty on the highest setting for a few cycles to burn off any manufacturing residues. This may produce a slight odor or smoke, which is normal. Ensure the area is well-ventilated during this process.
4. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet.

### 4. OPERATING INSTRUCTIONS

---

#### 4.1. Basic Toasting

1. Ensure the toaster is plugged into a power outlet.
2. Place bread slices or other items into the toasting slots.
3. Adjust the browning level using the shade selector dial located on the side of the toaster. Settings range from 1 (lightest) to 4 (darkest).
4. Press the toast lever down until it locks into place. The R2-D2 lights and sounds will activate, indicating the toasting cycle has begun.
5. Once the toasting cycle is complete, the toast will automatically pop up, and the R2-D2 sounds will activate again.



Image: A hand adjusting the browning control dial on the side of the R2-D2 toaster, demonstrating the shade selection feature.

## 4.2. Bagel Function

The Bagel function is designed to toast the cut side of bagels while gently warming the outer side.

1. Insert bagel halves into the wide toasting slots with the cut side facing inwards.
2. Select your desired browning level using the shade selector dial.
3. Press the toast lever down.
4. Press the **Bagel** button. The indicator light on the button will illuminate.
5. The toaster will complete the cycle, and the bagel will pop up when done.

## 4.3. Cancel Function

To stop the toasting cycle at any time, press the **Cancel** button. The toast lever will immediately release, and the toast will pop up.

## 4.4. R2-D2 Sound and Light Features

The toaster is equipped with integrated R2-D2 sounds and lights. These features activate in a 10-second sequence when the toast lever is pressed down to start the toasting cycle and again when the toast pops up, signaling the completion of the cycle. The holographic projector illuminates the toaster body during toasting.

## 5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. **Always unplug the toaster** from the power outlet and allow it to cool completely before cleaning.
2. **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the finish.
3. **Crumb Tray:**
  - Locate the removable crumb tray at the bottom of the toaster.
  - Slide the tray out to remove accumulated crumbs.
  - Discard crumbs and wipe the tray clean with a damp cloth. Dry thoroughly before reinserting.
  - Ensure the crumb tray is fully inserted before using the toaster.
4. **Do not immerse the toaster in water or any other liquid.**
5. Do not use metal objects to clean the inside of the toaster, as this can damage heating elements or cause electric shock.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet malfunction; toast lever not fully depressed.	Ensure the power cord is securely plugged into a working outlet. Press the toast lever down until it locks.
Toast is too light or too dark.	Shade selector dial set incorrectly.	Adjust the shade selector dial to a higher setting for darker toast or a lower setting for lighter toast.
Food is stuck in the toaster.	Oversized food item; food shifted during toasting.	<b>Unplug the toaster.</b> Allow it to cool. Carefully remove the food using non-metallic utensils. Never use metal.
R2-D2 sounds/lights not working.	Malfunction; feature disabled (not applicable for this model).	Ensure the toaster is plugged in and the toast lever is fully engaged. If the issue persists, contact customer support.
Uneven toasting.	Inconsistent bread thickness; crumb buildup.	Ensure bread slices are of uniform thickness. Clean the crumb tray regularly.

## 7. SPECIFICATIONS

- **Brand:** Uncanny Brands
- **Model Number:** TSTE-SRW-R2D2
- **Color:** Star Wars R2-D2 (Silver, Blue, White)
- **Material:** Plastic
- **Product Dimensions:** 7.17"D x 10.04"W x 10.43"H
- **Number of Slices:** 2
- **Special Feature:** Variable Browning Control, R2-D2 Sounds and Lights

- **Finish Type:** Glossy
- **Number of Settings:** 4 (Browning levels)
- **Item Weight:** 2.88 pounds
- **UPC:** 840790114286

## 8. WARRANTY AND SUPPORT

---

For warranty information or technical support, please contact Uncanny Brands customer service. Details are typically provided with your product packaging or can be found on the official Uncanny Brands website.

**Website:** [Uncanny Brands Store on Amazon](#)

Please have your model number (TSTE-SRW-R2D2) and proof of purchase available when contacting support.