

[Manuals.plus](#) /

› [GJS Gourmet](#) /

› GJS Gourmet Replacement Thermal Fuse Instruction Manual for T-fal Pressure Cooker Models CY505E51, ERRIE EPC06

GJS Gourmet CY505E51, ERRIE EPC06

GJS Gourmet Replacement Thermal Fuse Instruction Manual

For 6 Quart T-fal Pressure Cooker and Pressure Fryer Models CY505E51, ERRIE EPC06

INTRODUCTION

This manual provides essential information for the safe and effective replacement of the GJS Gourmet thermal fuse in compatible 6-quart T-fal pressure cookers and pressure fryers. Please read all instructions carefully before proceeding with installation.

A thermal fuse is a safety device designed to protect your appliance from overheating. If your pressure cooker's display does not activate when plugged into a power outlet, it is likely that the thermal fuse has blown and requires replacement.

IMPORTANT SAFETY INFORMATION

WARNING: Risk of Electric Shock and Injury.

- Always disconnect the pressure cooker from the power outlet before attempting any maintenance or replacement procedures.
- Working with electricity can be hazardous. It is the user's responsibility to ensure that installation is performed by qualified and experienced professionals, such as licensed electricians, to prevent personal injury or property damage.
- By purchasing and installing this part, you acknowledge and accept full responsibility for any harm or damage resulting from improper installation.
- Do not attempt to bypass or modify the thermal fuse. It is a critical safety component.

COMPATIBILITY

This GJS Gourmet replacement thermal fuse is compatible with the following 6-quart T-fal pressure cooker and pressure fryer models:

- **Model:** CY505E51

- **Model:** ERRIE EPC06

Ensure your appliance model matches one of the listed compatible models before proceeding with installation.

INSTALLATION INSTRUCTIONS

Replacing the thermal fuse can typically be completed in a few minutes. Following proper installation, your pressure cooker may resume normal operation.

1. **Disconnect Power:** Ensure the pressure cooker is unplugged from the electrical outlet.
2. **Access Fuse Compartment:** Carefully locate and open the compartment containing the thermal fuse. This may involve removing screws or panels. Refer to your specific T-fal pressure cooker's original manual for detailed disassembly instructions.
3. **Identify Blown Fuse:** The blown fuse may show visible signs of damage, such as a broken filament or discoloration.
4. **Remove Old Fuse:** Gently disconnect the old thermal fuse from its terminals. Note the orientation for correct installation of the new fuse.
5. **Install New Fuse:** Connect the new GJS Gourmet thermal fuse to the terminals, ensuring a secure connection and correct orientation.
6. **Reassemble:** Carefully reassemble any removed panels or screws.
7. **Test:** Plug the pressure cooker back into the power outlet and test its functionality.

For a visual guide, an installation video can be found by searching for "B07MBRZ621" on YouTube. This video is for reference only and may not depict your exact model.



Image: Two GJS Gourmet replacement thermal fuses, ready for installation.

TROUBLESHOOTING

If your pressure cooker still does not function after replacing the thermal fuse, consider the following:

- **Power Connection:** Ensure the pressure cooker is securely plugged into a working electrical outlet. Test the outlet with another appliance.
- **Fuse Connection:** Verify that the new thermal fuse is correctly and securely connected to its terminals.
- **Other Issues:** If the fuse replacement does not resolve the issue, there may be other internal electrical or mechanical problems with the pressure cooker. In such cases, professional repair is recommended.

SPECIFICATIONS

Brand	GJS Gourmet
Compatible Capacity	6 Quarts
Compatible Models	T-fal CY505E51, ERRIE EPC06
UPC	727040674304
ASIN	B08NH5BB6S

WARRANTY AND SUPPORT

For specific warranty information or further technical support regarding your GJS Gourmet replacement thermal fuse, please contact the seller directly or refer to the original product packaging. This manual does not provide specific warranty details.

For issues related to your T-fal pressure cooker, please consult the appliance's original manufacturer documentation or support channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question