

## Moni 110750

# Moni Ciara Stroller Model 110750 Instruction Manual

Model: 110750

## 1. INTRODUCTION

---

Thank you for choosing the Moni Ciara Stroller. This versatile 2-in-1 system is designed to provide comfort and safety for your child from birth up to approximately three years (maximum 15 kg). It features a convertible bassinet/sport seat, a reversible seating unit, and multiple adjustable positions to adapt to your child's needs. Please read this manual carefully before assembly and use to ensure proper operation and safety.

## 2. IMPORTANT SAFETY INFORMATION

---

- **WARNING:** Never leave your child unattended in the stroller.
- **WARNING:** Ensure all locking devices are engaged before use.
- **WARNING:** Do not use accessories that are not approved by the manufacturer.
- **WARNING:** The stroller is suitable for children from birth up to a maximum weight of 15 kg.
- **WARNING:** Always use the 5-point harness to secure your child.
- **WARNING:** Do not overload the storage basket. Maximum load for the basket is typically 3 kg.
- **WARNING:** Be aware of the risk of open fires and other sources of strong heat near the stroller.
- **WARNING:** Always engage the brake when placing or removing your child from the stroller.
- Regularly check the stroller for loose parts, damaged components, or signs of wear. Discontinue use if any damage is found.
- Keep plastic packaging away from children to avoid suffocation.

## 3. PACKAGE CONTENTS

---

Please check that all components are present in the package:

- Stroller Frame (lightweight aluminum)
- Convertible Bassinet/Sport Seat Unit
- Wheels (2 front, 2 rear)
- Canopy
- Foot Cover for Bassinet
- Changing Bag
- Removable Front Bar
- Instruction Manual



**Figure 3.1:** Included accessories and folded stroller frame. This image shows the foot cover, the changing bag, and the stroller frame in its compact folded state, demonstrating the portability and additional items provided.

## 4. SETUP AND ASSEMBLY

### 4.1 Unfolding the Frame

1. Place the folded stroller frame on a flat surface.
2. Release the folding lock (if present, usually a small clip on the side).
3. Lift the handlebar upwards until the frame clicks into its open position. Ensure all locking mechanisms are securely engaged.

### 4.2 Attaching the Wheels

1. **Rear Wheels:** Push the rear wheels onto the axles until they click into place. Pull gently to ensure they

are secure.

2. **Front Wheels:** Insert the front wheel units into the designated slots on the front of the frame until they click. Verify they are firmly attached.



**Figure 4.1:** Fully assembled Moni Ciara Stroller in bassinet mode. This image displays the stroller with its frame, wheels, and bassinet unit attached, ready for use.

#### 4.3 Attaching the Seat Unit (Bassinet/Sport Seat)

1. Align the connectors on the seat unit with the corresponding slots on the stroller frame.
2. Push down firmly until you hear a click, indicating the seat is securely locked.
3. To reverse the seat unit (forward or rear-facing), press the release buttons on both sides of the seat unit, lift it off, rotate, and reattach.



**Figure 4.2:** Moni Ciara Stroller demonstrating different seat recline positions. This image illustrates how the seat unit can be adjusted from an upright sitting position to a more reclined or lying position, showcasing its versatility.

#### **4.4 Converting Bassinet to Sport Seat**

The bassinet unit can be transformed into a sport seat. Locate the straps and buckles underneath the bassinet. Adjust these straps to reshape the bassinet into a seated position. Ensure all buckles are securely fastened for the sport seat configuration.

### **5. OPERATING INSTRUCTIONS**

---

#### **5.1 Adjusting the Seat Recline**

The seat offers three recline positions (sitting, semi-reclined, lying). To adjust, locate the recline mechanism (usually a lever or button) at the back of the seat unit. Press the lever/button and move the seat to the desired position. Ensure it locks securely.

#### **5.2 Using the 5-Point Safety Harness**

1. Place your child in the seat.
2. Bring the shoulder straps over your child's shoulders and the waist straps around their hips.
3. Insert the two buckle prongs into the central buckle until they click.
4. Adjust the straps for a snug fit, ensuring your child is secure but comfortable. The shoulder straps have soft pads for comfort.
5. To release, press the button on the central buckle.

### **5.3 Adjusting the Canopy**

The canopy can be adjusted by pushing or pulling it to the desired position. It features an extendable visor for additional sun protection. A mesh insert on the seat unit ensures optimal air circulation, especially when the canopy is extended.

### **5.4 Engaging the Brakes**

To engage the brake, press down firmly on the brake pedal located on the rear axle until the stroller is stationary. To release, lift the pedal upwards. Always engage the brake when the stroller is parked or when placing/removing your child.

### **5.5 Swiveling and Locking Front Wheels**

The front wheels can swivel for greater maneuverability or be locked for stability on uneven terrain. To lock, push down the lever above each front wheel. To unlock, lift the lever up.

### **5.6 Folding the Stroller**

1. Ensure the seat unit is in an upright or semi-reclined position (refer to specific folding instructions for your model, usually involves a specific seat orientation).
2. Locate the folding mechanisms, typically levers or buttons on the handlebar or sides of the frame.
3. Activate the folding mechanisms and push the handlebar downwards, allowing the frame to collapse.
4. Secure the folding lock to keep the stroller in its compact folded state.



**Figure 5.1:** Moni Ciara Stroller in its compact folded configuration. This image demonstrates the stroller's ability to fold down for easy storage and transport.

## 6. MAINTENANCE AND CARE

- **Cleaning the Fabric:** The fabric parts can be cleaned with a damp cloth and mild soap. Do not use harsh detergents or abrasive cleaners. Allow to air dry completely.
- **Cleaning the Frame:** Wipe the aluminum frame with a damp cloth. Dry thoroughly to prevent rust.
- **Wheel Maintenance:** Regularly check the wheels for debris and clean them. Lubricate moving parts (axles, swivel mechanisms) periodically with a silicone-based lubricant.
- **Storage:** Store the stroller in a dry, well-ventilated area, away from direct sunlight and extreme temperatures.
- **Regular Checks:** Periodically inspect all screws, rivets, and locking mechanisms to ensure they are secure. Check for any signs of wear or damage to the harness, fabric, or frame.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stroller does not unfold/fold easily.	Folding lock engaged; mechanism jammed; seat not in correct position.	Ensure folding lock is released. Check for obstructions. Refer to folding instructions for correct seat orientation.

Problem	Possible Cause	Solution
Wheels squeak or are difficult to turn.	Dirt/debris in wheel mechanism; lack of lubrication.	Clean wheels and axles. Apply silicone-based lubricant to moving parts.
Brake not engaging properly.	Debris in brake mechanism; worn brake components.	Clear any debris from the brake mechanism. If problem persists, contact customer support.
Seat unit feels loose.	Not properly attached to the frame.	Ensure the seat unit is fully clicked into place on both sides.

## 8. SPECIFICATIONS

---

**Brand:** Moni

**Model:** Ciara (110750)

**Color:** Blau Schwarz (Blue Black)

**Frame Material:** Aluminum

**Fabric Material:** 100% Polyester

**Age Range:** Newborns (from birth)

**Maximum Recommended Weight:** 15 kg

**Harness Type:** Five-point

**Item Weight:** 10.5 kg (10500 Grams)

**Number of Seats:** 1

**Country of Origin:** China

## 9. WARRANTY AND SUPPORT

---

For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. For technical support, spare parts, or any questions regarding your Moni Ciara Stroller, please contact Moni customer service through their official website or the contact details provided with your product.

Keep your proof of purchase for any warranty claims.