

BELLA 17262

BELLA 2-Slice Stainless Steel Toaster Instruction Manual

Model: 17262

[Safety Information](#)[Setup](#)[Operation](#)[Maintenance](#)[Troubleshooting](#)[Specifications](#)[Warranty &
Support](#)

IMPORTANT SAFETY INFORMATION

Read all instructions before using this appliance. Basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.

- Do not operate unattended.
- This appliance is for household use only.

SETUP AND FIRST USE

Unpacking

Carefully remove the toaster from its packaging. Remove all packaging materials, labels, and stickers. Ensure all components are present.

Initial Burn-Off

Before first use, operate the toaster without bread for at least 3 cycles on the highest setting (Level 6) in a well-ventilated area. This will burn off any manufacturing residues and odors. Some smoke and odor may be present during this process; this is normal.

Note: Do not insert bread during the initial burn-off cycles.



The BELLA 2-Slice Stainless Steel Toaster, ready for setup.

OPERATING INSTRUCTIONS

Placing Bread

Place up to two slices of bread, bagels, or other items into the extra-wide slots. The self-centering guides will adjust to hold the bread in place.




Extra-wide slots Fit a variety of breads—thick or thin

Top view of the toaster showing bread placed in the extra-wide slots.

Selecting Browning Level


Turn the browning control knob to your desired shade setting, from 1 (lightest) to 6 (darkest).

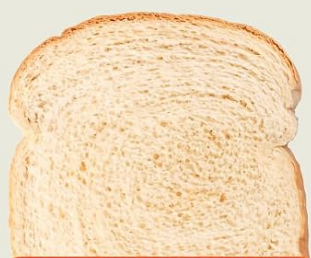

Level 1




Level 2

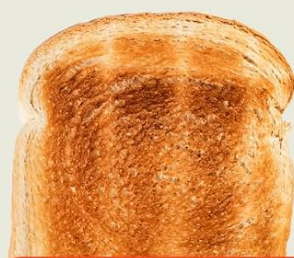

Level 3



 Level 4

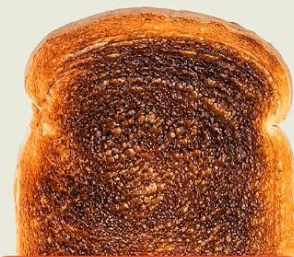

Level 5



Level 6

6 shade settings

Visual guide for the six browning shade settings.

Starting Toasting

Press the carriage lever down until it locks into place. The toasting cycle will begin. The toaster features an auto-jam and auto-shut off safety function, which will stop the cycle if bread gets stuck.

To stop the toasting cycle at any time, press the **CANCEL** button.

The high-lift lever allows for easy removal of smaller items once toasting is complete.

Your browser does not support the video tag.

Video demonstrating the operation of the BELLA 2-Slice Toaster, including placing bread and using the lever.

MAINTENANCE AND CLEANING

Cleaning the Crumb Tray

To clean the crumb tray, first ensure the toaster is unplugged and completely cool. Slide out the removable crumb tray located at the bottom of the toaster. Discard crumbs and wipe the tray clean with a damp cloth. Reinsert the tray securely.



Easy access

High-lift lever lifts even small slices

Clean fast

Crumb tray slides out for quick cleanup

Image showing the removable crumb tray being pulled out for cleaning.

Your browser does not support the video tag.

Video demonstrating how to clean the crumb tray of the toaster.

Exterior Cleaning

Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as these can scratch the stainless steel finish. Ensure the toaster is completely dry before plugging it back in.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet malfunction; circuit breaker tripped.	Ensure the toaster is securely plugged into a working outlet. Check your circuit breaker.

Problem	Possible Cause	Solution
Bread is stuck in the slots.	Oversized food item; mechanical jam.	Unplug the toaster. Carefully remove the bread using non-metallic tongs. Do not use metal utensils.
Uneven toasting.	Inconsistent bread thickness; crumb buildup.	Ensure bread slices are of similar thickness. Clean the crumb tray regularly.
Smoke or burning smell.	Food stuck; excessive crumbs; initial burn-off.	Immediately press CANCEL and unplug. Remove any stuck food or clean crumb tray. If it's the first use, this is normal during burn-off.

PRODUCT SPECIFICATIONS

Brand: BELLA

Model Number: 17262

Color: Stainless Steel

Material: Plastic (housing), Stainless Steel (exterior)

Product Dimensions (D x W x H): 5.7" x 9.76" x 6.53"

Item Weight: 2.4 pounds

Wattage: 750 watts

Voltage: 110 volts

Slot Count: 2

Browning Settings: 6 levels

Special Features: Anti-Jam Protection, Automatic Shut-Off, Cancel Function, High Lift Carriage, Removable Crumb Tray, Self Centering Rack, Variable Browning Control

UPC: 829486172625



Dimensions of the BELLÀ 2-Slice Toaster.

WARRANTY AND SUPPORT

This BELLÀ toaster comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the duration of the warranty and how to make a claim.

For technical support, replacement parts, or service inquiries, please contact BELLÀ customer service. Contact information can typically be found in the product packaging or on the official BELLÀ website.

Online Resources: For additional information, FAQs, and product registration, visit the official BELLÀ website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question